

FIRST USE OF THE APPLIANCE:

- After removing the all the packing.
- Fill the kettle with water. Do not overfill from the MAX water level indicator.
- Switch the kettle. The control lamp on the water level indicator shows that the water is being boiled after boiling the kettle switch off automatically.
- For the first time using the kettle, the water should be boiling twice in it without any additives

IMPORTANT SAFETY INSTRUCTIONS:

When using electrical appliance, the following basic safety precautions should always be followed:

1. Read all the Instructions before using.
2. The Appliance is not intended for commercial use.
3. Do not touch the hot surfaces, use handles.
4. Use only water for filling.
5. Before connecting the appliance to the power supply please check the voltage indicated on the appliances corresponds with the voltage in your homely this is not the case do not use the appliance and contact your dealer.
6. The water level should preferably be kept between the MIN and MAX level marks.
7. The power cord should reach the base unit from the socket without any straining in connection and leave sufficient space all around the appliance.
8. Always ensure that the lid is closed before using.
9. The exterior of the kettle must not come wet.
10. Always remove the plug from the socket
 - After use
 - In case of any malfunction
 - Before cleaning
11. Do not use the kettle with damaged cord/plug or after the appliance malfunctions.
12. Keep the kettle and wire away from heat, direct sun light, moisture, sharp edges.
13. Do not use the kettle with wet or moist hands.
14. If the kettle become moist or wet, remove the mains plug from the socket immediately.
15. The kettle is only to be used with the stand provided.
16. Warning: if the kettles overfilled, boiling water may come out.
17. Do not leave the power cord overhang the edge of the work top where children can reach.
18. Never allow a child to operate the appliance, if at all children should be supervised to ensure that they do not plat with appliance.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless it is done under proper supervision.

INSTRUCTION FOR USE

1. Fill the kettle with water up to maximum water Level scale.
2. Switch the kettle. The control lamp on the water level indicator shows that the water

is being boiled after boiling the kettle switch off automatically.

4. Plug in the socket properly and check the indicator light is on.

5. Note that the outer surface is very hot so extreme care must be taken.

SAFETY CUT OUT

1. This kettle is equipped with a safety cut out to protect the appliances from damage in case of inappropriate use. If the kettle is operated without water or if all the water evaporated, the safety cut out will automatically switch the heating element.

2. In such a case, remove the plug from the wall socket immediately and refill the Kettle only after it cool down.

CLEANING AND CARE

1. Cleaning is recommended after every use.

2. Firstly, unplug the appliance and wait for the kettle to cool.

3. Wipe the outer surface with a soft/ damp cloth without additives.

4. Do not immerse the base or the kettle in any liquid.

WARRANTY AND SERVICES

Please go through the terms and conditions as mentioned in the warranty card with adhere to all the safety points as mentioned in this instruction manual. Loss or breakage of Handle clip is not covered under Warranty.

NOTE:

- PRODUCTS AND PARTS ARE INDICATIVE ONLY, THE ACTUAL PRODUCT MAY DIFFER.
- THE COMPANY RESERVES RIGHTS TO CHANGE THE SPECIFICATION OF ITS MODELS AT ANY TIME.
- KEEP INSTRUCTION MANUAL SAFELY FOR FUTURE RECOMMENDATIONS.