

Carbon Heater INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



Model: CGCH10B

This instruction manual contains important information
& recommendations that we would ask you to comply
With to obtain best results from your products.

DEAR CUSTOMER,

We thank you very much for having purchased one product of ours. We kindly ask you to read and save this instruction manual.

RADIANT SUN SHINY HEATER

Brief Instruction

Sun heaters using the carbon tube heating which have a high effective. This kind of heater can use in a big room, even using in a room, which have a bad condition, it also can make a warm circumstance.

Features:

- 1. Carbon Heating Element.
- 2. Oscillation with 60 Degree.
- 3. With Tip-over Switch.

Specification:

Model	Power	Voltage	Frequency
CGCH10B	1000W	220-240V~	50-60Hz

Instructions for Use:

- 1. Check the blew points before using the products.
 - Whether the halogen tube and cord are broken.
 - Whether the socket well placed.
 - Whether the plug can meet the socket.
- 2. Put the machine on a regularity floor otherwise the machine cannot work, so please make sure the machine on a properly place.
- 3. Power and setting:

Firstly, take the plug into the sockets, setting a power according to room temperature. Usually choose a high power at beginning.

When the room is warm, turn a low power.
- 4. Using the oscillation automatically, make a big range heating, the timing function can choose a heating time.
- 5. When prepare to stop the machine, turn off the switch and pull the plug out of socket.
- 6. When moving the machine, also need turn off.

Maintenance:

- 1. Before undertaking any maintenance operation, disconnect the appliance from the power supply.
- 2. This appliance does not require any particular maintenance. For cleaning it is recommended to use a soft moist rag and neutral Detergent. Do not use abrasive cloth or devices that could affect the outward appearance of the appliance. Check that the parts exposed to the heat rays and the ventilation is free of dust and dirt.
- 3. In case the appliance was broke down, disconnect the appliance from the power and

contact with authorized service center. Always request the use of original spare parts.

NOTE: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The instructions shall state that the heater must not be located immediately below a socket outlet.

Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

IMPORTANT SAFEGUARDS

- Before connecting and switching on the appliance, ensure that the voltage indicated on the units base plate corresponds to the mains voltage in your home.
- Read the instructions carefully, in conjunction with the illustrations, before using the appliance for the first time.
- Always ensure that the unit is connected to an earthed mains outlet.
- Do not connect the appliance to an extension cord or multiple plug outlets.
- Do not leave your home while the appliance is in operation; ensure that the unit is switched off. Always unplug the appliance when not in use. Do not pull on the cord to unplug the unit.
- Ensure that the appliance is switched off and unplugged before cleaning and allow the appliance to cool down before handling.
- Keep combustible materials (such as furniture, cushions, bedding, paper etc.) at least 100cm away from the heater.
- Do not hang anything in front of or on the heater.
- Do not cover the unit. This imposes the risk of overheating.
- The heater is not designed for use as the main source of heating. Use the appliance only for its intended use, i.e., as a radiator for domestic use and an extra source of heating in the home/office.
- The manufacturer does not accept responsibility for any eventual damages or injury arising from misuse.
- To avoid the risk of fire and electrical shock, select a safe place for the heater (refer section: Safe Positioning).
- Do not insert any objects in to the heater.

- Ensure that children do not play with or operate the appliance. Elderly people and children should be supervised should they be in the vicinity of the appliance.
- The front grille gets hot during usage. Do not touch the grille while the heater is switched on, nor immediately after switching off the heater since the grille requires time to cool down.
- Only handle the heater with dry hands.
- Do not expose the appliance to atmospheric conditions (e.g., rain, sun etc.)
- Always ensure that the power cord is unwound properly to prevent overheating.
- If the cord of this appliance is damaged, discontinue use of the product and contact the manufacturer for further instructions. The cord must only be replaced by a service representative of the manufacturer, since special tools and/or parts are required.

**A Quality Product
Of**

CG CHAUDHARY®
GROUP
Touching life everyday



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.