

SOUNDBAR SPEAKER INSTRUCTION MANUAL

Read this manual carefully before operation
Pictures in this manual are for reference only, the product in kind prevail.



Model: CGMSBW1

This instruction manual contains important information
& recommendations that we would ask you to comply
with to obtain best results from your products.

CG CHAUDHARY GROUP
Touching life everyday

**A Quality Product
Of**

CG CHAUDHARY GROUP
Touching life everyday



Visit us at: www.meridia.cginspiringlife.com



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.
It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.
Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: www.cginspiringlife.com

Specifications

Output power: 120W (RMS)
Driver Unist: 5090x4+8"
Frequency response: Soundbar: 140Hz-20KHz
subwoofer: 40Hz-150Hz
Separation: ≥ 40 dB
S / N: ≥ 55 dB
Distortion: $\leq 1\%$ (1K, 1W)
Power supply: $\sim 230V/50Hz$
Dimensions: soundbar: L960W83*H66MM (mm)
subwoofer: L140xW260xH398 (mm)

 
Features:

- Quality Soundbar with built-in amplifier
- Full audio spectrum performances, ideal for your favourite entertainment from Mp3, Mp4, CD/DVD movies and digital playbacks.
- Quality materials : Only the best components to recreate sound faithfully across all frequencies.

Package contents

Soundbar	1 pc
Subwoofer	1 pc
Remote control	1 pc
User manual	1 pc
Audio input cord	1 pc

Front panel

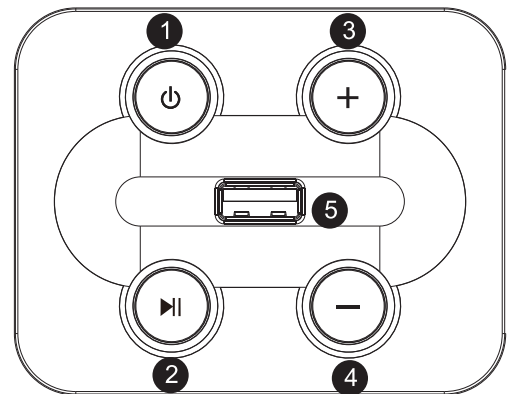


1. The Speaker system is in " " (stand by) mode when power on, with the LED Flashing. Please press the " " to select appropriate source. Keeping the " " key pressed for long will put it back in " " (stand by) mode.
- * You can toggle through the input modes by pressing the " " key. "BT" denotes Bluetooth mode. "HD" denotes HDMI ARC mode. "OPT" denotes mode. "AU" denotes Audio mode. "USB" denotes USB card mode.
2. Play/Pause the songs.
3. Long press for volume increase/short press for next track.
4. Long press for volume decrease/short press for prev track.
5. USB Slot.



***Do NOT use USB for charging devices which can cause damage to your external devices. thank you.

 How to use the remote control

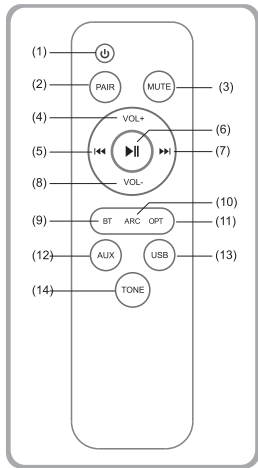

1. ⏻
2. PAIR
3. MUTE
4. VOL+
5. ⏮
6. ▶||
7. ⏭
8. VOL-
9. BT
10. ARC
11. OPT
12. AUX
13. USB
14. TONE

1. ⏻: Power ON or Standby modes.

2. PAIR:

- a. Press this key to change frequency point. Long press for 3 seconds to enter the switching frequency point, LED display shows the current frequency point of CHxx, and short press to switch frequency point.
- b. Match ID code : Continuously short press this key for more than 5 times, LED display shows 1d and flash to enter the code matching status, at this time, the wireless subwoofer needs to be cut off and restart, LED red and blue light starts to flash, when the blue light keeps on, the codes match successfully.

3. MUTE: Turn volume off. Depress again to activate the sound.

4. VOL+: To increase the Volume by short or long press of VOL+.

5. ⏮: Play the previous song by pressing "⏮" but not in Audio mode.

NO.3

6. ▶||: Play/pause in USB/BT mode and MUTE in Audio mode.

7. ⏭: Play next song by pressing "⏭", but not in Audio mode.

8. VOL-: To decrease the Volume by short or long press of VOL-

9. BT: Bluetooth mode.

Press "BT" button on the remote to convert to Bluetooth input mode, LED flash fast to search the Bluetooth device. Turn on your mobile Bluetooth device and search the device name " CGSBW1 ", paired them well.

When you have successfully paired your mobile to the speaker system, LED flashes slowly. When starting to play your mobile music, LED stopped flash. The functions as "PREVIOUS/NEXT", "PLAY/PAUSE", can operate via the front panel. On BT mode, when connecting with mobile, press "▶||" for 3 seconds, bluetooth function can be force-disconnected .

10. ARC: HDMI ARC mode.

11. OPT: Optical mode.

 
12. AUX: Audio input mode.

13. USB: USB mode.

14. TONE: Press it, LED flashes, it enter into treble adjustment status, can press Vol+/Vol- adjust treble level -6(min)~+6(max). Press it again, LED flashed 2 times, it enter into bass adjustment status, can press Vol+/Vol- adjust bass level -6(min)~+6(max).

Rear panel


Soundbar

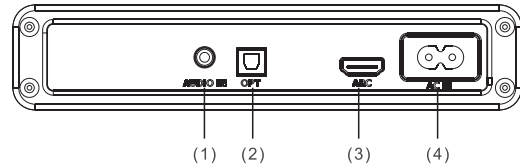

NO.4

1. Input Connect to sound sources such as computer, CD player, Mp3, etc.
2. Optical Input.
3. HDMI ARC Input.
4. AC Power cord.

 Subwoofer

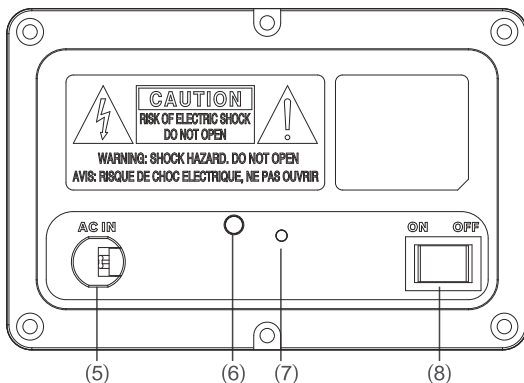

5. AC IN: AC Power cord

6. RESET: Press and hold the button at the back plate of subwoofer, and connect to power at the same time, wait for 5 seconds, then stop pressing, Subwoofer will be reset.


7. LED: Turn on the red light long, connected successfully long blue light

8. Power ON/OFF

Switch for turning on/off the unit.

NO.5

 In use please pay attention to the following items:

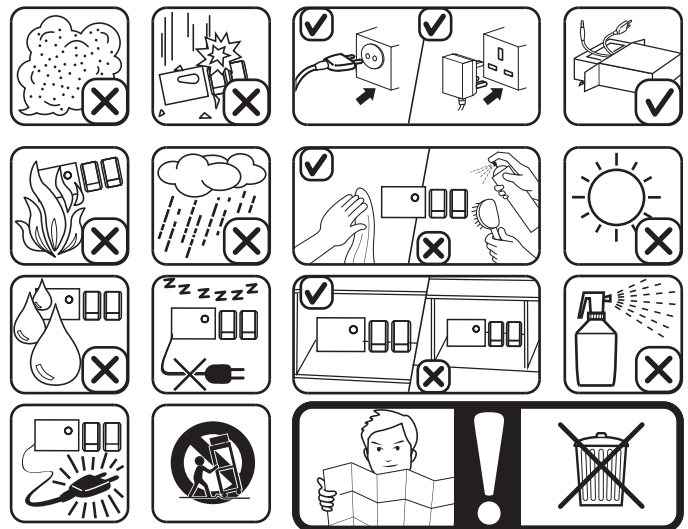

*if the remote control cannot function, it is because the battery of remote control has been used up. thank you.

NO.6