

SOUNDBAR SPEAKER INSTRUCTION MANUAL

Read this manual carefully before operation
Pictures in this manual are for reference only, the product in kind prevail.



Model: CGMSBW2

This instruction manual contains important information
& recommendations that we would ask you to comply
with to obtain best results from your products.

CG CHAUDHARY GROUP
Touching life everyday

A Quality Product
Of

CG CHAUDHARY GROUP
Touching life everyday



Visit us at: www.meridia.cginspiringlife.com



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.
It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.
Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: www.cginspiringlife.com

Specifications

Output power: 60W (RMS)
Driver Unit: 2.25" x 2 + 5.25" x 1
Frequency response: 150Hz-20KHz
Separation: ≥45 dB
S / N: ≥60 dB
Distortion: ≤1% (1K, 1W)
Power supply: 220-240V~, 50Hz
Dimensions: soundbar: L600 x H71 x D80(mm)
subwoofer: L170 x H302 x D218(mm)

 
Features:

- Quality Soundbar with built-in amplifier
- Full audio spectrum performances, ideal for your favourite entertainment from Mp3, Mp4, CD/DVD movies and digital playbacks.
- Quality materials : Only the best components to recreate sound faithfully across all frequencies.

Package contents

Soundbar	1 pc
Subwoofer	1 pc
Remote control	1 pc
User manual	1 pc
Audio input cord	1 pc

Button panel

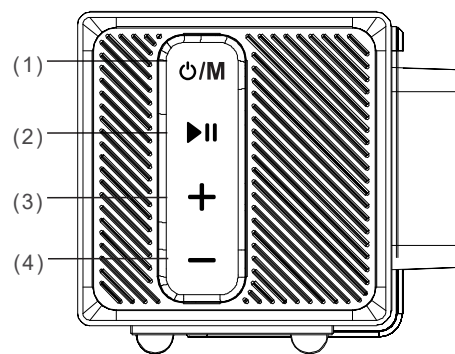

1. The Speaker system is in "⏻" (stand by) mode when power on, with the LED Flashing. Please press the "⏻ / M" to select appropriate source. Keeping the "⏻ / M" key pressed for long will put it back in "⏻" (stand by) mode.

** You can toggle through the input modes by pressing the "⏻ / M" key.

 
"bt" Denotes Bluetooth Mode. "HD" denotes ARC Mode.

"OPT" denotes Optical Mode. "AU" denotes AUX Mode.

"USB" denotes USB card mode.

2. Play/Pause the songs.
3. Long press for volume increase / short press for next track.
4. Long press for volume decrease / short press for prev track.

How to use the remote control

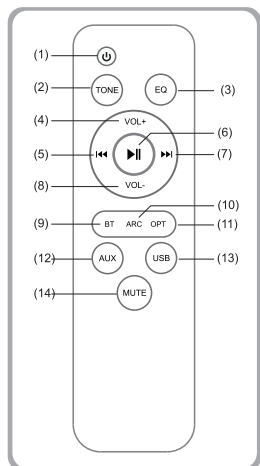

1. ⏻
2. TONE
3. EQ
4. VOL+
5. ⏮
6. ⏸
7. ⏭
8. VOL-
9. BT
10. ARC
11. OPT
12. AUX
13. USB
14. MUTE

1. ⏻: Power ON or Standby modes.
2. TONE: you can choose "TREBLE" and "BASS" "VOL+/-" means you can increase or decrease volume of "TREBLE" or "BASS".
3. EQ: NORMAL, CLASSIC, POP, ROCK, JAZZ.
4. VOL+: To increase the Volume by short or long press of VOL+.
5. ⏮: Play the previous song by pressing "⏮" but not in AUX mode.
6. ⏸: Play/pause in USB/BT mode and MUTE in AUX mode.
7. ⏭: Play next song by pressing "⏭", but not in AUX mode.
8. VOL-: To decrease the Volume by short or long press of VOL-.
9. BT: Bluetooth mode selection.
10. ARC: ARC mode selection.
11. OPT: OPTICAL mode selection.
12. AUX: AUX input mode selection.
13. USB: USB mode selection.
14. MUTE: Turn volume off. Depress again to activate the sound.

NO.3


BT Pairing Method

Press "BT" button on the remote to convert to Bluetooth input mode, LED display right bottom start to flash fast to search the Bluetooth device. Turn on your mobile Bluetooth device and search the devicename "CGSBW2", paired them well. When you have successfully paired your mobile to the speaker system, the LED right bottom flashes slowly. When starting to play your mobile music, the LED dot on the right bottom is on. The functions as "PREVIOUS/NEXT", "PLAY/PAUSE", can operate via the front panel. On BT mode, when connecting with mobile, press "⏭" for 3 seconds, bluetooth function can be force-disconnected.

NO.4


Rear panel

 Soundbar

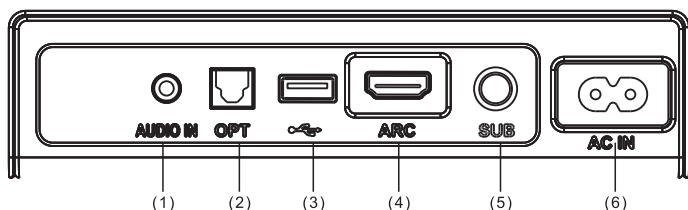

1. Input Connect to sound sources such as computer, CD player, MP3, etc
2. Optical Input
3. USB Input
4. ARC Input
5. Subwoofer Input
6. AC Power cord

 In use please pay attention to the following items:

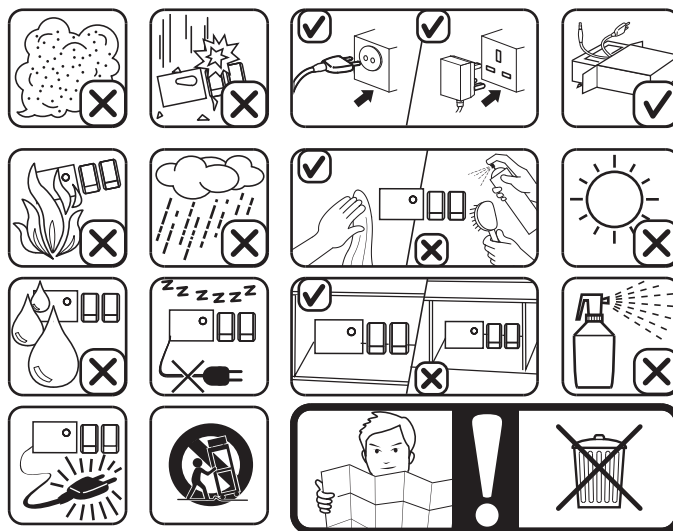

*If the remote control cannot function, it is because the battery of remote control has been used up. thank you.

NO.5

NO.6