 




Tower Fan INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.

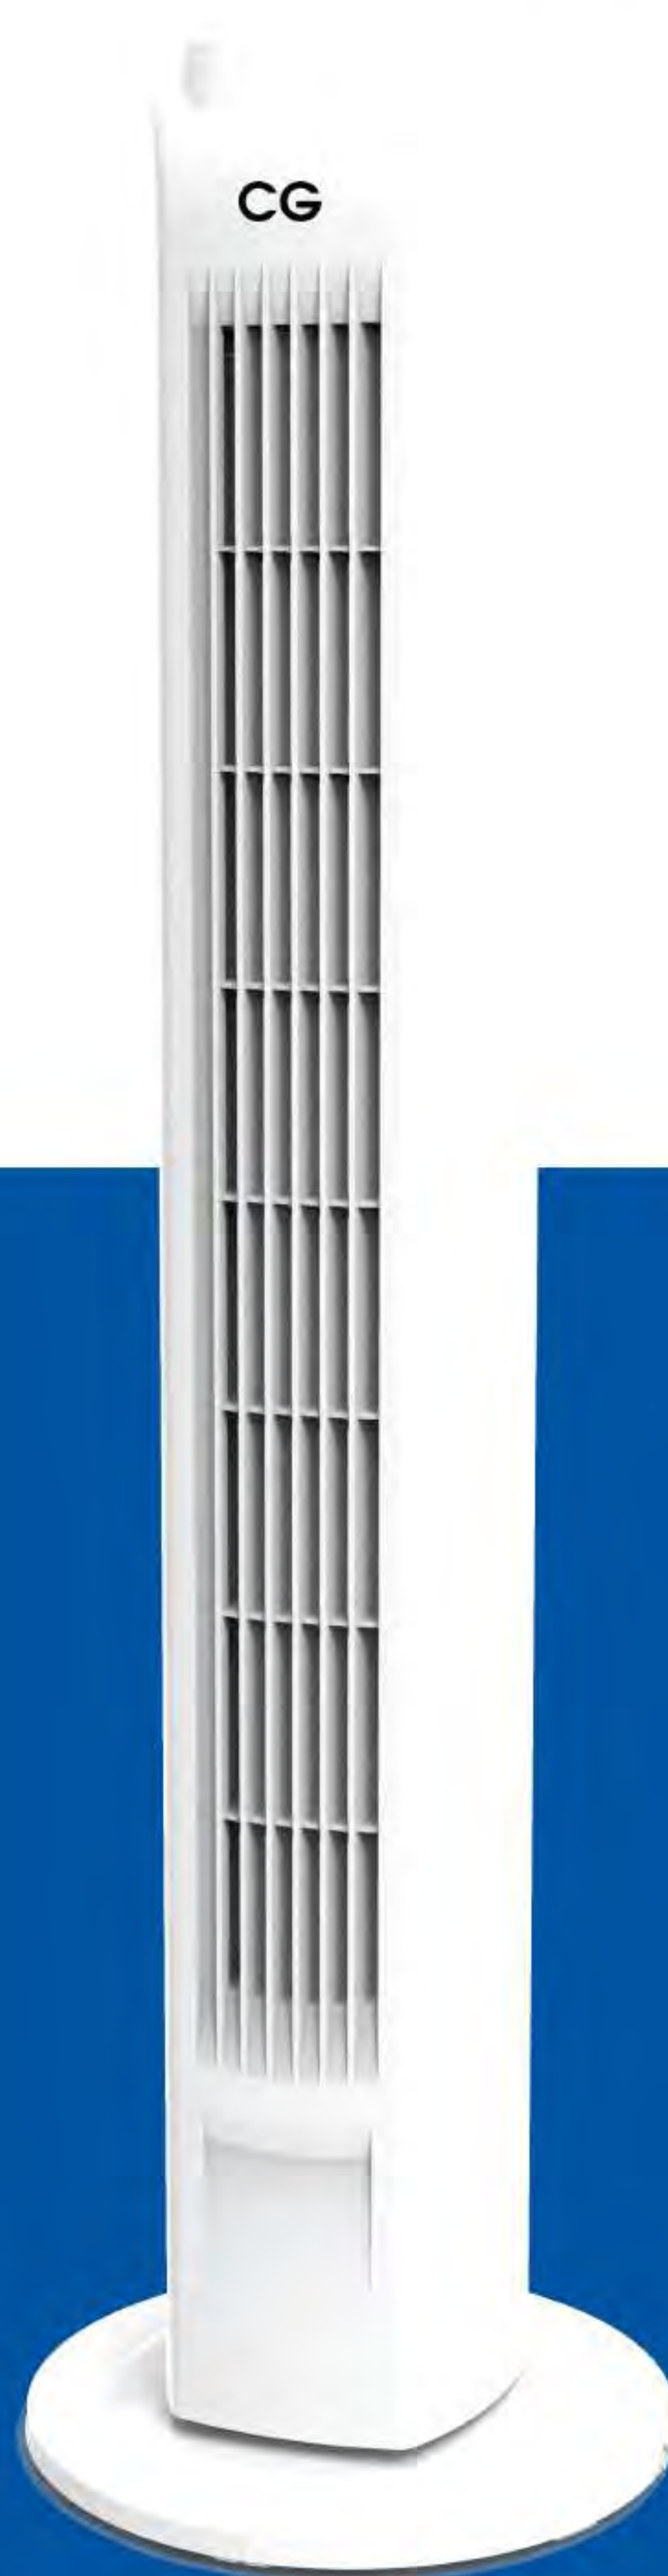

Model: CGTF65R

**This instruction manual contains important information
& recommendations that we would ask you to comply
With to obtain best results from your products.**

**CG CHAUDHARY[®]
GROUP**
Touching life everyday

PLEASE READ COMPLETELY BEFORE OPERATING

READ AND SAVE THESE INSTRUCTIONS

WARNING! To reduce the risk of fire or electrical shock, do not use this fan with any solid-state speed control device.

To reduce the risk of fire or electrical shock, do not expose to water or rain.

Caution: read and follow all instructions before operating fan. Do not use fan if any part is damaged or missing.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance
- Use fan only for intended use, as described in instruction manual.
- To protect against electrical shock, do not immerse unit, plug, or cord in water or spray with liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
- Never insert fingers, pencils or any other objects through the grille when fan is running.
- Disconnect fan before cleaning.
- Make sure fan is on a stable surface when operating to avoid chance of overturning.
- Do not use fan in a window. Rain may cause an electrical hazard.
- Do not operate in the presence of explosive and/or flammable fumes.
- Do not place fan or any parts near an open flame, cooking or other heating appliances.
- Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner.
- Do not let cord hang over table or counter or touch hot surfaces.
- To disconnect, grip plug and pull from wall outlet. Never yank on cord.
- Always use on a dry surface.
- This product is intended for household use only and not for commercial or industrial use.
- Do not use fan near curtains, plants, window treatments, etc.

 
POWER CORD SAFETY TIPS

1. Never pull or yank on the cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the power cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the power cord replaced. Please return it to our Service Department or to an authorized service representative.
5. Never wrap the cord tightly around the appliance, as this could cause the appliance to fray and break.

DO NOT OPERATE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE, OR WORKS INTERMITTENTLY AND STOPS WORKING.

IMPORTANT: During the first few minutes of initial use, a slight odor may be noticeable. This is normal and will quickly disappear.



NAME OF PARTS

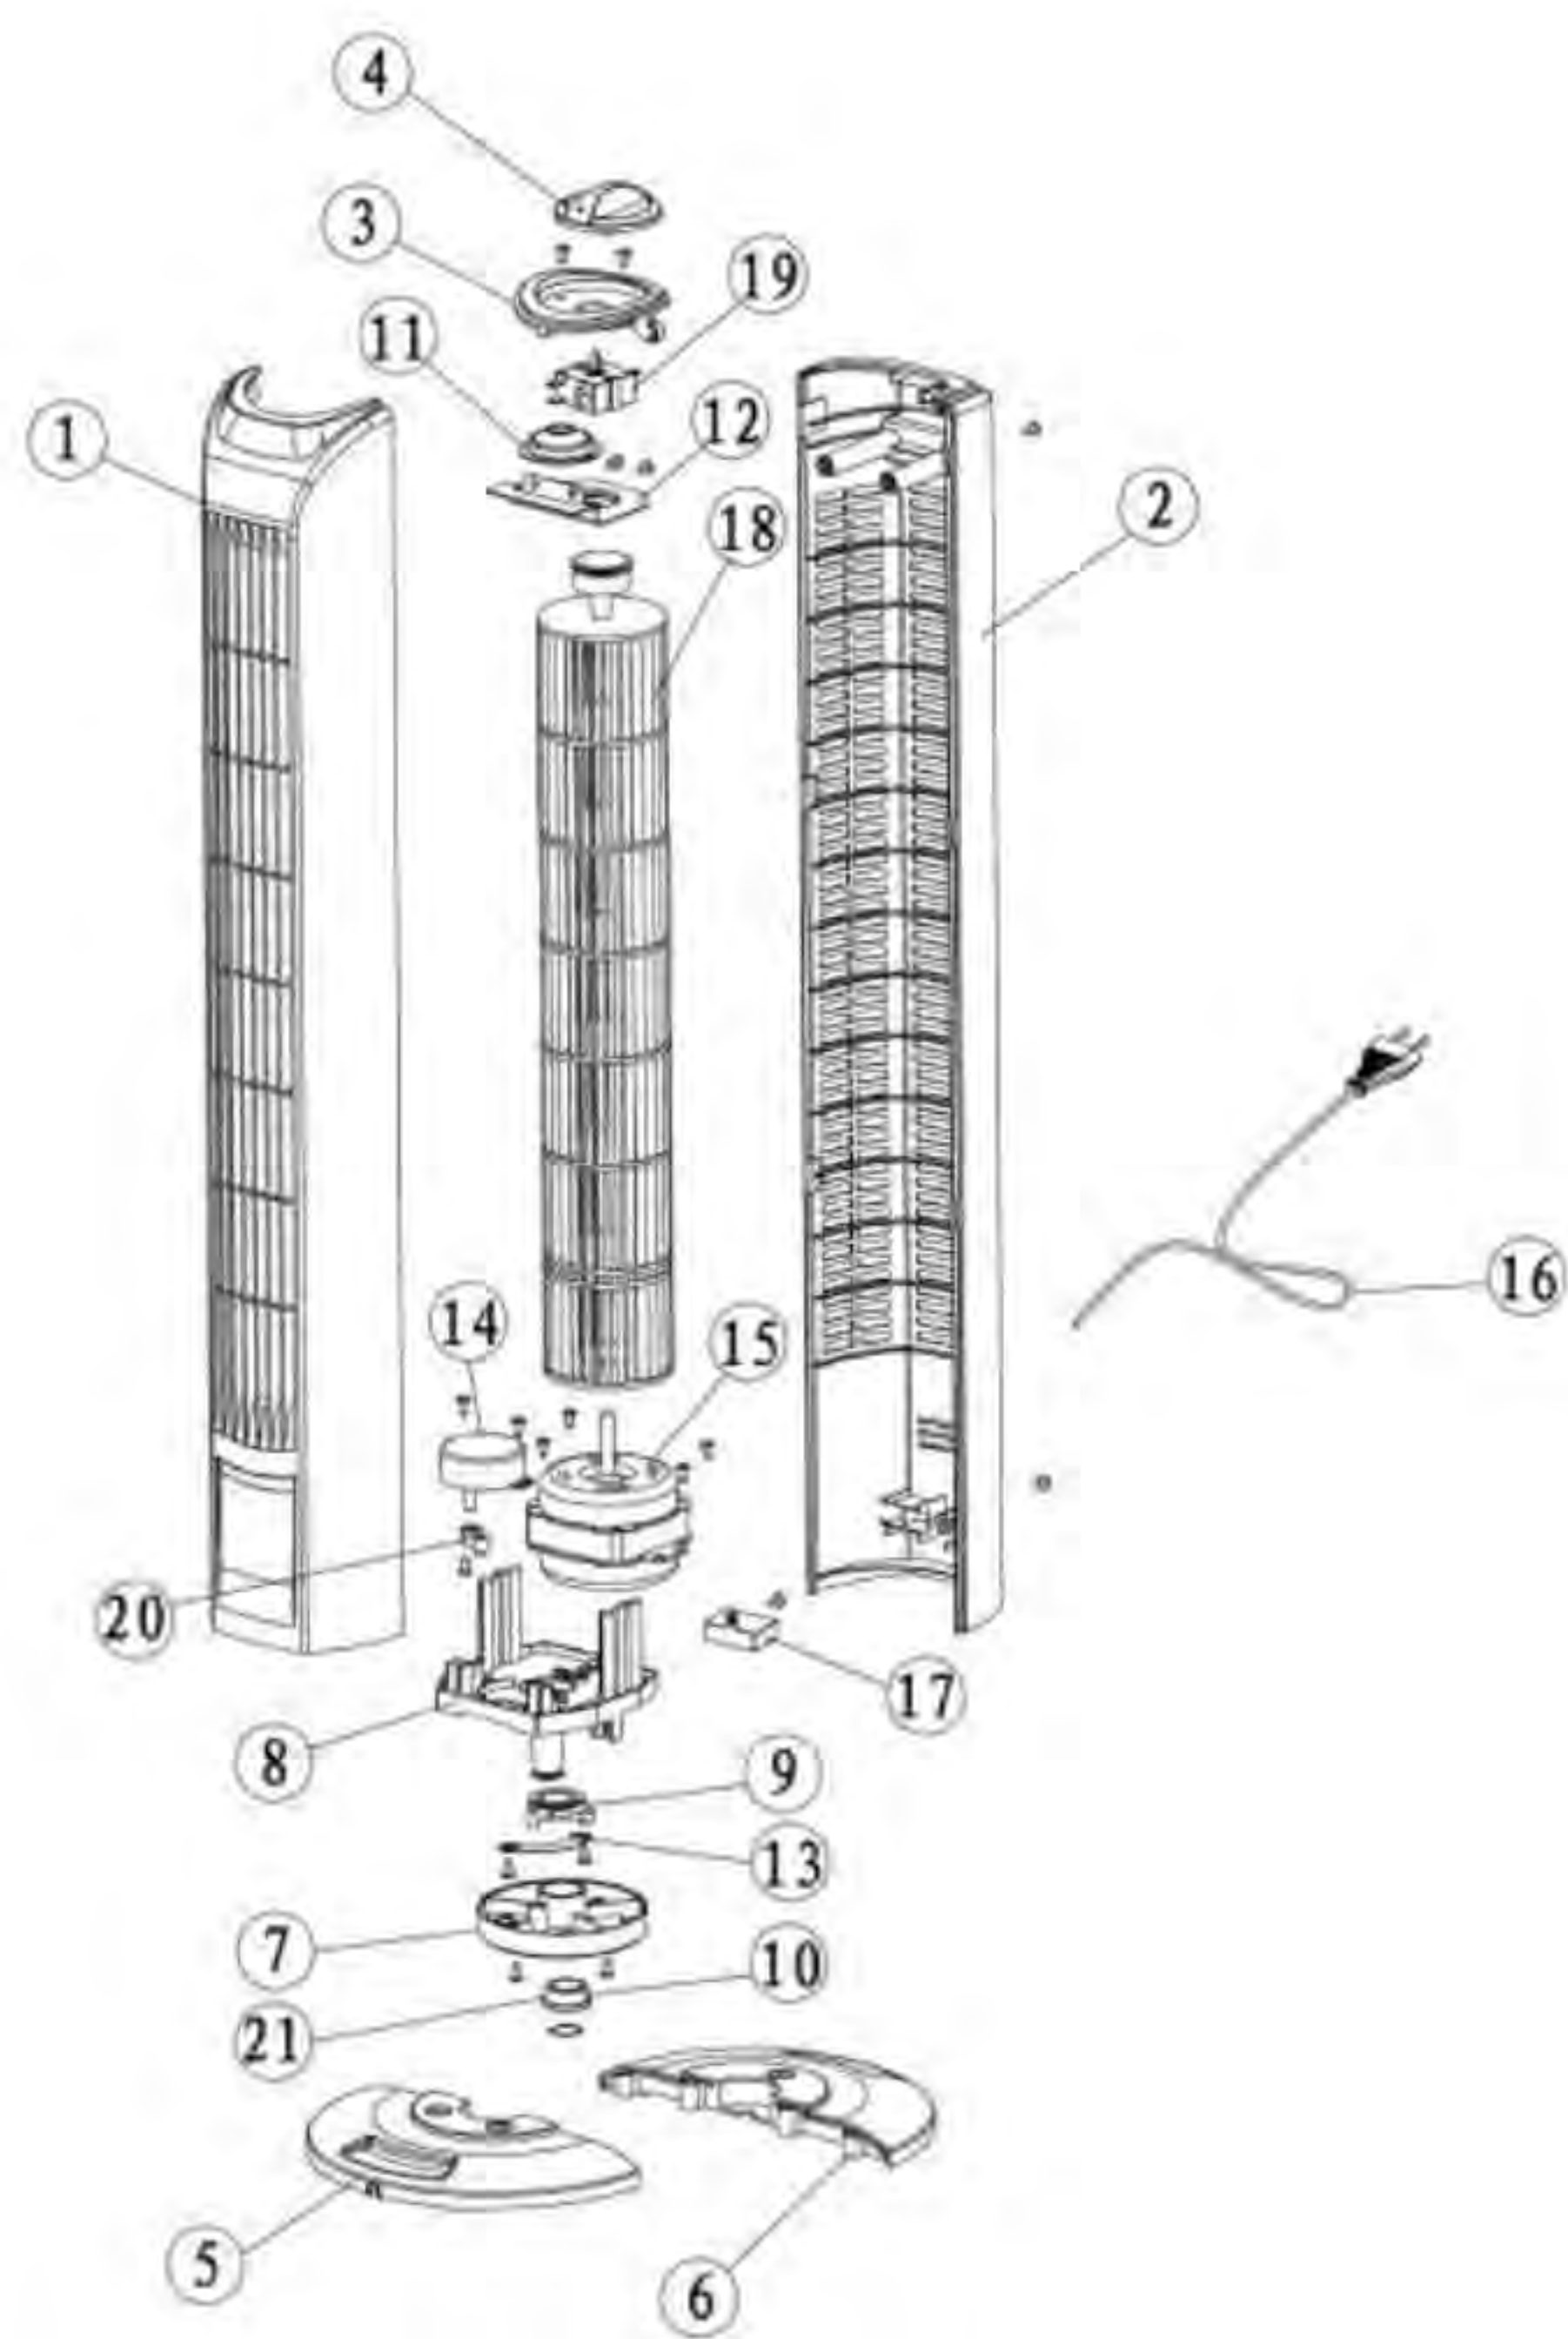

- 1. Front enclosure
- 2. Rear enclosure
- 3. Upper cover
- 4. Knob
- 5. Left Base
- 6. Right Base
- 7. Rotary board
- 8. Motor holder
- 9. Fixed mount of Connecting rod
- 10. Fixed ring
- 11. Bearing cap
- 12. Propeller holder
- 13. Connecting rod
- 14. Synchronous Motor
- 15. Motor
- 16. Power cord
- 17. Capacitance
- 18. Propeller
- 19. Switch
- 20. Eccentric bushing
- 21. Iron cap

ASSEMBLY INSTRUCTIONS

  
- 1. Pass the power cord through the central gate and firmly clamp the left base with the right base, then coordinate the position of fan body with that position of the base , and fix the screws of the base with a screwdriver
- 2. Pass the power cord through the gap of the base.

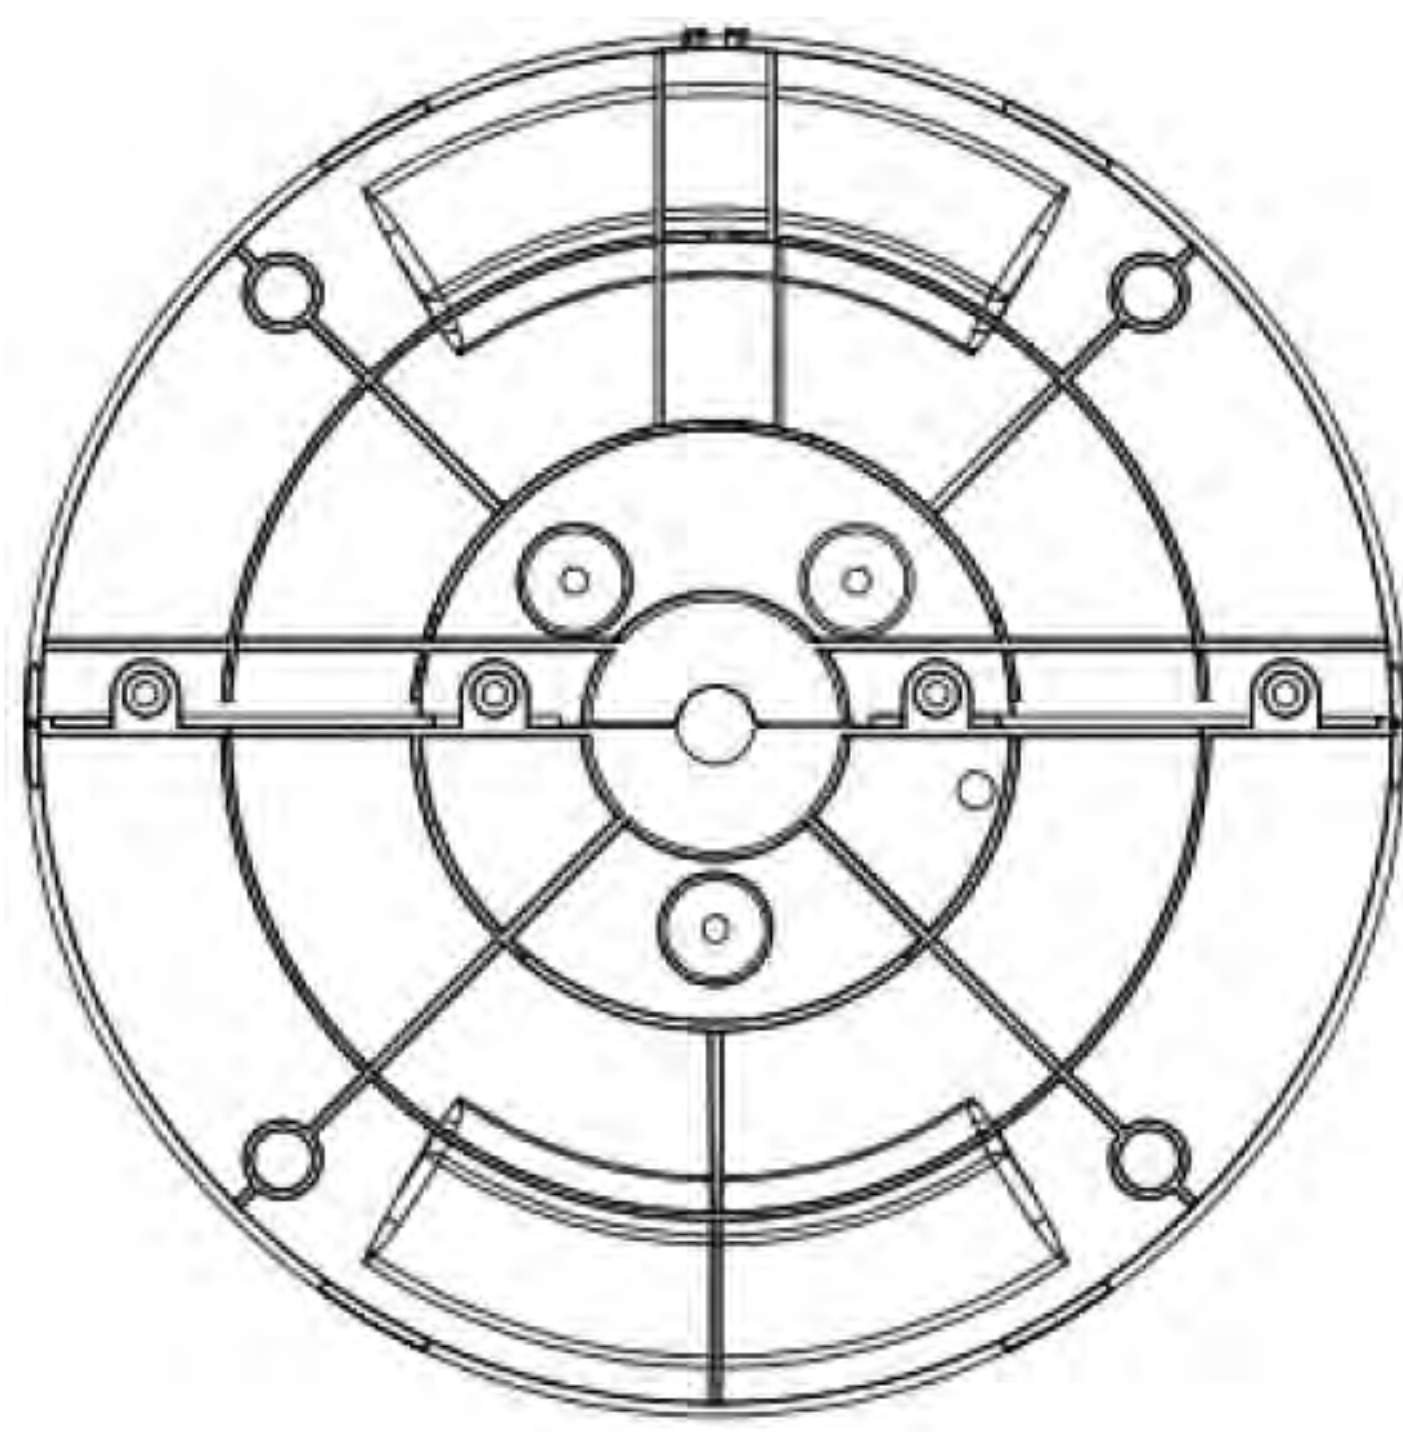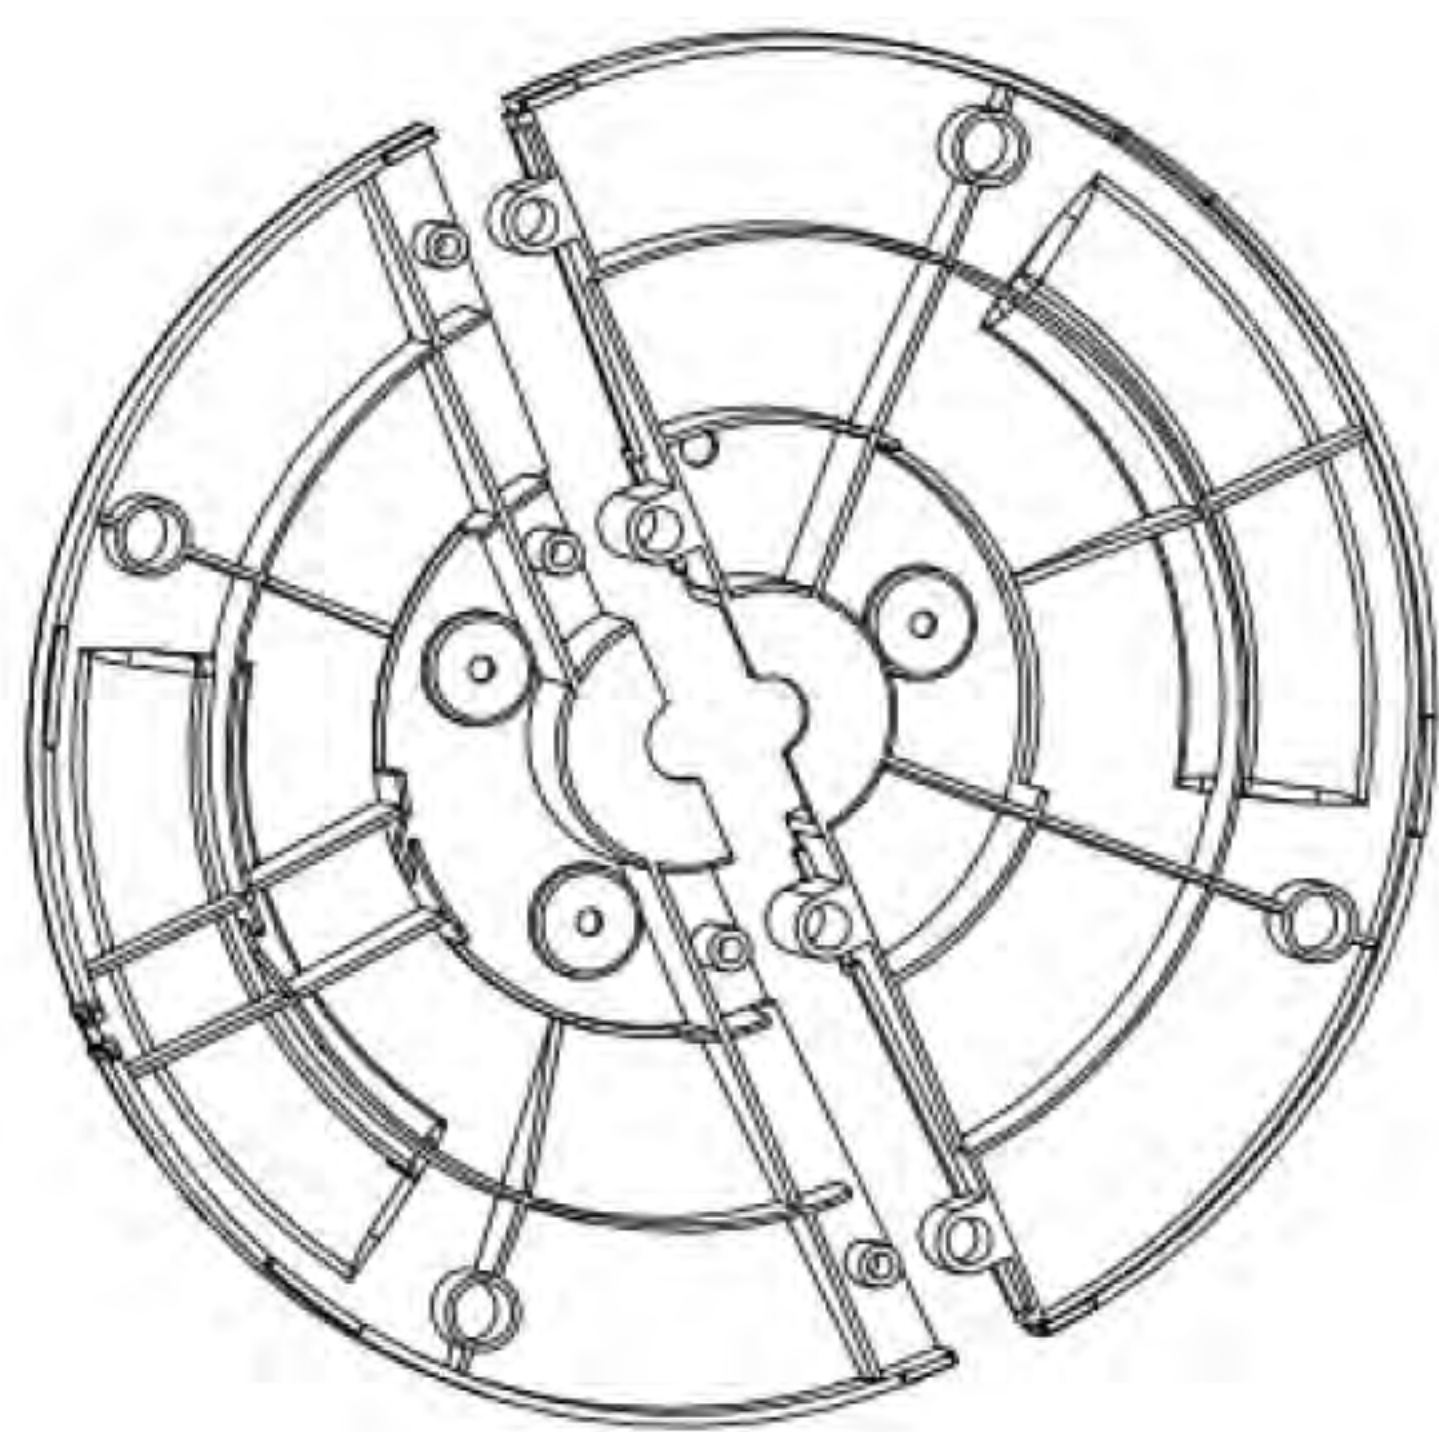

OPERATING INSTRUCTIONS

Important: This appliance is for household use and may be plugged into any 220-240V AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

 Functions of the fan

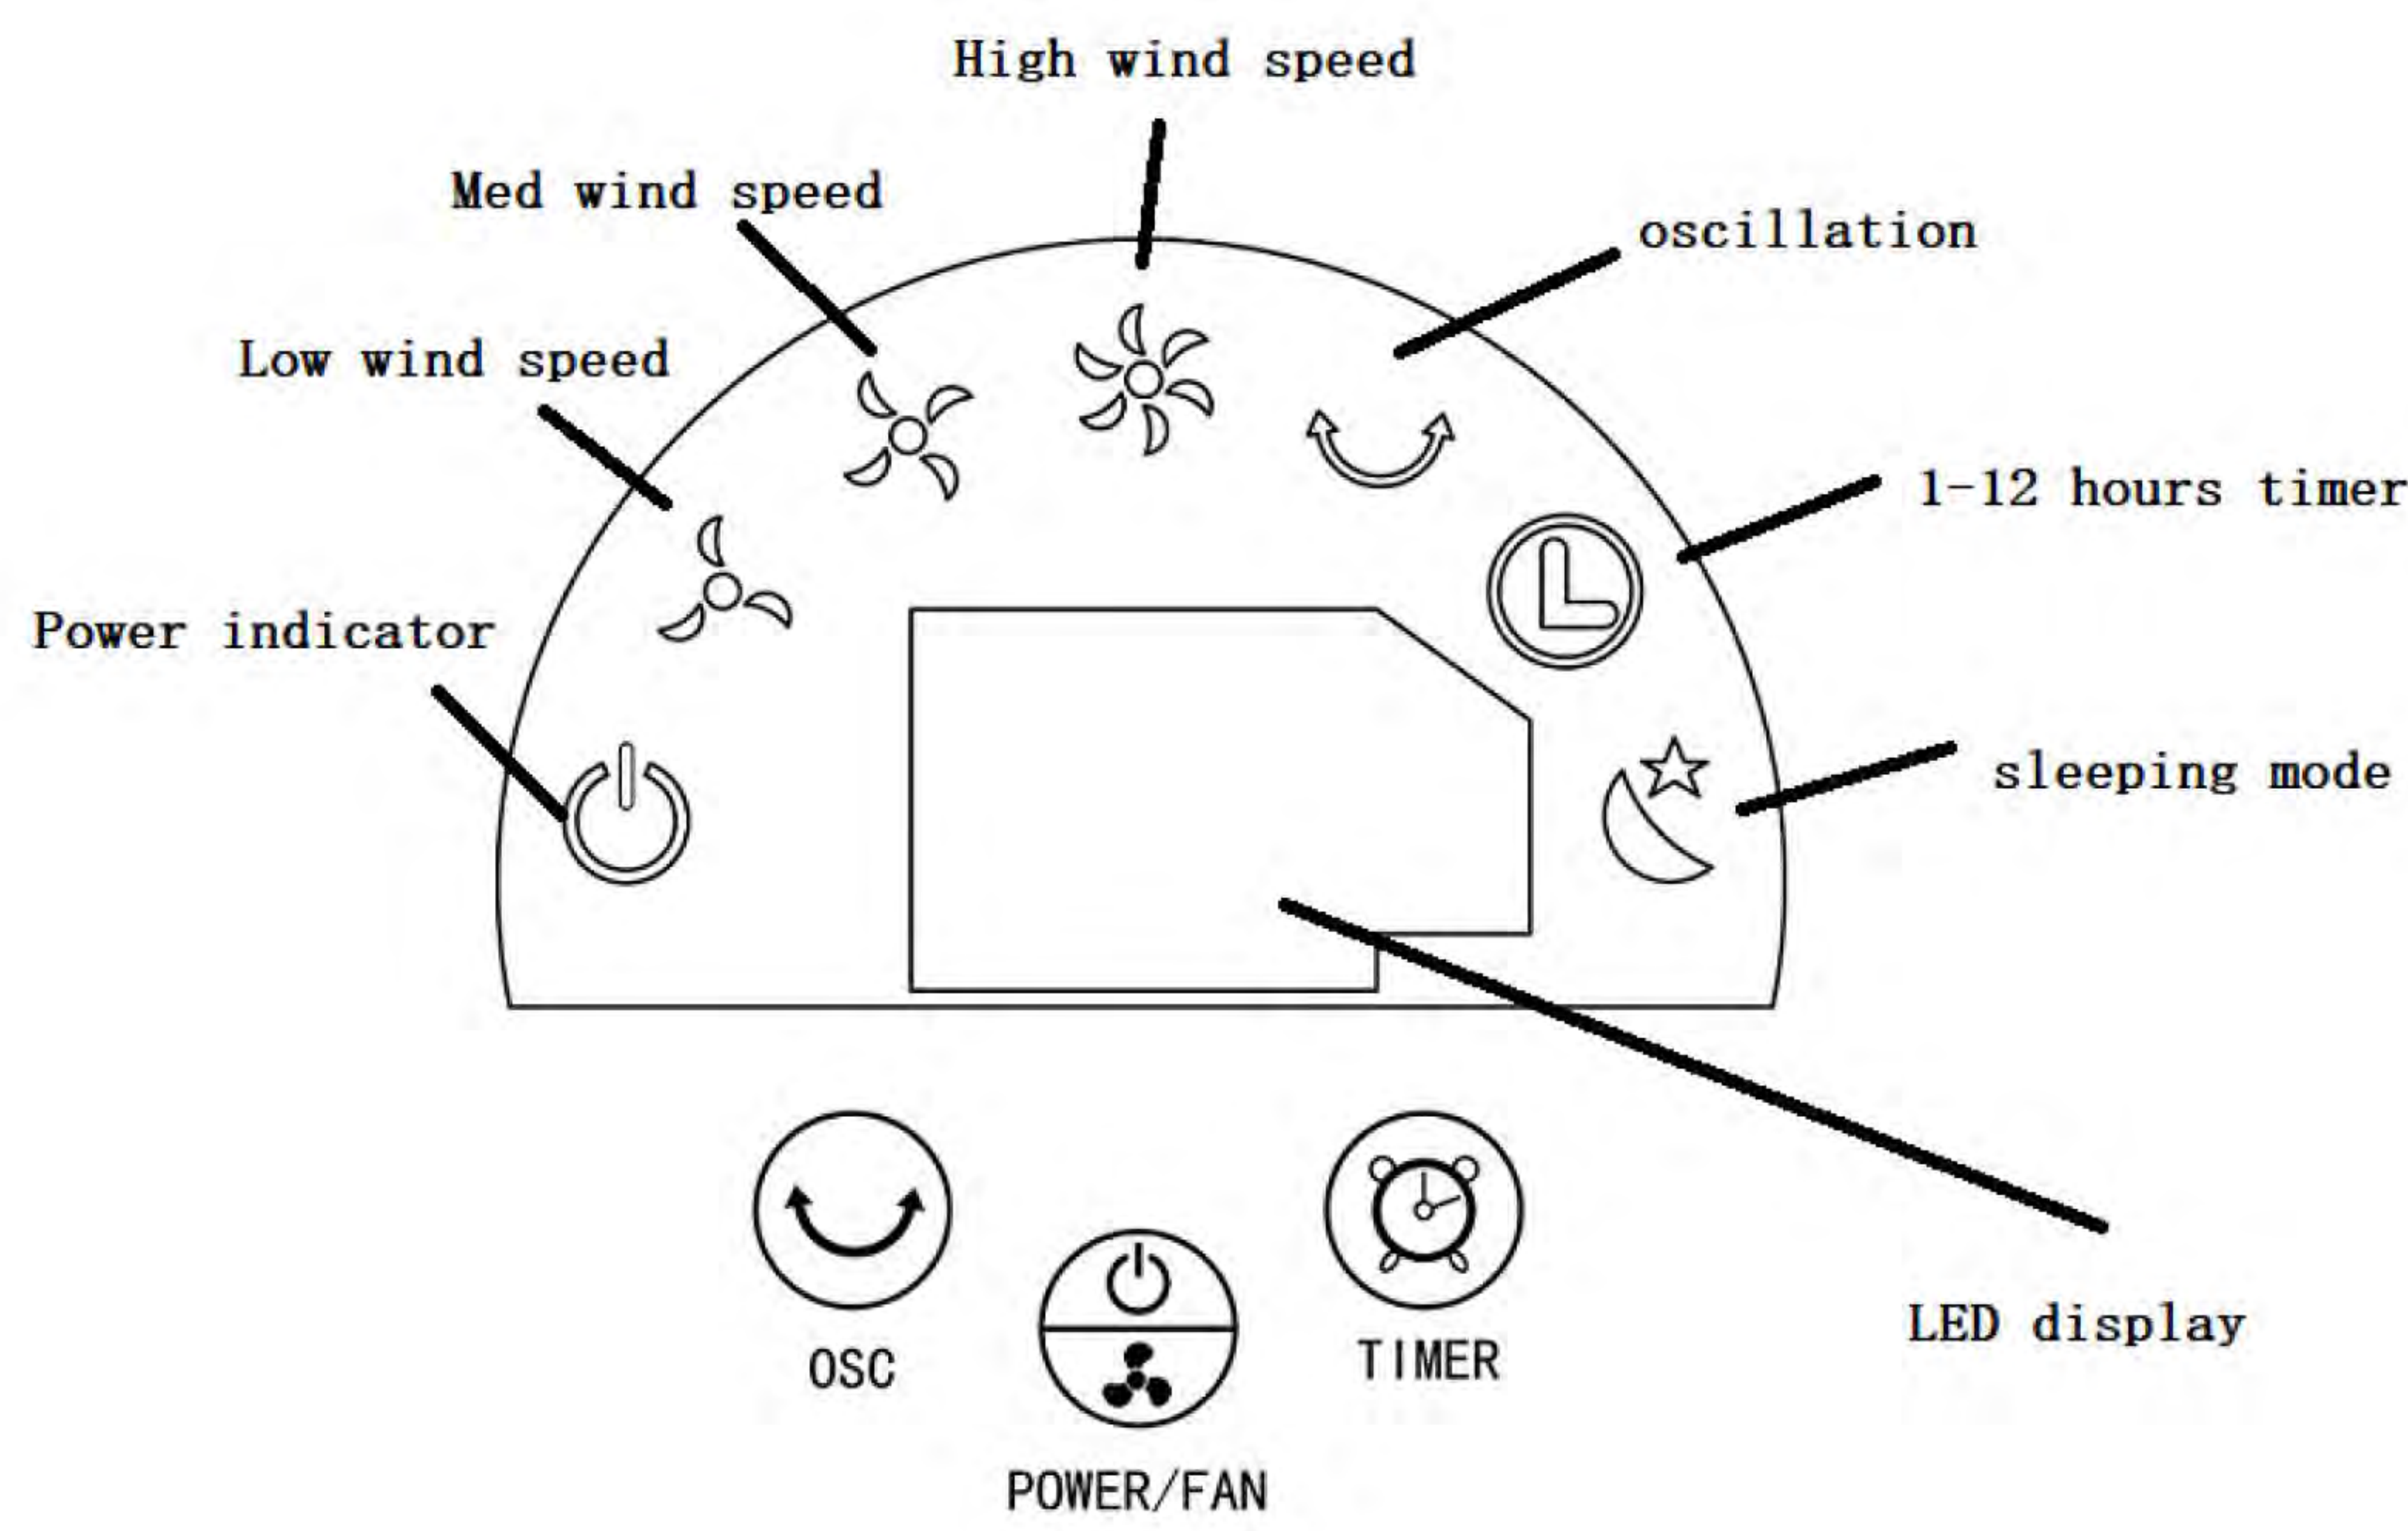


1.  POWER/FAN :ON/OFF of the fan and select Low, Med, High wind speed

2.  TIMER : Setting timer from 1-12 hours

3.  OSC : Oscillation function

REMOTE CONTROL VIEW:

 - 1.Remote control, please use Lithium battery CR2025 3V.
- 2. The remote-control power button is labelled as such:

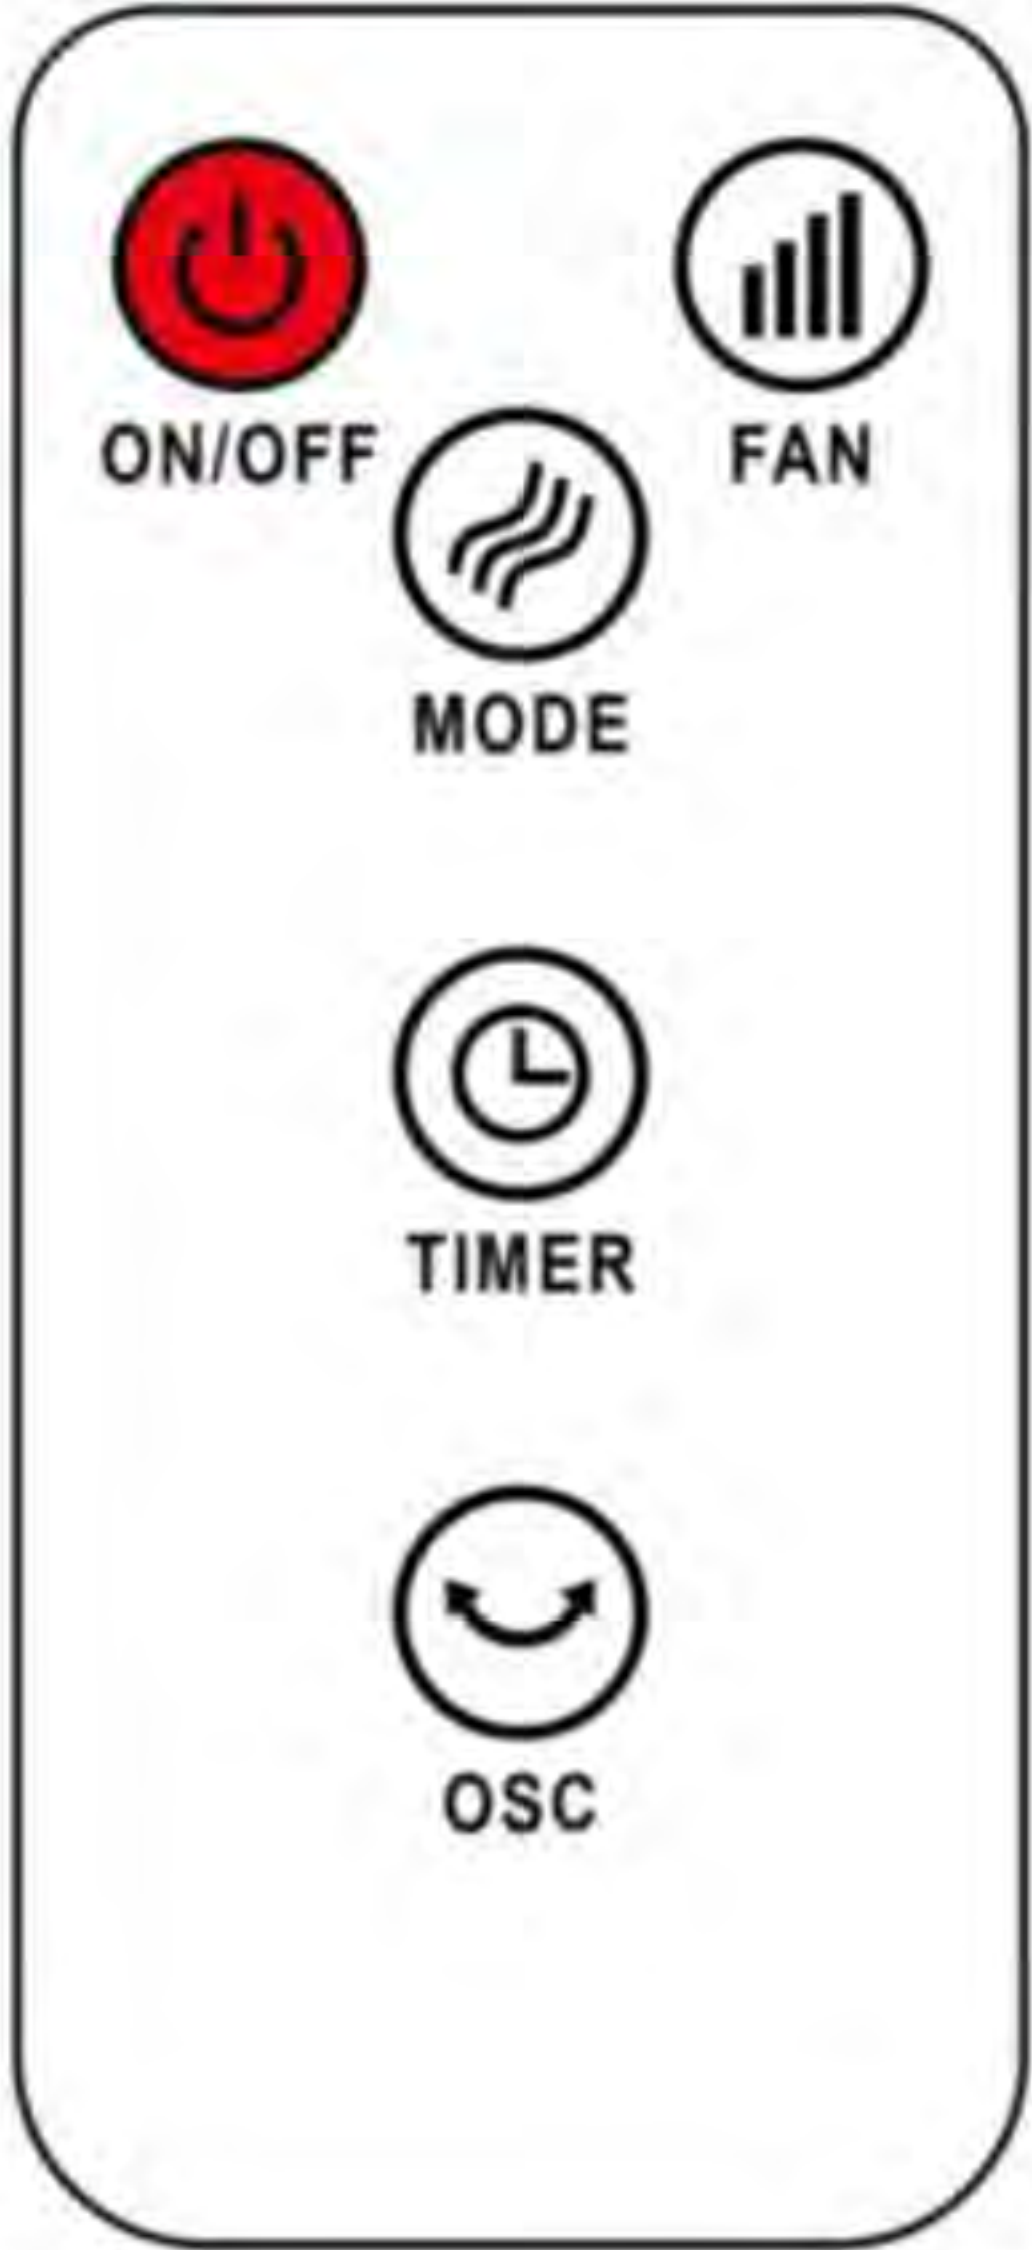

1. "ON/OFF"

Main power button
2. "FAN"

Low, Med, High wind speed for selection
3. "Mode"

Natural mode and sleep mode for selection
4. "Timer"

Setting timer from 1-12 hours
5. "OSC"

Oscillation function

CARE AND CLEANING

This appliance requires little maintenance and contains no user serviceable parts. Do not try to fix it yourself. Refer it to qualified service personnel if servicing is needed.

The fan is permanently lubricated and will not require additional lubrication for the life of the fan.

TO CLEAN: Before cleaning, turn fan off and unplug from electrical outlet. Wipe off excess dust with a lint-free cloth. To ensure adequate air circulation to the motor, keep vents located at the rear of the motor housing free from dust accumulation. A vacuum cleaner hose can be used to clean these vents. Do not immerse fan in water or any other liquid.

TO STORE: Make sure to disassemble and clean the fan before storing. Retain the original packaging for the purpose of storing the fan. Always store fan in a dry place. Never store it while it is still plugged in. Never wrap the cord tightly around the fan, and do not put any stress on the cord where it enters the fan housing, as it could cause the cord to fray and break.

SPECIFICATIONS

Watts(W)	Volts
65W	220-240V~50-60Hz

NOTE CONCERNING PROTECTION OF ENVIRONMENT



This product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for the recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicate such disposal procedures. The materials are recyclable in accordance with their respective symbols. By means of re-use, material recycling or any other form of recycling old appliances you are making an important contribution to the protection of our environment. Please ask your local council where your nearest disposal station is located.

**A Quality Product
Of**



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: www.cginspiringlife.com