




Farrata Fan

INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.

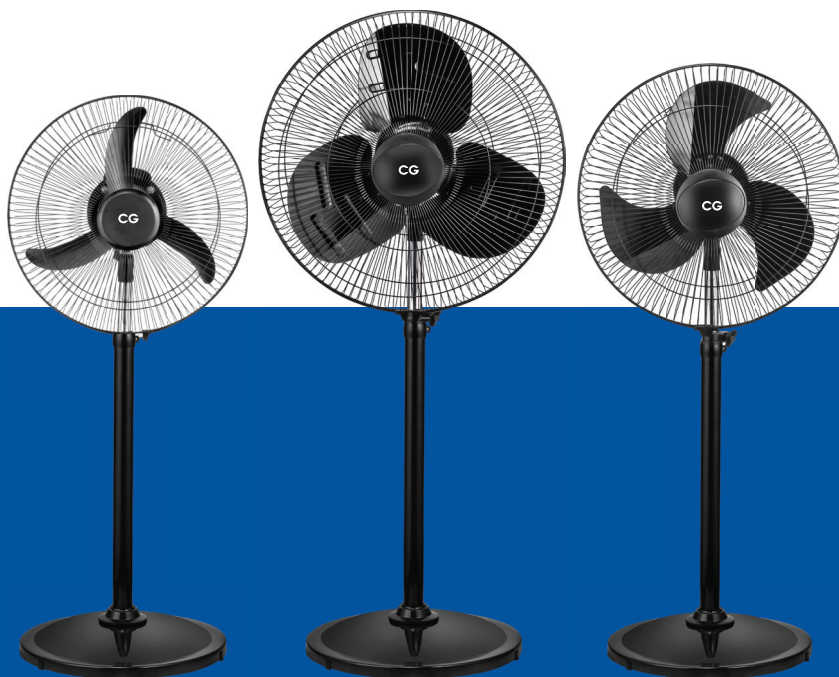

Model: CGFF20B05/ CGFF20G05/ CGFF18B05/ CGBF16B05

**This instruction manual contains important information
& recommendations that we would ask you to comply
With to obtain best results from your products.**

CG CHAUDHARY[®]
GROUP
Touching life everyday

Caution

1. Improper installation may result in the risk of fire, electric shock, or injury to persons.
2. To prevent risk of fire and electric shock, don't use the unit near windows.
3. Power plug must be removed from power socket before cleaning , servicing, maintenance and moving from one location to another.
4. The fan should be placed on a flat and stable surface when operating to avoid overturning.
5. The fan should not be placed in a damp place or where humidity is high (such as in a bathroom).

Features

- 3-speed wind choice.
- Powerful full copper motor.
- Telescopic height adjustment.


Technical Specification:

Power supply :- 230V AC, 50Hz, Single Phase

Model	Sweep (MM)	Power Input (W)	Speed (RPM)
CGFF20G05/ CGFF20B05	500 MM	135 W	1400
CGFF18B05	450 MM	120 W	1500
CGBF16B05	400 MM	100 W	2400

Parts Description

- (1) Front Guard
- (2) Fan Blade
- (3) Guard Hoop
- (4) Guard Mounting Nut
- (5) Rear Guard
- (6) Motor Shaft
- (7) Speed Switch
- (8) Upper pipe
- (9) Height Adjustment Screw
- (10) Lower pipe
- (11) Fan Base

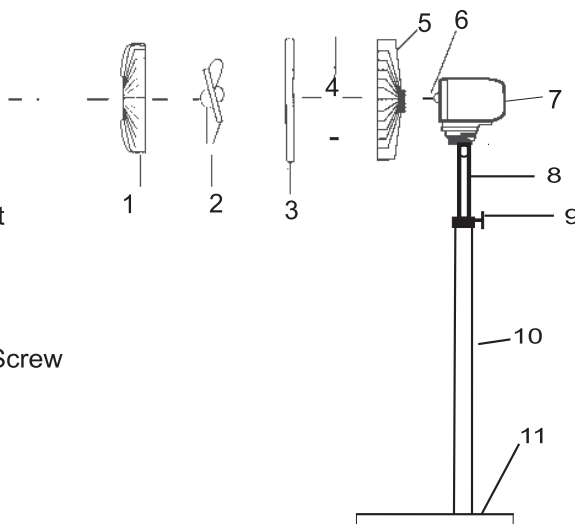

Assembling procedures

1. Take out the Base and place the lower pipe sub-assembly on the center of the base and fix with screws provided.
2. Slide up the upper pipe by loosening Height adjustment screw (9) by rotating and tighten (clock wise) at the desired height.
3. Remove Guard mounting Nut from the Motor Front cover. Then place Rear guard on the projected pins and tighten with Guard mounting nut.
4. Install fan blade onto motor shaft, Tighten the blade with the help of bolt provided to fix the fan blade in position. Secure the blade inserting split pin in the hole on the front of shaft.
5. Mount the Front Guard with trade mark upward and fix both Front and Rear Guards with Guard Hoop.

Operation Method:-

• Speed Adjusting:

0.....Stop 1.....Low 2.....Med 3.....high

At the back of the motor head the Off and Speed adjusting knob is located. Rotate the knob and place at the desired speed level.

- **Off Position:** Rotate the Speed adjusting knob anti clockwise to the Stop position to stop the fan.

- **Height Adjustment:** Loosen the Height adjustment screw(9), pull up or down the upper pipe to desired height and tighten the screw again.

Cleaning

1. Please disconnect the fan unit from power supply before cleaning it.
2. Only clean the surface of fan body with mild detergent and soft cloth.
Please dis-assemble fan guard and blade from fan body before cleaning them and install them back after drying up.
3. Please add a few drops of lubricant to the base of motor shaft after cleaning to extend motor life.



CG ~~X~~ **Elex**

Scan for Chatbot

**A Quality Product
Of**

CG **CHAUDHARY®
GROUP**
Touching life everyday



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: www.cginspiringlife.com