



Electric Kettle INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



Model

CGMREK17B8 | CGMREK18B | CGMREK23A8

CGMREK23B8 | CGMREK23S

This instruction manual contains important information
& recommendations that we would ask you to comply
With to obtain best results from your products.

General Safety Guidelines

Read the user manual before operating any appliance or equipment.

1. Check the voltage available at your home and ensure that it matches the voltage mentioned on your appliance before switching it on.
2. The appliance should not be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are under supervision or have been given correct and necessary instructions.
3. If the power cord is damaged, please have it replaced at a service center or by a person designated by the manufacturer or a qualified person to avoid electric shock.
4. Always keep the unit on a dry and flat surface.
5. Never touch any appliance or equipment with wet or damp hands.
6. When plugging or unplugging a power cord, hold it by the plug; never pull the cord.
7. Do not connect the equipment to an extension cord or a multiple socket adaptor. Always connect the unit to the main socket to prevent short circuits and sparks, which can shorten the life of the unit and pose risks.
8. Do not let the power cord hang over the edge of the table or a work surface as a sharp edge can damage the cable over time.
9. Avoid letting the cord get tangled or come into contact with a hot surface.
10. Do not attempt to repair the unit in case of any malfunction; always take it to an authorized service center.
11. Do not use any attachments other than the ones supplied by or specified by the manufacturer.
12. Never leave the unit unattended while in operation, especially when children are around.
13. Children should be supervised to ensure they do not play with the appliance.
14. The equipment is for household use only; do not use it for commercial purposes.
15. All appliances and equipment are designed for indoor use. Do not use them outdoors unless specifically mentioned in the instruction manual.
16. Always unplug the unit from the power source during lightning and thunderstorms or when the unit is not going to be used for a long period of time.
17. To avoid the risk of electric shocks, do not immerse the equipment in water or use it in damp conditions.
18. The unit should be cleaned with a damp cloth and immediately wiped dry. Do not use detergents or chemical cleaning agents to clean the unit.
19. Always clean cooking appliances soon after use. This will prevent food from sticking to the unit and possible bacterial growth.
20. **WARNING:** If the surface is cracked, switch off the appliance to avoid electric shock.



Please note that children younger than 3 must not use the appliance due to their inability to react to operate the appliance.

IMPORTANT SAFEGUARDS:

Congratulations on purchasing our Automatic Kettle. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

When using any electrical appliance, basic safety precautions should always be followed, including the following:

1. Children should be supervised to prevent them from playing with the appliance.
2. The appliance should not be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are under supervision or have been given proper instruction.
3. Open the lid, pour in water, and close the lid firmly.
4. Remove the base when cleaning the kettle. Dry the base before using it again. Never immerse the unit in water or any other liquid for cleaning purposes.
5. Do not exceed the maximum water level indicated, as the water may overflow, potentially causing burns or injuries.
6. Boiled water may spray if there is too much water in the kettle.
7. Do not attempt to repair the appliance yourself if it is damaged or defective. Please send it to an authorized after-sales service center for repair.
8. Regularly check the power cord and plug for any damage. If the cord or plug is
9. Please use the matching base for the kettle.
10. Do not open the kettle cover when the water is boiling.
11. Close supervision is required when using any appliance near or by children or individuals with disabilities.
12. This product is intended for household use only, not for commercial use.
13. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home. If it does not, please do not use it and contact the local distributor.
14. Always disconnect the kettle from the power supply while filling, cleaning, or not in use.
15. Always operate the appliance on a smooth, even, and stable surface.
16. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be inadvertently pulled.
17. Before boiling water, please ensure that the lid is closed to avoid scalding.
18. Do not open the cover or move the kettle while it is heating to avoid burns.
19. To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug, or power cord to water or any other liquid.
20. When the temperature is lower than 0°C, do not keep it connected to the power supply continuously. Otherwise, the thermostat may keep the heating element working continuously, which could cause damage. It must be replaced by the manufacturer or a qualified person to avoid electrical hazards.
21. Do not use the appliance without water. Please ensure there is enough water inside before use.
22. Unplug the kettle when not in use.
23. The kettle is designed solely for boiling water and should not be used for any

other purpose such as instant beverages, coffee, soup, milk, etc.

24. The instructions for all appliances shall include:

- A warning to avoid spillage on the connector.
- Details on how to clean the surfaces in contact with food.
- A warning of potential injury from misuse.
- A statement that the heating element surface is subject to residual heat after use.

OPERATING INSTRUCTIONS:

1. Please read the instructions carefully, especially the safeguards, before using the appliance.
2. When plugging in the kettle, cover the kettle lid, place it on the base, and then switch it on. Do not switch it on before placing the kettle on the base.
3. The kettle will automatically power off after the water has boiled. Switch it back to the off position.
4. Please wait for the water to stop boiling before pouring it out.
5. To activate the keep-warm function, press down the keep-warm button to turn on the corresponding indicator light. This will start the keep-warm function. When you no longer need to keep the water warm, press the button again to turn off the keep-warm function. The indicator light will turn off.
6. If the kettle shuts off before boiling, it may be caused by excessive buildup of mineral deposits. Please clean the kettle.
7. When using the kettle for the first time, fill it with water up to the maximum water line, then discard the water after it has boiled. Repeat this process once more to eliminate any residual odors from the inner components.

CLEANING AND MAINTENANCE:

CLEANING:

1. Please unplug the kettle and allow it to cool before cleaning.
2. Do not immerse the kettle, power cord, socket, or plug in water.
3. Make sure the electric circuit is dry.
4. Avoid scratching the kettle with sharp objects.
5. Clean the body of the appliance and the stand with a damp cloth. Do not use bleach, abrasive substances, or solvents to clean your appliance as they can damage the surface.

DESCALING: The kettle should be cleaned regularly to remove scale. If the kettle shuts down automatically, it means the kettle needs descaling.

Methods for descaling:

1. Use special descaling products and follow the instructions provided.
2. Add 0.5 liters of 8-degree white vinegar, soak for one hour, then discard the vinegar and wash the kettle 4-5 times with water.
3. Add 0.5 liters of water and 25 grams of lemon acid, soak for 15 minutes, then wash the kettle 4-5 times with water.

This appliance is intended for household and similar applications, such as:

- Staff kitchen areas in shops, offices, and other working environments.
- Farmhouses.
- Use by clients in hotels, motels, and other residential-type environments.
- Bed and breakfast-type environments.

Position the lid so that steam is directed away from the handle. Do not remove the lid while the water is boiling. The kettle is only to be used with the provided stand. If the kettle is overfilled, boiling water may be ejected.



CG Elex
Scan for Chatbot

**A Quality Product
Of**

**CG CHAUDHARY®
GROUP**
Touching life everyday



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: www.cginspiringlife.com