

Electric Hotpot INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



Model: CGHP405 | CGHP505

This instruction manual contains important information
& recommendations that we would ask you to comply
With to obtain best results from your products.

Safety Guidelines

For Your Safety

When using electrical appliance, basic safety precautions should always be followed,

Including the following:

1. Read all the instructions before using the appliance. Keep these instructions for future reference.
2. The appliance must only be used as an intended in accordance with the enclosed operating instructions.
3. Prior to connecting the appliance to the main power outlet, check whether the voltage indicated on the type plate corresponds to the voltage supply in your home.

A wrong connection may lead to serious damage of the appliance and injury to the user.

4. Do not use the appliance with wet hands, on a wet floor or in a damp environment.
5. Place the appliance on a stable, level and heat resistant surface. Also ensure that the surface can take the weight of the appliance during use.
6. Always make sure the appliance is secured in place before turning it on.
7. Do not place the appliance near hot gas, electric burners or in a heated oven.
8. Extreme caution must be taken when moving the appliance as it is very heavy and often hot to the touch. Do not touch hot surfaces, use handles.
9. Turn off the appliance and unplug it whenever not in use or before cleaning.
10. Do not use the appliance outdoors.
11. Check the appliance and its cable regularly for damage. Do not use appliance if it is damaged.

Contact our customer care center for repair or replacement.

12. Never immerse the appliance or power plug in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.


Safety Guidelines

13. Sufficient air space should be provided for air circulation.
14. The appliance must not come into contact with curtains, clothing, dish towels or other flammable materials during use.
15. Do not let cord hang over edge of table or counter.
16. Keep out of reach of children or incapable persons. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
17. Never move the appliance pulling it by the power cord. When removing the plug from the wall socket, never pull on the power cord itself.
18. All repairs should be made by a competent and qualified electrician, after sales department of the manufacturer or importer, or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger.
19. The use of accessory attachments not recommended by us may cause hazard or injury.


Specifications

PRODUCT SPECIFICATION

Model	CGHP405	CGHP505
Capacity	4.0L	5.0L
Rated Voltage	220-240V~	220-240V~
Frequency	50/60Hz	50/60Hz
Rated Power	750-890W	750-890W

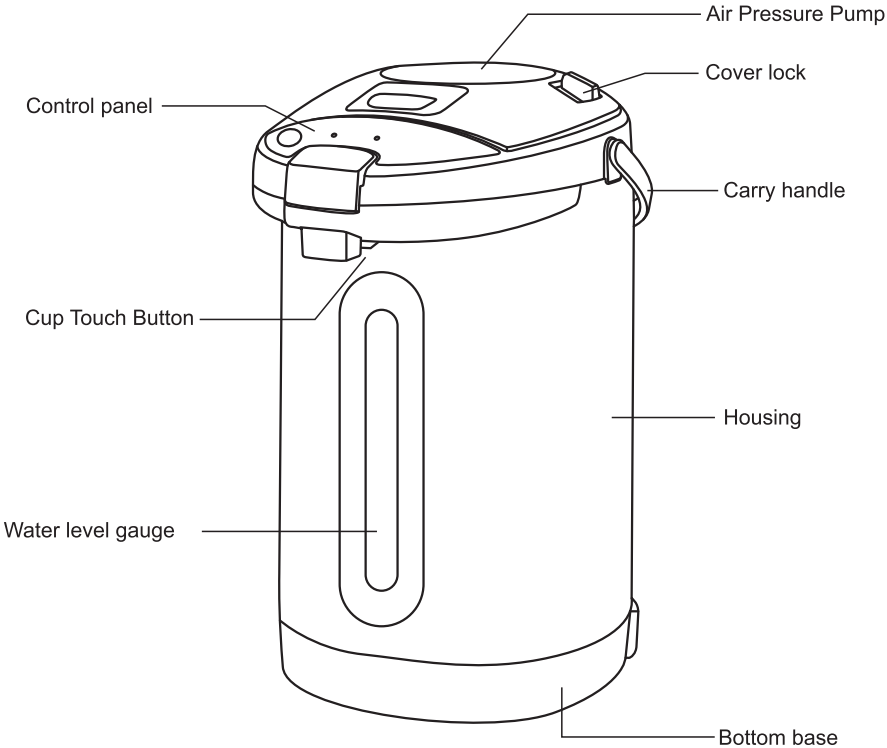

Control Panel

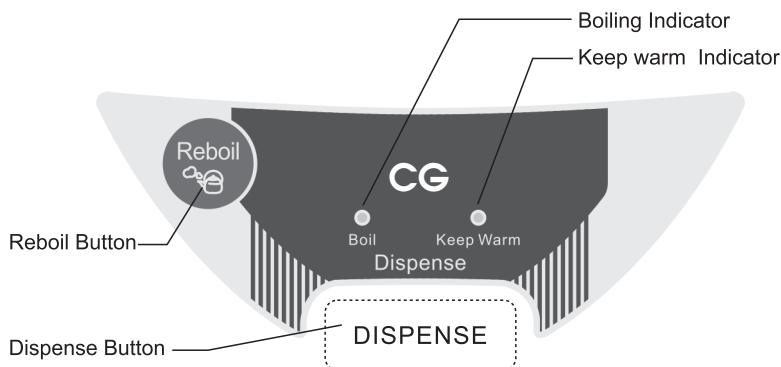

Dispense button:

When the water is finished boiling, press this button to dispense water out. (You may also dispense water by press air pressure pump or pressing a cup against the cup touch switch)

Reboil button:


The water will boil again by pressing this button. After boiling, the keep warm light will be bright.

Operation Notes

How to install and remove the upper lid


How to open the upper lid

Press the lid release lever button on the upper lid.

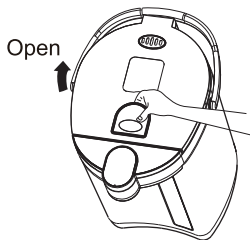


How to remove the upper lid from body

Open the pod lid and keep around 45°, and pull forward (horizontal direction), then pull out the lid in the direction shown below.

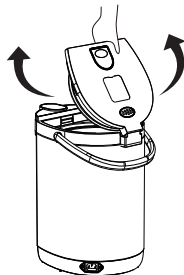


How to mount the upper lid to the body

Aligning the rotating shaft of the pot lid with the hinge, then push down the pod lid.

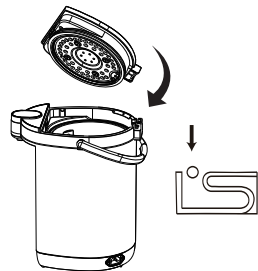


3 Way of water dispense:


- 1 Auto dispenser water output
- 2 Air pump water output
- 3 Cup touch switch water output

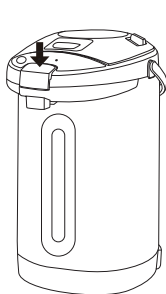

1

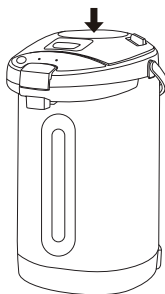

2

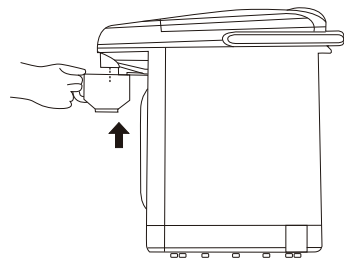


3

Operation Notes

Points for attention:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
2. Close supervision is necessary when this appliance is used by or near children. This appliance is not intended to be used by children.

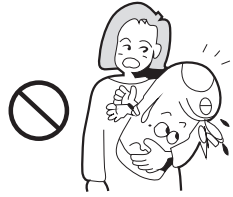

-  Never close the upper lid forcefully.

Otherwise, it may lead to scalding when the appliance topples and hot water flows out of the appliance.




-  Never place the appliance in places easily accessible to children;

Otherwise, it may lead to scalding and electric shock.



-  Never cause the appliance to topple over.

Even if the water release button is locked, hot water may flow out of the water release and steam outlet, leading to scalding.

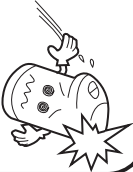

-  Never turn or move the appliance while adding or dispensing water.

Otherwise, hot water may splatter and lead to scalding.



-  Remove the upper lid before discarding any residual water.

Otherwise, scalding may occur when the upper lid swings open and hot water flows out.



-  Do not fill the pot with any substance other than water.



-  Never allow children to access the plug. Doing so may lead to electric shock and injury.



-  Do not place the appliance on an unstable surface such as a soft pad or cloth cover.

This may cause the appliance to overturn.



Operation Notes




If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



Never touch the power plug or the appliance's plug when your hands are wet.

Otherwise it may lead to electric shock.

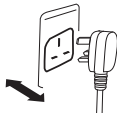

Do not open the top lid when water is boiling to avoid scalding by hot steam.



Do not block the steam vent or touch it with your hands.




Do not touch hot surfaces with bare hands.

Extreme caution must be used when moving the appliance containing hot water. Always use the handles.




Never fill the water beyond the "FULL" mark in the Inner Pot or below the "Min" mark on the Water Level Indicator.

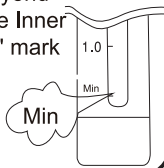

Unplug from outlet when not in use and before cleaning. Allow to completely cool before putting on or taking off any parts, and before cleaning.



Do not place the appliance too close to the wall, furniture or electric appliances. Steam and heat from the appliance may cause damage to these items.

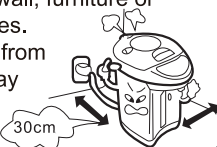

Never touch the water outlet with your bare hands.



Cleaning, Care and Maintenance

- This product is NOT dishwasher safe.
- Prior to storage, make sure appliance is thoroughly dry. Store appliance in a sealed plastic bag to prevent insects from getting in.

Body and Upper Lid

1. Wipe the lid and body clean with a damp cloth.
2. When the appliance has cooled completely, wash the inner stainless steel water tank with warm, soapy water and a sponge. Rinse thoroughly to remove soapy residue. For easy cleaning, the lid can be completely removed. Properly replace the lid before next use.
3. Do not use gas, turpentine or any corrosive liquids and cleaners. Do not use any scouring pads or brushes.

Descaling

If you live in an area that has hard water, the inner shell and filtering net may discolour slightly. This is called 'scale'. To remedy this, mix a solution of lemon juice and water, filling the 'Stainless Steel Inner Pot' up to the "Full" mark. Boil water and let it soak for one hour. Then discard water. If the scale is still there, please repeat this process again until no more scale.

Trouble Shooting

Issues		Possible Reasons	Solutions
White/glittering substance in hot water.	▶	Presence of scale due to content of mineral rich water.	Descale periodically with lemon-water solution.
Water dispensing slowly.	▶	Presence of bubbles from boiling water enters the pump.	Open upper lid for a few seconds to let steam escape, then close again.
No water is released	▶	Appliance is locked.	Press Lock/Unlock button.
Water flows out	▶	Check whether water exceeds the 'Full' mark.	Reduce volume of water.
Water not boiling	▶	Appliance is not plugged in correctly.	Connect the plug.
'Boiling' indicator light is flashing	▶	This is a safety protection if appliance has been operating for more than 48 hours.	Press 'Reboil' button and normal operation will resume.

A Quality Product Of



CG ~~X~~ **Elex**

Scan for Chatbot



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: www.cginspringlife.com