



Air Fryer

INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



Model: CGAF72D01/CGAF72D02

This instruction manual contains important information
& recommendations that we would ask you to comply
With to obtain best results from your products.

CG CHAUDHARY®
GROUP
Touching life everyday

Before using this appliance, please read the following instructions carefully. We recommend that you keep these instructions. For your own safety, you must follow these safety instructions when using electrical appliances.

1) GENERAL SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Never touch the inside of the appliance or other hot surfaces during operation.
3. Use protection when touching exterior hot surfaces.
4. To protect against electrical shock, never immerse the housing in water, rinse housing under the tap, or let other liquids enter the appliance.
5. Only operate the appliance on a flat, even and stable surface.
6. Always put the foods to be fried in the frying basket to prevent them from coming in direct contact with the heating elements.
7. Do not cover the air inlet and the air outlet openings while the appliance is operating.
8. Do not fill the pan with oil as this may cause a fire hazard.
9. Turn the unit off and unplug from outlet when not in use and before cleaning. Allow approx. 30 minutes to cool before putting on or taking off parts.
10. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
11. Do not use outdoors.
12. Do not plug in the appliance or operate the control panel with wet hands.
13. Do not place on or near hot gas or electric burner, or in a heated oven.
14. To disconnect, press and hold the power button until the appliance switch to stand-by mode, then unplug from outlet.
15. Do not use appliance for other than intended use.

16. Do not let the appliance operate unattended.
17. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating risk of electric shock.
18. Oversize foods and metal utensils must not be inserted into the appliance, as they may create a fire or risk of electric shock.
19. A fire may occur if the appliance is covered or touching flammable materials including curtains, draperies, walls and the like, when in operation. Do not store any item on top of or touching the unit when in operation. Leave at least 4 inches (10 cm) free space on the back and sides of the appliance.
20. Do not place any of the following materials in the appliance: paper, cardboard, plastic, and the like.
21. Do not cover any part of this appliance with metal foil. This will cause overheating of the appliance.
22. During hot air frying, hot steam is released through the air outlet openings. Keep hands and face at a safe distance from the steam and from the air outlet openings. Also, be careful of hot steam and air when you remove the tray from the appliance.
23. Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emissions to stop before you remove the container from the appliance.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance. Supervision is also required when appliance is used by or near children.
26. Smoke can be detected when cooking greasy food. Please stop cooking and remove the extra oil in a safe manner and without coming into direct contact with the oil.

CAUTION

This is an airfryer that works on hot air. Do not fill the frying basket with oil, frying fat or any other liquid. Do not touch a hot surface, use the handles. Remove the hot tray with oven-safe gloves. This appliance is for household use only.

2) DESCRIPTION OF PARTS



The airfryer body



The tray with frying basket



The tray



The frying basket



The air inlet/outlet

3) BEFORE FIRST USE

- Remove all packaging, stickers and various accessories on the inside and outside of the appliance and check that all items have been received in good condition or check for any defects.
- Tear up all plastic bags, if any, and dispose of properly as they can pose a suffocation or choking risk to children.
- Hand wash and thoroughly dry the removable parts.
- When using the airfryer for the first time, you may notice smoke or a slight odour for the first few minutes of cooking. This is normal. It can come from protective substance or oil on the heating elements that may have been used for packing and shipping. Ensure the room is well ventilated.
- Slide the tray into the appliance until it clicks into place. The appliance will not work unless the tray is properly inserted.

4) USE

PREPARATION

- Place the appliance on a stable, level, heat-resistant surface.
- Have oven gloves (or a tea towel) on hand, use heat-resistant plastic tongs and a heat-resistant mat or dinner plate to rest the tray on.
- To remove the tray from the body:
 1. Hold the top of the body with one hand. Use an oven glove if needed.
 2. Grip the tray handle with the other hand.
 3. Slide the tray out of the body.
(Warning! During cooking: rest the tray on a heat-resistant mat, as the tray is warm.)
- To remove the frying basket from the tray:



Step 1: Slide the tray out of the body.



Step 2: Place frying basket + tray on stable surface, release the safety button




Step 3: Press button under safety button to unlock the frying basket

 






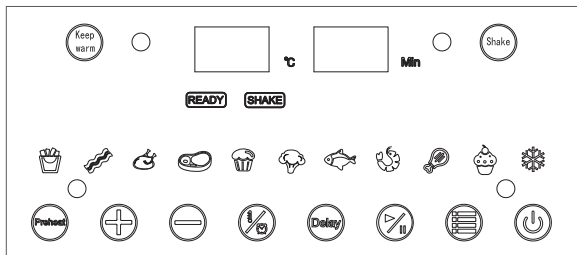

Step 4: Remove the frying basket from the tray

KNOW YOUR CONTROL PANEL



	<p>Power button</p> <p>Press long to switch on the appliance. A red light indicates the appliance is plugged in, a white light indicates it is working.</p>
	<p>Start & pause button</p> <p>Button to start & pause a program. The button lights up when the appliance is switched on.</p>
	<p>Recipe button</p> <p>Button to select a pre-set recipe (keep on pressing the button until you reach the recipe you want).</p>








	<p>Plus & minus button Press lightly to adjust slowly, press long for quick adjustment.</p>
	<p>Temperature & time switch button Press to adjust temperature or time.</p>
	<p>Display screen Time/temperature display.</p>
	<p>Keep warm button Press to keep the food warm at 60-70°C, choose the desired time.</p>
	<p>Delay button Delay function, can be adjusted from 10-900 minutes.</p>
	<p>Shake button When this button lights up, you need to shake or turn your food.</p>
	<p>Preheat button Preheat for 3 minutes, the appliance will beep after preheating is done.</p>





GETTING STARTED

1. The appliance beeps after every touch.
2. The **power button** light will be red when the appliance is plugged in. Press once to switch on the appliance, the light turns to white. Press for 3 seconds to shut off the appliance.
3. **Temperature & time switch button** for time or temperature adjustment. Press once, the button will blink 5 times. Press **plus button** once to increase with 5°C intervals. Press long for quick adjustment (without beep sound). Maximum temperature is 200°C, maximum time is 60 minutes. Press **minus button** once to decrease with 5°C intervals. Press long for quick adjustment (without beep sound). Minimum temperature is 40°C, minimum time is 1 minute. After setting the time & temperature, press the start/stop icon to start

- the program. If there is no action, the appliance will start automatically.
- Keep warm button**, set by default at 65°C and 15 minutes. Press **temperature & time switch button** to adjust temperature and time. Use + & - to increase or decrease by 5°C or 1 minute intervals. Maximum range for time is 60 minutes.
 - Delay button**, set by default at 90 minutes, can be adjusted from 10-900 minutes. Adjustment with + & -. Press once to increase or decrease by 10 minutes, press long for 30 minutes. Press **recipe button** to select a recipe, press **delay button** to adjust the time, and press **delay button** again to start. To cancel the DELAY request, press **delay button** to pause and press **recipe button** one more time to cancel.
 - Pre-set "shake function" for several settings.
 - Recipe button**, press to select a recipe. Press **start & pause button** to start the program.
 - Preheat button**, default setting is 3 minutes at 200°C. When finished, READY will glow on the display and the appliance will beep 3 times. To stop preheating, press the **preheat button** again.

SUGGESTED COOKING SETTINGS

	Function	Default cooking time (minutes)	Default temperature (°C)	Recommended amount of ingredients (g)	Recommended action during cooking
	FISH	15	180	400-550	Shake
	FRIES	20	200	300-500	Shake
	BACON	5	180	150-250	-
	BAKE	15	180	120-200	-
	CHICKEN LEG	22	190	400-550	Shake
	STEAK	12	180	150-250	Shake
	VEGETABLES	10	150	400-550	Shake

	Function	Default cooking time (minutes)	Default temperature °C	Recommended amount of ingredients (g)	Recommended action during cooking
	SHRIMP	8	185	350-500	Shake
	CHICKEN	40	180	450-600	Shake
	DESSERT	15	180	200-300	-
	FROZEN SNACKS	20	180	200-300	-

NOTE: Default cooking times and temperatures are for non-frozen food. When using frozen food, please adjust the temperature and time per your preference.

USE

1. Time control

When the program starts, the timer will start to countdown, numbers on the display indicate the remaining time. When it reaches zero, the airfryer will stop working. When temperature is over 100°C, the fan will continue working for another 20 seconds. Then the fan will turn off and the appliance shuts off with 5 beep sounds.

2. Temperature control

When the set temperature is reached, the appliance stops heating. If not, the appliance will start working to achieve $\pm 5^{\circ}\text{C}$ above or below the set temperature.

3. Temperature overheat protection

When temperature is over 300°C, the appliance will stop heating, and "E4" will appear on the display with 3 beep sounds. The fan will keep working for 30 seconds to cool down the appliance.

4. Forced shutdown function

To shut down the appliance, press long on the power button. All lights will turn off and the power light will turn to red.

5. Auto-off function

Auto memory function. Pulling out the tray will cut off the power, inserting it back will start up the appliance again.

5) MAINTENANCE AND CLEANING

IMPORTANT: Before cleaning any part, be sure the airfryer is switched off, unplugged, and cool. It is important that you clean the entire appliance after each use to prevent accumulation of grease and to avoid unpleasant odours.

IMPORTANT: Do not immerse the appliance, power cord or plug in any liquid.

- Wash the tray and frying basket in warm to hot soapy water. Rinse and dry thoroughly. The tray and frying basket are handwash only.
- If any food is stuck between the openings of the frying basket, soak in warm to hot soapy water before cleaning. Use a sponge or soft cleaning brush to remove stains. Rinse and dry thoroughly.
- Roughly wipe the interior of the body to remove any crumb or residue, but NOT the heating elements at the top.
- **Exterior surfaces** Clean the exterior with a damp cloth or sponge. Dry thoroughly.

NOTE: Do not use any abrasive material or sharp utensils to clean the airfryer or any of its parts.

NOTE: Allow all parts and surfaces to dry thoroughly before using the appliance again.

6) STORAGE

- Do not store the airfryer with metal utensils or sharp items, as this may lead to scratches or damage to the surface.
- Always ensure your airfryer is clean and dry before storing it. Store your airfryer carefully.

7) SPARE PARTS

Please note that no spare parts are available for this appliance.

A Quality Product Of



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: www.cginspiringlife.com