



## Egg Boiler

# INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



**Model: CGEB3502**

This instruction manual contains important information & recommendations that we would ask you to comply with to obtain best results from your products.


**CG CHAUDHARY<sup>®</sup>**  
**GROUP**  
*Touching life everyday*

## IMPORTANT SAFEGUARDS

When using electrical appliance, basic safety precautions should always be followed, including the following:

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock do not immerse cord, plugs, or the base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts. The heating element surface is subject to residual heat after use.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- CAUTION: Avoid injuries from the egg pricking device.

## Product Introduction

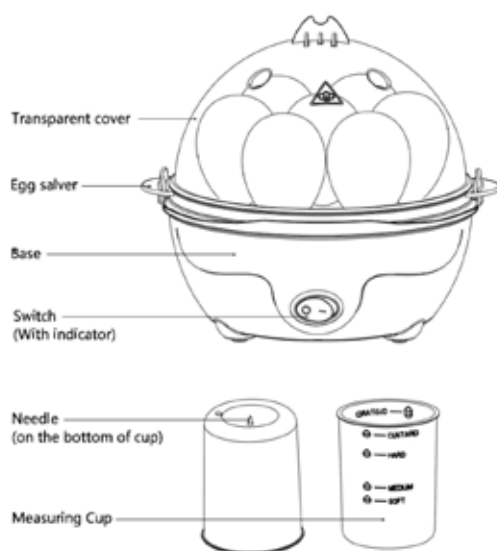

### Before The First Use

Before using the egg boiler at the first, please clean the egg boiler completely, put the attachments such as transparent cover, measuring cup, salvers etc. into water (also adding the proper cleanser) and clean them. Fill the appliance with a measuring cup water, assemble all parts, but do not have egg and begin to operate, when the water is boiling, discard the water.

**Note:** Never immerse the base in the water for cleaning. Wipe the appearance of base and the heat tray with a wild and damp cloth or cleaner, never use a poisonous cleaner.

### OPERATION

- For the first use, wipe the surface of the heat tray, fill the heat tray with water according to your taste (soft, medium or hard).
- Reference the above fig, add proper amount water, for example, if you want to boil some eggs, and the egg must be tender, then the quantity of water is at the "soft" scale of the district.
- Pour the water of the measuring cup on the heat tray, then assemble the egg salver.
- Drilled the big end of the egg with the needle on the bottom of the measuring cup. Then put the egg on the egg salver, make sure the small end of the egg is downwards. As the small end can be inserted into the hole deeper, which may give the egg more balance. Then cover the transparent cover, plug in the power source, turning the switch on "-". The indicator on the switch will be illuminated.

**Caution:** the eggs must be pierced before boiling otherwise the eggs may explode during cooking.

- When the eggs are finished, audible sound from the thermostat will be heard. The indicator on the switch is still illuminated, Turn off the switch.

**Warning:** after eggs are finished, switch off and plug off, otherwise, thermostat can be reset automatically when egg boiler is cooled, then continue to cycle as dry boil-cut off, with energy waste and safety risk.

- Put the boiled egg into the cool water rapidly so that peeled easily, egg is at its peak flavor immediately after boiling.

### CLEANING AND MAINTENANCE

- Unplug the power source and allow the appliance to cool down completely before cleaning.
- Wash the transparent cover, measuring cup, salvers in hot soapy water, rinse and dry completely.
- Don't clean any part with abrasive cleaners such as metal scouring pads, and scouring powder
- Wipe the appearance of base and the heat tray with a wild and damp cloth or cleaner, never use a poisonous cleaner.

**Warning:** Never immerse the base in the water.

- Store the boiler at the dry location such as a table top or counter top or a cupboard shelf, the power cord may be wound under the bottom of boiler.
- Any other servicing should be performed by an authorized service representative.

### ANALYSIS OF COMMON PROBLEMS

**The indicator on the switch is "OFF".**

- a. It's a blackout.
- b. The socket is off.
- c. It wasn't plugged in.
- d. The switch is off.

**The egg boiled is too hart or raw.**

- a. The water added in the stray is too much or little (the more water, the better the eggs) .
- b. The heat plate fur up.

**The indicator on the switch is on, but no steam, and the egg is completely raw.**

- a. Encountered this phenomenon, please contact the company's after-sales service department or the distributor.

**The above method is still unable to troubleshoot, contact the company's after-sales service department or the distributor. Non-professional personnel are not allowed to disassemble.**

### Environment Friendly Disposal

 


You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.

Product	: Egg boiler	Model	:CGEB3502
Rated Voltage	: 220-240V~	Rated Frequency	:50Hz
Capacity	: 7 eggs	Rated Power	:350W

**A Quality Product  
Of**



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT  
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: [www.cginspiringlife.com](http://www.cginspiringlife.com)