

# Halogen Heater INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



Model: CGHH12C05R

This instruction manual contains important information  
& recommendations that we would ask you to comply  
With to obtain best results from your products.

## Dear Customer,

We thank you very much for having purchased one product of ours. We kindly ask you to read and save this instruction manual.



1. Sensor
2. Timer Button
3. Time Indicator LED's
4. Oscillating Control
5. Element Control Button
6. Power Button
7. Remote Control

Note The illustration above may differ slightly from actual product.

## CAUTION

- Remove the packing and make sure that the appliance is intact. In case of doubt do not use the appliance and contact our after-sales service. Do not leave packaging materials like bags and staples within reach of children.
- Before switching on appliance check if the electrical voltage and frequency of the circuit correspond to those indicated on the appliance. The appliance has to be connected to a circuit according to the rules in force concerning the civil plant. The plant has to be related to the nominal power of the appliance and has to be provided with an earth-wire.
- Use the appliance only for the mentioned purpose, namely as a heater for domestic use. Do not use it for any other application, as it could get

dangerous. The manufacturer is not responsible for any eventual damages caused by improper or faulty use. The use of every electrical appliance calls for the awareness of some basic rules such as

- Never touch the appliance with wet or damp hands or feet. Never expose the appliance to atmospheric conditions (rain, sun, etc.). Switch the appliance off and unplug it before cleaning. When the appliance is not in use switch it off and unplug it. Make harmless the parts of the appliance, which could be handled hazardously by children for playing.
- Do not leave the appliance long time, it needs to be supervised continuously.
- Do not use this heater in the immediate surroundings of both, a shower or a swimming pool.
- Do not put the cable on the appliance when it is still warm.
- Do not switch on the heater near pieces of furniture, curtains, and shelves. Etc.
- Do not use the appliance near liquids or inflammable matters.
- Do not cover the appliance when it is running to avoid overheating risks.
- In case the power cord is damaged send it to the nearest after-sale service or a similar professional sector recommended by the manufacturer for the replacement
- Do not connect the appliance to extension cords or multiple outlets.
- Do not damage and do not kink the power cord. Before cleaning the appliance or carrying out any maintenance switch off the whole system. If the appliance is out of work switch it off without tampering it. If any repair is required please contact only the after-sale centers approved by the manufacturer and ask for original spare parts. Otherwise, safety of the appliance can be compromised.

## **ASSEMBLY**

Assemble the body frame and the base plate together as the following sequences. Remove the mounting screw from the lower part of the body frame and then assemble the body frame to the base plate. Secure the body frame to the base plate by means of the two mounting screw previously.

## **OPERATION**

Plug in the appliance. Check that the outlet has at least a 10-AMPERE current carrying capacity.

1. Remote set step, Press button (ON) 1 time, to give 400W power, press button (ON) 2 times, then give 800W power, press button (ON) 3 times, then give 1200W, press button (TIMER), to set timer from 0.5-7.5 hours control, press button (TURN) then the appliance swing.
2. After using it, pull out the plug.

## **SAFETY DEVICE**

This appliance is provided with one safety device, the safety device disconnects the appliance when the heater is tilted or when is tipped by means of a switch situated in the lower part of the heater. The appliance must be always placed on a flat and stable surface. Otherwise cause the appliance not working

## **MAINTENANCE**

- After use and before cleaning always unplug the appliance and wait till the item is cool, clean the grilles from dust.
- Do not clean the painted parts with emery flour or solvents and use only a moistened cloth.

## **WARNING**

- Do not locate the heater below a socket outlet.
- Heater may not use program, controller, timers or another device to automatically connect heater.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This heater not installed temperature control device which used to the room. When those who have no ability to left his little room, who shall not take up

using the heater in these small rooms, unless the person who have ability to continue to provide care

- Children aged from 3 years and less than 8 years shall not plug in, regulate
- and clean the appliance or perform user maintenance.

**CAUTION:** Some parts of this product can become very hot and cause burns.

Particular attention has to be given where children and vulnerable people are present.

**A Quality Product  
Of**

**CG CHAUDHARY®  
GROUP**  
*Touching life everyday*



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT  
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.