



Joy Mop

INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



Model: CGMOP7SS, CGMOP7PS

This instruction manual contains important information & recommendations that we would ask you to comply with to obtain best results form your products.

**CG CHAUDHARY®
GROUP**
Touching life everyday

DESCRIPTION OF PARTS



IMPORTANT FEATURES OF YOUR PRESTIGE CLEANHOME MAGIC MOP

- Easy and spill-proof cleaning of a variety of floors such as marble, granite, ceramic tiles, mosaic wooden floors etc.
- Made from high quality materials and is durable and lightweight.
- Extension pipes made of steel for height adjustment and convenience.
- 360° rotating action for powerful cleaning.
- Washable and reusable microfiber pads.
- Wringer for drying the mop head - no dripping, no spillage and no need to touch with your hands.

HOW TO ASSEMBLE YOUR PRESTIGE CLEANHOME MAGIC MOP

Your Prestige CleanHome Magic Mop is very easy to assemble. Just follow these instructions and you will be ready to use your Prestige CleanHome Magic Mop in no time.

1. Attach the extension rod (A), which is the handle unit, to the extension rod (B) and rotate firmly.




2. Similarly attach the extension rod (B) to the extension rod (C) and rotate firmly.



3. Attach the extension rod (C) to the mop head holder (D) and rotate firmly.

4. Align the rod+mop base assembly over the microfiber pad and press by stepping on the mop head holder until you hear a 'click' sound.

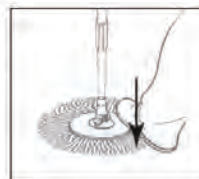

Now your Prestige CleanHome Magic Mop is ready to use.

HOW TO USE YOUR PRESTIGE CLEANHOME MAGIC MOP

1. Fill the water container with sufficient quantity of clean water and with your choice of floor cleaning solution.



2. Place the mop unit in the water container in an upright position with the mop head lever in an open position.



3. While holding the mop by the plastic grip, move the mop up and down several times. This ensures that the microfiber mop is sufficiently wet.



4. Now lift the mop from the water container and transfer the mop into the spinning wringer. This removes the excess water from the mop.



5. Remove the mop from the wringer and lock the mop head by closing the mop head lever. The mop is now ready for use.
6. If the mop becomes dirty from wiping the floor, repeat the process as explained in points 4, 5, 6 and 7 and continue the mopping process.

CLEANING AND STORAGE

- Empty both the water container and the wringer by draining the dirty water.
- Rinse both the water container and the wringer with clean water until no residue remains inside the containers.
- Do not use any abrasive materials to clean the containers.
- To remove the microfiber pad from the mop head holder, hold the microfiber pad with both feet as shown in the figure. Do not step on the plastic mop head holder. Grab the lower part of the extension rod and pull up. This will release the microfiber pad.
- The microfiber pad is washable and reusable. You can machine wash, dry and store the same for further use.



**A Quality Product
Of**

**CG CHAUDHARY®
GROUP**
Touching life everyday



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: www.cginspiringlife.com