

Garment Steamer INSTRUCTION MANUAL

Read this manual carefully before operation

 
Pictures in this manual are for reference only, the product in kind prevail.

 


 
 
Model: CGMRGS15W

**This instruction manual contains important information
& recommendations that we would ask you to comply
With to obtain best results from your products.**

A

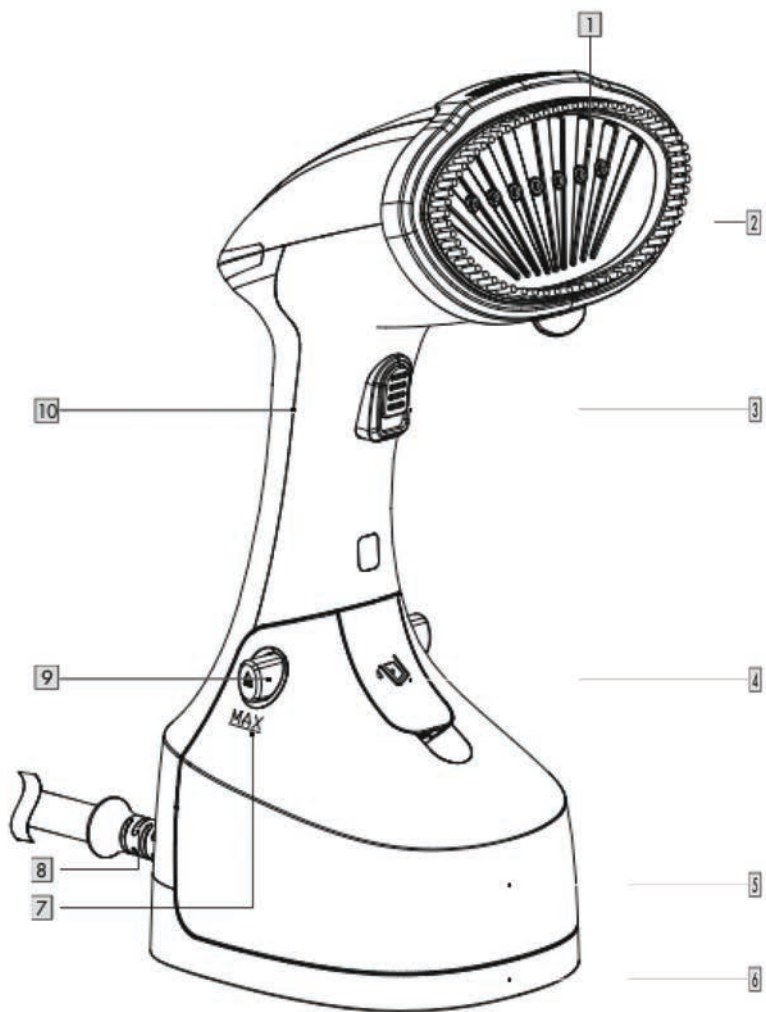

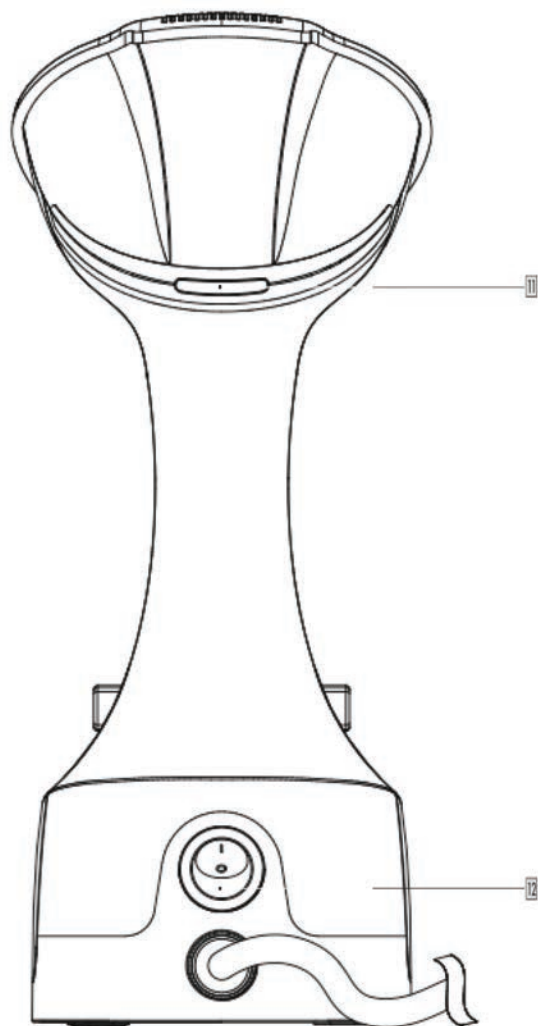

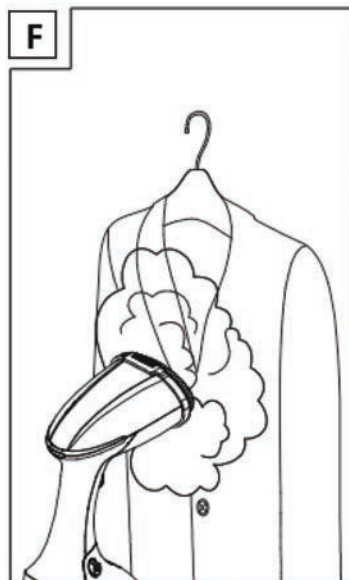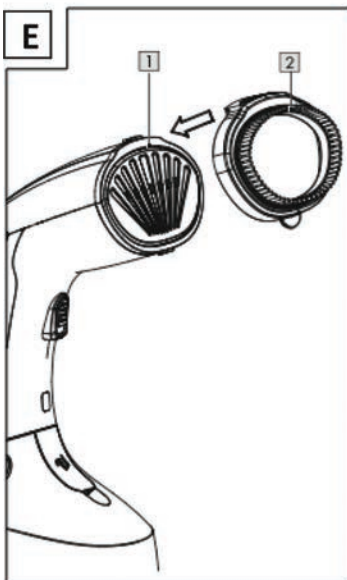













Warnings and symbols used

The following warnings are used in this short manual and on the packaging:

	DANGER! This symbol in combination with the signal word "Danger" marks a high-risk hazard that if not prevented could result in death or serious injury.		Alternating current/voltage
		HZ	Hertz (supply frequency)
		W	Watt
	WARNING! This symbol in combination with the signal word "Warning" marks a medium-risk hazard that if not prevented could result in death or serious injury.		NOTE: This symbol in combination with "Note" provides additional useful information.
			Use the product in dry indoor spaces only.
	CAUTION! This symbol in combination with the signal word "Caution" marks a low-risk hazard that if not prevented could result in minor or moderate injury.		Danger – risk of electric shock!
			CAUTION Hot surface!
	ATTENTION! This symbol with the signal word "Attention" indicates a possible property damage.		This product is classified as protection class I and must be connected to a protective ground.
		CE	CE mark indicates conformity with relevant EU directives applicable for this product.
	Safety information		
	Instructions for use		

GARMENT STEAMER

• Short Manual

This document is a shorter printed version of the complete user manual.

The short manual forms an integral part of this product. Prior to using the product, familiarize yourself with all operation and safety notes. Store the short manual in a safe place, and if you give the product to third parties, all documentation should be passed on to them as well.

● Intended use

This product is intended for steam smoothing of textiles. Do not use it for any other purpose.

This product is only intended for private household use, not for commercial purposes.

The manufacturer accepts no liability for damages caused by improper use.

● Scope of delivery

After unpacking the product, check if the delivery is complete and if all parts are in good condition. Remove all packing materials before use.

- 1x Garment steamer
- 1x Removable water tank
- 1x Brush
- 1x Instruction manual

● Description of parts

(Fig. A)

- 1 Steam nozzles
- 2 Brush
- 3  (Steam button with lock)
- 4  (Water tank opening)
- 5 Water tank
- 6 Base
- 7 **MAX** marking (max. water fill level 250 ml)
- 8 Power cord (with anti-kink protection and cable clip) and power plug
- 9  (Release buttons – on both sides of the water tank)
- 10 Handle

(Fig. B)

- 11 LED
- 12 On/off switch (O/I)

● Technical data

Model	CGMRGS15W
Rated input	220-240 V~, 50–60 Hz
Rated power	1500W
Protection class	I



Safety instructions

BEFORE USING THE PRODUCT, PLEASE FAMILIARISE YOURSELF WITH ALL OF THE SAFETY INFORMATION AND INSTRUCTIONS FOR USE! WHEN PASSING THIS PRODUCT ON TO OTHERS, PLEASE ALSO INCLUDE ALL THE DOCUMENTS!

In the case of damage resulting from non-compliance with these operating instructions the warranty claim becomes invalid! No liability is accepted for consequential damage! In the case of material damage or personal injury caused by incorrect handling or non-compliance with the safety instructions, no liability is accepted!

Children and persons with disabilities

⚠ WARNING! RISK OF LOSS OF LIFE OR ACCIDENT TO INFANTS AND CHILDREN!

Never leave children unsupervised with the packaging material. The packaging material represents a danger of suffocation.

Children frequently underestimate the dangers. Always keep children away from the packaging material.

- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Children shall not play with the product.
- Cleaning and user maintenance must not be performed by children without supervision.

Intended use

- △ **WARNING!** Misuse may lead to injury. Use this product solely in accordance with these instructions.
Do not attempt to modify the product in any way.

Electrical safety

- △ **DANGER! Risk of electric shock!** Never attempt to repair the product yourself.

In case of malfunction, repairs are to be conducted by qualified personnel only.

- △ **WARNING! Risk of electric shock!** Do not immerse the product's electrical components in water or other liquids. Never hold the product under running water.

- △ **WARNING! Risk of electric shock!** Never use a damaged product. Disconnect the product from the power supply and contact your retailer if it is damaged.

- Regularly check the power plug and the supply cord for damages. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Ensure the rated voltage shown on the rating label corresponds with the voltage of the power supply.

Use

△ **WARNING! Risk of**

injury! Turn off the product and disconnect it from the mains before cleaning and when the product is not in use.

- The product must not be left unattended while it is connected to the mains.
- The power plug must be removed from the power outlet before the water tank is filled with water.
- The product must be used and rested on a flat, stable surface.
- When placing the product on its base, ensure that the surface on which the base is placed is stable.
- The product is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Do not operate the product with a damaged power cord or plug, when the product malfunctions or has been damaged in any manner.
- Only use the product in dry indoor rooms.
- Do not operate the product with wet hands or while standing on a wet floor. Do not touch the power plug with wet hands.
- Protect the product against heat. Do not place the product close to open flames or heat sources such as stoves or heating appliances.
- Protect the power cord against damages. Do not let it hang over sharp edges, do not squeeze or bend it. Keep the power cord away from hot surfaces and open flames and ensure that nobody can pull on or trip over it unintentionally.
- Stop using the product if the anti-kink protection on the power cord is damaged!
- Do not pull the power plug out of the power outlet by the power cord. Do not wrap the power cord around the product.
- Protect the product, its power cord and power plug against dust, direct sunlight, dripping and splashing water.
- Store the product in a cool, dry place, protected from moisture and out of the reach of children.

Burn hazards

- Care should be taken when using the product due to the emission of steam.
- Touch the heated-up product by its handle only.
- Steam is very hot. Never put your hands in front of the steam nozzles.
- Never touch the steam nozzles in operation or while heated up (e.g. to test the temperature).
- Keep the product and its cord out of reach of children less than 8 years of age when it is energized or cooling down.

● Before first use

- Remove the packaging. Check if all parts are complete.
- Clean the product (see "Cleaning and care").

① **NOTE:** The product may give off some vapours or odours during first use. These are production or transport residue that will quickly subside. There may also be quiet noises such as clicking or crackling. These will also quickly subside once the plastic parts have finally adjusted to the operating conditions.

● Operation





- Filling/draining the water tank

⚠ DANGER! Risk of electric shock! Before filling the water tank [5], Disconnect the power plug [8] from the power outlet.

① NOTES:

- Fill the water tank [5] with tap water or distilled water without any additives. Use the following mixtures according to your regional water hardness:

Water hardness	Water
Soft	Tap water
Medium hard	Distilled and tap water (Ratio: 1:1)
Hard	Distilled water
Your local water utility can inform you about your region's local water hardness.	

- The water tank [5] has a filling capacity of approximately 250 ml.
- The **MAX** marking [7] for the maximum filling capacity applies when the water tank [5] is positioned vertically.
- **Filling the water tank [5]:** Press the release buttons  [9]. Pull the water tank out of the product (Fig. C). Pour water via the water tank opening  [4] into the water tank. Do not exceed the **MAX** marking [7]. Close the water tank opening . Wipe off water splashes. Reinsert the water tank into the product (Fig. D). The water tank clicks into place audibly.
- **Draining the water tank [5]:** Remove the water tank. Pour out the water through the water tank opening  [4].

● Removing/attaching the brush

(Fig. E)

⚠ WARNING! Risk of burns! Wait until the product has cooled down before removing or attaching the brush [2].

①





NOTE: The product can be used with or without the brush [2].

- **Removing the brush [2]:** Carefully pull the brush off the upper bracket.
- **Attaching the brush [2]:** Press the brush onto the steam nozzles [1]. The upper bracket must engage.

● Steam smoothing clothes

- **Preparation:** Hang the clothes on a clothes hanger or a rail.

⚠ ATTENTION! Risk of property damage! Before steam smoothing: Check the ironing instructions to determine if the clothes are suitable for use with this product:

Ironing instructions	Suitable
	Yes
	Yes
	Yes
	No
Ironing instructions can often be found on a label sewn to the clothes.	

If there should be no label: First try steam smoothing on an inconspicuous piece of the clothes.

⚠ ATTENTION! Risk of property damage!

Do not treat leather, velvet, impregnated furniture or materials that are sensitive to steam.
Do not touch materials that are sensitive to heat (such as synthetic materials such as polyamide or rayon) directly with the hot steam nozzles [1]. Only use the steam smoothing function.

- Connect the power plug [8] to a suitable power socket. Set the on/off switch [12] to the I position.

LED [11]	Description
Flashing (blue)	Product warming up
Continuously on (blue)	Product ready for steam smoothing

- Ejecting steam: Push in  [3].

⚠ WARNING! Risk of burns!


When steam smoothing, always point the steam nozzles [1] towards the clothes (Fig. F).
Never steam smooth clothes while they are being worn.
Allow the clothes to cool down on a clothes hanger before wearing them.


- Slightly stretch the clothes with one hand. Steam smooth the clothes by moving over them with the brush [2]. Keep your hands away from the steam.
- Apply light pressure on the clothes with the brush [2]. Move the brush back and forth in a straight line.


① NOTES:

- After washing: Hang up the clothes (e.g. on a clothes hanger). The clothes thus dry with fewer creases.
- The product cannot produce strong creases or a smooth, ironed appearance. For such needs, an iron is more suitable.
- While steam smoothing: The clothes absorb moisture. Allow the clothes to dry completely before storing them in your wardrobe.


Continuous steam operation

During continuous operation, hot steam exits out of the steam nozzles [1] without the need to keep pressing in  [3].

Continuous steam operation	
Start continuous operation	Press in  [3]. Move down the lock [3].
Stop continuous operation	Move up the lock [3].

- If water drips out of the steam nozzles [1]: Pull up the lock [3]. Release  [3]. The products heats up now.

① NOTES:


- When the water tank [5] is emptied during continuous steam operation, the product turns off automatically after approx. 40 seconds. The red LED [11] flashes. Release  [3]. Fill water into the water tank (see "Filling the water tank").


- The product turns back on automatically when the steam button [3] is pressed.

● Steam smoothing curtains and upholstery

- Remove creases and wrinkles from curtains and upholstery by hanging these over a railing and then tightening them.
- Before steam smoothing: Always carry out a test on an inconspicuous piece of the fabric.
- Steam the curtains/upholstery (see "Steam smoothing clothes").
- When using the product horizontally: Hold the product vertically from time to time to maintain the maximum steam power.

● Stop steam smoothing

- Move up the lock [3], if applicable. Release  [3].
- Place the product, with its base [6], on a flat and stable surface.
- Set the on/off switch [12] to the O position. Disconnect the power plug [8] from the power socket.

① **NOTE:** When  [3] is released, the product stops heating automatically after approx. 15 minutes. The red LED [11] flashes until the product switches off.

- Let the product cool down (for approx. 15 minutes). Do not leave the product unattended while it is still hot.
- Empty the water tank [5] after each use to prevent limescale (see "Filling/draining the water tank").

● Cleaning and care

⚠ DANGER! Risk of electric shock! Before cleaning or maintaining the product: Disconnect the power plug [8] from the power outlet.

⚠ WARNING! Do not immerse the product's electrical components in water or other liquids. Never hold the product under running water.

- Wipe down the product with a slightly damp cloth.
- Do not use any abrasive, aggressive cleaners or hard brushes to clean the product.
- Let all parts dry completely after cleaning.

● Descaling

- Use a commercially available descaling agent.
- Mix a solution of descaling agent and water. Fill the solution up to the MAX marking [7] in the water tank [5]. Insert the water tank into the product.

⚠ WARNING! Follow the instructions of the descaling agent's manufacturer when mixing the solution.

- Let the solution work according to the instructions of the descaling agent's manufacturer.
- Connect the power plug [8] to a suitable power outlet.
- Wait until the product has reached its operating temperature (the LED [11] lights up permanently).

- Let the steam escape over a sink until no debris or dirt is left.
- Disconnect the power plug **8** from the power socket.
- Empty the water tank **5**. Rinse the water tank with clear water.
- To rinse the internal pipes, use clear tap water to generate steam (see “Steam smoothing clothes”) .

● **Disposal**

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities .



Observe the marking of the packaging materials for waste separation, which are marked with abbreviations (a) and numbers (b) with following meaning: 1–7: plastics/20–22: paper and fiberboard/80–98: composite materials .

Product:



Contact your local refuse disposal authority for more details of how to dispose of your worn-out product .



To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste . Information on collection points and their opening hours can be obtained from your local authority .

A Quality Product Of



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: www.cginspiringlife.com