

# Rice Cooker INSTRUCTION MANUAL

Read this manual carefully before operation


Pictures in this manual are for reference only, the product in kind prevail.



**Model: CGMRRC1003**

**This instruction manual contains important information  
& recommendations that we would ask you to comply  
With to obtain best results from your products.**

## PARTS IDENTIFICATION

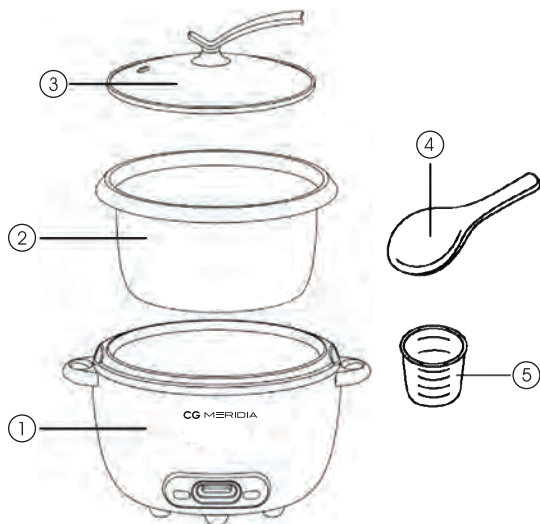

- ① Main Body
- ② Inner Cooking Pot
- ③ Lid
- ④ Rice Scoop
- ⑤ Measuring Cup

## PRODUCT SPECIFICATION

Model	CGMRRC1003
Power	220~240V/50Hz
Capacity	1.0L/5 cups
Package size	290x236x238mm
Net Weight	2.35 Kg

## IMPORTANT SAFEGUARDS

1. Read all instructions carefully before you operating this appliances. Pay particular attention to all safety precautions. Retain the instructions for future reference.
2. This appliance must be used in strict accordance with manufacturer's instructions as described in this manual.
3. Do not touch hot surfaces. Always use handles.
4. To prevent electrical hazards do not immerse power cord, power plug and rice cooker (heating plate) in water or any other liquids.
5. Close supervision is necessary when using any appliance near children. Children should be supervised to ensure that they do not play with the appliance. Keep out of children's reach at all times.
6. Unplug appliance from power outlet when not in use and before carrying out cleaning and maintenance. Always allow appliance to cool down completely before assembling or disassembling parts.
7. Do not operate appliance if power cord has been damaged, or if appliance malfunctions. Return appliance to your nearest authorized service facility for examination, repair or adjustment.
8. **WARNING:** use if non-recommended accessory & attachments may cause hazards.
9. This appliance is only intended for indoor use. Do not use this appliance outdoors.
10. Do not allow the power cord to hang over edge of table or counter, or come into contact with hot surfaces.
11. Do not place appliance on or near gas or electric burners, or heated ovens.
12. Extreme caution must be used when moving when appliance containing hot oil or other hot liquids.
13. Do not connect the power plug into an extension cord. Always connect directly to a power supply outlet, not extension cords.
14. To disconnect appliance from the power supply outlet, detach by pulling on the power plug and not the power cord.
15. Do not use appliance for other than intended use.
16. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities or lack experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. If the power cord is damaged, it must be inspected and repaired/replaced by the manufacturer or other suitably qualified persons.

## OPERATING INSTRUCTIONS

Read all instructions carefully before using the appliance.

1. Use this appliance only with the recommended AC power supply outlet (230V a.c.).
2. Be sure to unplug the power cord when the pan is not inside the cooker, or when the cooker is not to be used.
3. **Note:** The "KEEP WARM" function will be activated whenever the power cord is plugged in.
4. DO NOT forcibly press the "COOK" button down if you encounter difficulties in pressing it into position. This difficulty occurs only if pan is not fully inserted or when cooking has just completed.
5. Always ensure lid is completely closed after serving to prevent rice from drying or discoloring.
6. Never leave the rice spoon or other utensils in the pan when using "KEEP WARM" function.
7. Do not use the "KEEP WARM" function to reheat rice that has been previously cooked.
8. The inner pot and surface of the heater plate must always be free of foreign matter to prevent malfunctions.

THIS PRODUCT INTENDED FOR HOUSEHOLD USE ONLY

**Note:** The "KEEP WARM" function will be activated whenever the rice cooker is plugged into a power supply outlet.

## CARE & CLEANING

After using the rice cooker, unplug the power cord from the power supply outlet and allow it to cool down completely before carrying out cleaning and maintenance works.

1. Remove inner pot and lid wash them in hot sudsy water, taking care to rinse completely, then dry with a soft cloth.
2. Clean the cooker's exterior using a clean damp cloth, Never clean any part of the cooker with abrasive or harsh cleaning agents. Instead, use a damp cloth or sponge with water and mild dish detergent. Do not submerge any part of the cooker in water except the inner pot and lid.
3. Grains of rice, or other foreign matter may stick to the heating plate. Use a knife or similar instrument to dislodge it from the appliance.
4. If necessary, steel wool can be used to use to smoother and polish the area between the heating element and bottom of the inner pot to ensure good contact.
5. Improper cleaning of the appliance may result in unpleasant odors during next use.
6. **Note:** Any vinegar or salt residues may corrode the pan finishing. Always clean the pan after every use.

## HOW TO USE

1. Measure rice with measuring cup (included). One cup of uncooked rice makes approximately 3 cups cooked rice. Wash rice in a separate bowl until water is relatively clear.
2. Place washed rice into the pan. Add water in the cooking pot according to the following measurements:

### USING THE MEASURING CUP (For all types)

Raw rice by cup	Water added to the line on pot
5 cups	5 - 5½ cups
4 cups	4 - 4½ cups
3 cups	3 - 3½ cups
2 cups	2 - 2½ cups

3. Set pan into rice cooker. To place correctly, turn pan gently to the right and left. Close the cover firmly.
4. Connect power cord to the cooker and plug it into the power supply outlet. Do not plug it in until ready to cook. Otherwise, rice may be spoiled.

**Note:** The appliance will not operate if the pan is not inside it.

5. Press switch. The COOKING indicator light indicates that the cooking has begun.
6. When the rice is done, the switch will pop up and click will sound. At the same time "COOK" light will be extinguished and the "KEEP WARM" light will illuminate, indicating the "KEEP WARM" function has been activated to keep rice warm.
7. After the switch pops up, leave cover for 6-8 minutes to steam rice.
8. Unplug from power supply outlet after use.

### COOKING TIPS

### WASHING RICE

Bran gives an unpleasant odor to cooked rice. To remove bran, rice should be washed thoroughly in lukewarm water. However, washing rice may result in the loss of vitamins and minerals.

### "KEEP WARM" FUNCTION

Using this function for more than 12 hours may cause discoloration or odor. The sooner rice is served, the better it will taste. "KEEP WARM" function should be used during meals.

## ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!  
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

This appliance is intended to be used in household and similar application areas in shops, offices and other working environments.

Farm houses by clients in hotel, motels and other residential type environments.

Bed and breakfast type environments.

**A Quality Product  
Of**

**CG CHAUDHARY®  
GROUP**  
*Touching life everyday*



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT  
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: [www.cginspiringlife.com](http://www.cginspiringlife.com)