

Quarzt Heater INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



Model: CGQH22B & CGQH80W

This instruction manual contains important information
& recommendations that we would ask you to comply
With to obtain best results from your products.

DEAR CUSTOMER,

We thank you very much for having purchased one product of ours. We kindly ask you to read and save this instruction manual.

FEATURES

1. Feel Warm at all angles
2. Fashionable Design
3. Warms up Quickly
4. Instant Heat accompanied by a cozy Glowing Light
5. Select between different Heating Powers.

TECHNICAL DATA

Model	Spec.	Voltage/Frequency	Package(mm)	Power(w)	N.W/G.W(kg)
CGQH80W	2tubes	220-240V~50-60Hz	310x105x400	800	1.0/1.2
CGQH80R	2tubes	220-240V~50-60Hz	310x105x400	800	1.0/1.2

OPERATING INSTRUCTIONS

- Remove the packaging and make sure that the appliance is intact.
- The appliance must always be placed on a firm and leveled surface and insert the both feet into the hole of the appliance at back before use
- Insert the power cord and always make sure the heater is placed on a firm and level surface, otherwise the safety anti tilt switch may inadvertently operate.
- Turn on the heater by pressing either of the two rocker switches on the front of the heater to cause the elements to light. When one element is lit, the heater is giving out 400W. When both elements are lit, the heater is giving out 800W. After use, always ensure that the heater is switched off and unplugged from the main supply.

CAUTION

- The appliance must always be placed on a firm and leveled surface and make sure that heater is in clear view at all times.
- Always check that there is nothing flammable in front of or to the rear and sides of the heater, and always make sure that nothing can either drop or fall onto the heater. Make sure that nothing which may melt is placed too close to the heater. Always make sure that there are no flammable liquids or materials in the immediate vicinity of the heater.
- Never use the heater in wet or damp conditions such as shower room, bathroom, or anywhere near a swimming pool, hot tub or Jacuzzi.
- The correct operation of the appliance is obtained when the heater is placed vertically.
- When the appliance is not in use switch it off and unplug it.
- Never use the heater outdoors.
- Never leave the heater unattended for any period of time or if there are children or animals
- Before cleaning the heater or carrying out any maintenance, switch off and unplug the heater. Never use water to clean the heater or allow water to spill onto it as this may cause a short circuit resulting in a risk of fire.

MAINTENANCE

- The appliance only needs an external cleaning.
- After use and before cleaning always unplug the appliance and wait until it cools down.
- Clean the grilles from dust.
- Please use a moistened cloth to clean painted parts, do not use any other solvents.

WARNING

- The heater must not be located immediately below a socket outlet.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**A Quality Product
Of**

**CG CHAUDHARY®
GROUP**
Touching life everyday



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.