



Wall Mount Heater INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



Model: CGWMH20RB

**This instruction manual contains important information
& recommendations that we would ask you to comply
With to obtain best results from your products.**

**CG CHAUDHARY[®]
GROUP**
Touching life everyday

PLEASE READ ALL INSTRUCTIONS BEFORE USING

Type	Specification	Voltage	Frequency	Power
CGWMH20RB	Remote Control	220-240V~	50-60Hz	2000W

IMPORTANT SAFEGUARDS

 
 
Thank you for buying our product. Please read this instruction carefully before operating the heater. Keep this operating instruction for future reference.

1. The heater should be hung on the wall and make the wind outlet down or be placed on flat appliance. You must not place it precipitately or tipsily.
2. Please do not use the heater in the place where full of combustible or explosive gas. Don't cover the wind outlet.
3. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
4. The heater must not be located immediately below an electrical socket. The electrical socket must be equipped with earth wire, its capacity should be 250V~10A or exceed 250V~10A. The socket and the power plug should be in good connecting condition.
5. If nobody is in using or you are repairing the heater, please pull off the plug.
6. Please don't touch the heater by the wet hand or other conductor.
7. If motor is not working properly, please stop it immediately.
8. During using the heater, please do not open the door or window continually otherwise it will influence the heating effect.
9. If want to shut off the heater, press the on/off switch to off, then the heater will keep the fan working 30 seconds until it blowing out cool wind, then the heater will stop working, and you may pull off the plug.
10. Do not use this heater in bathroom.





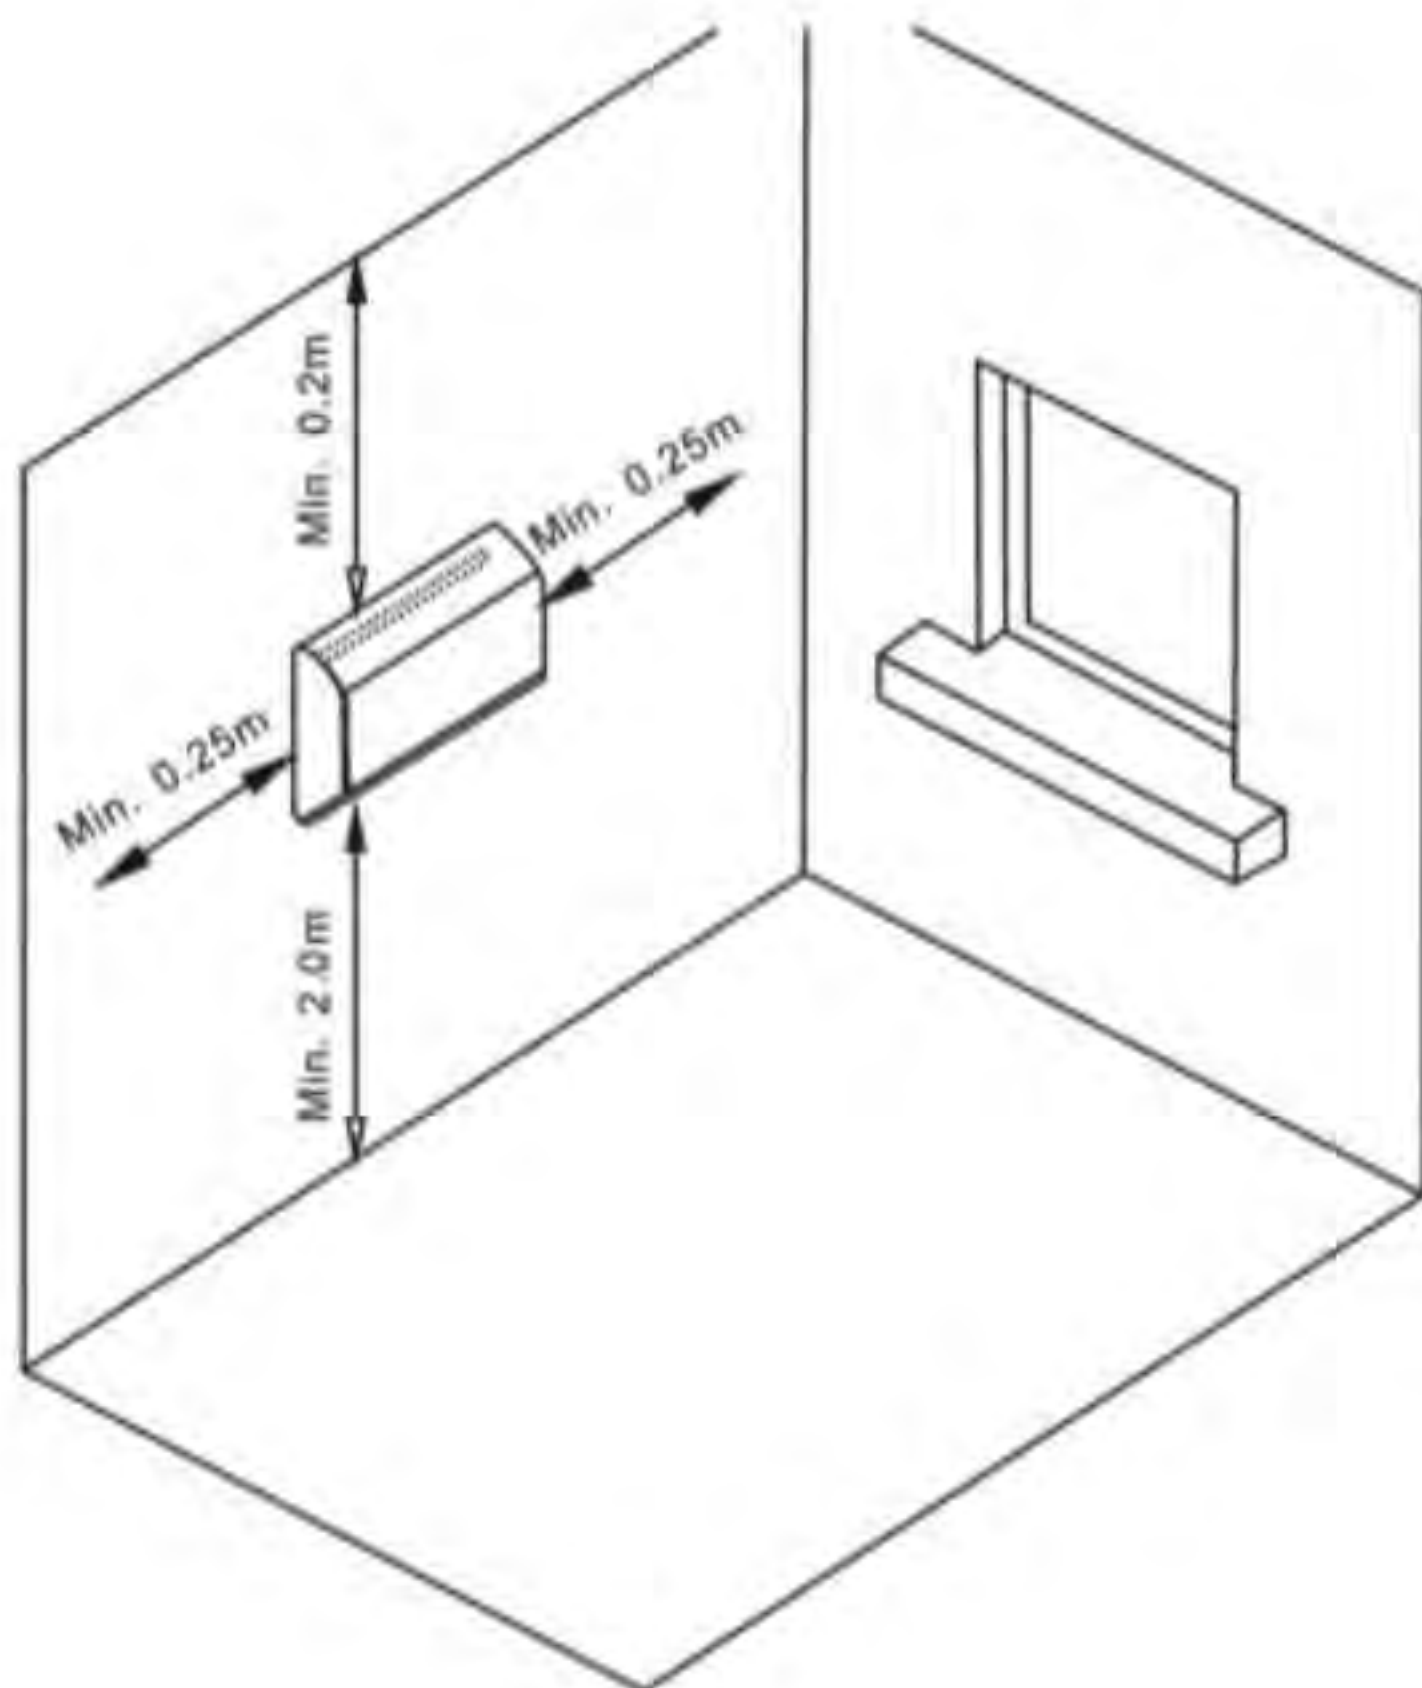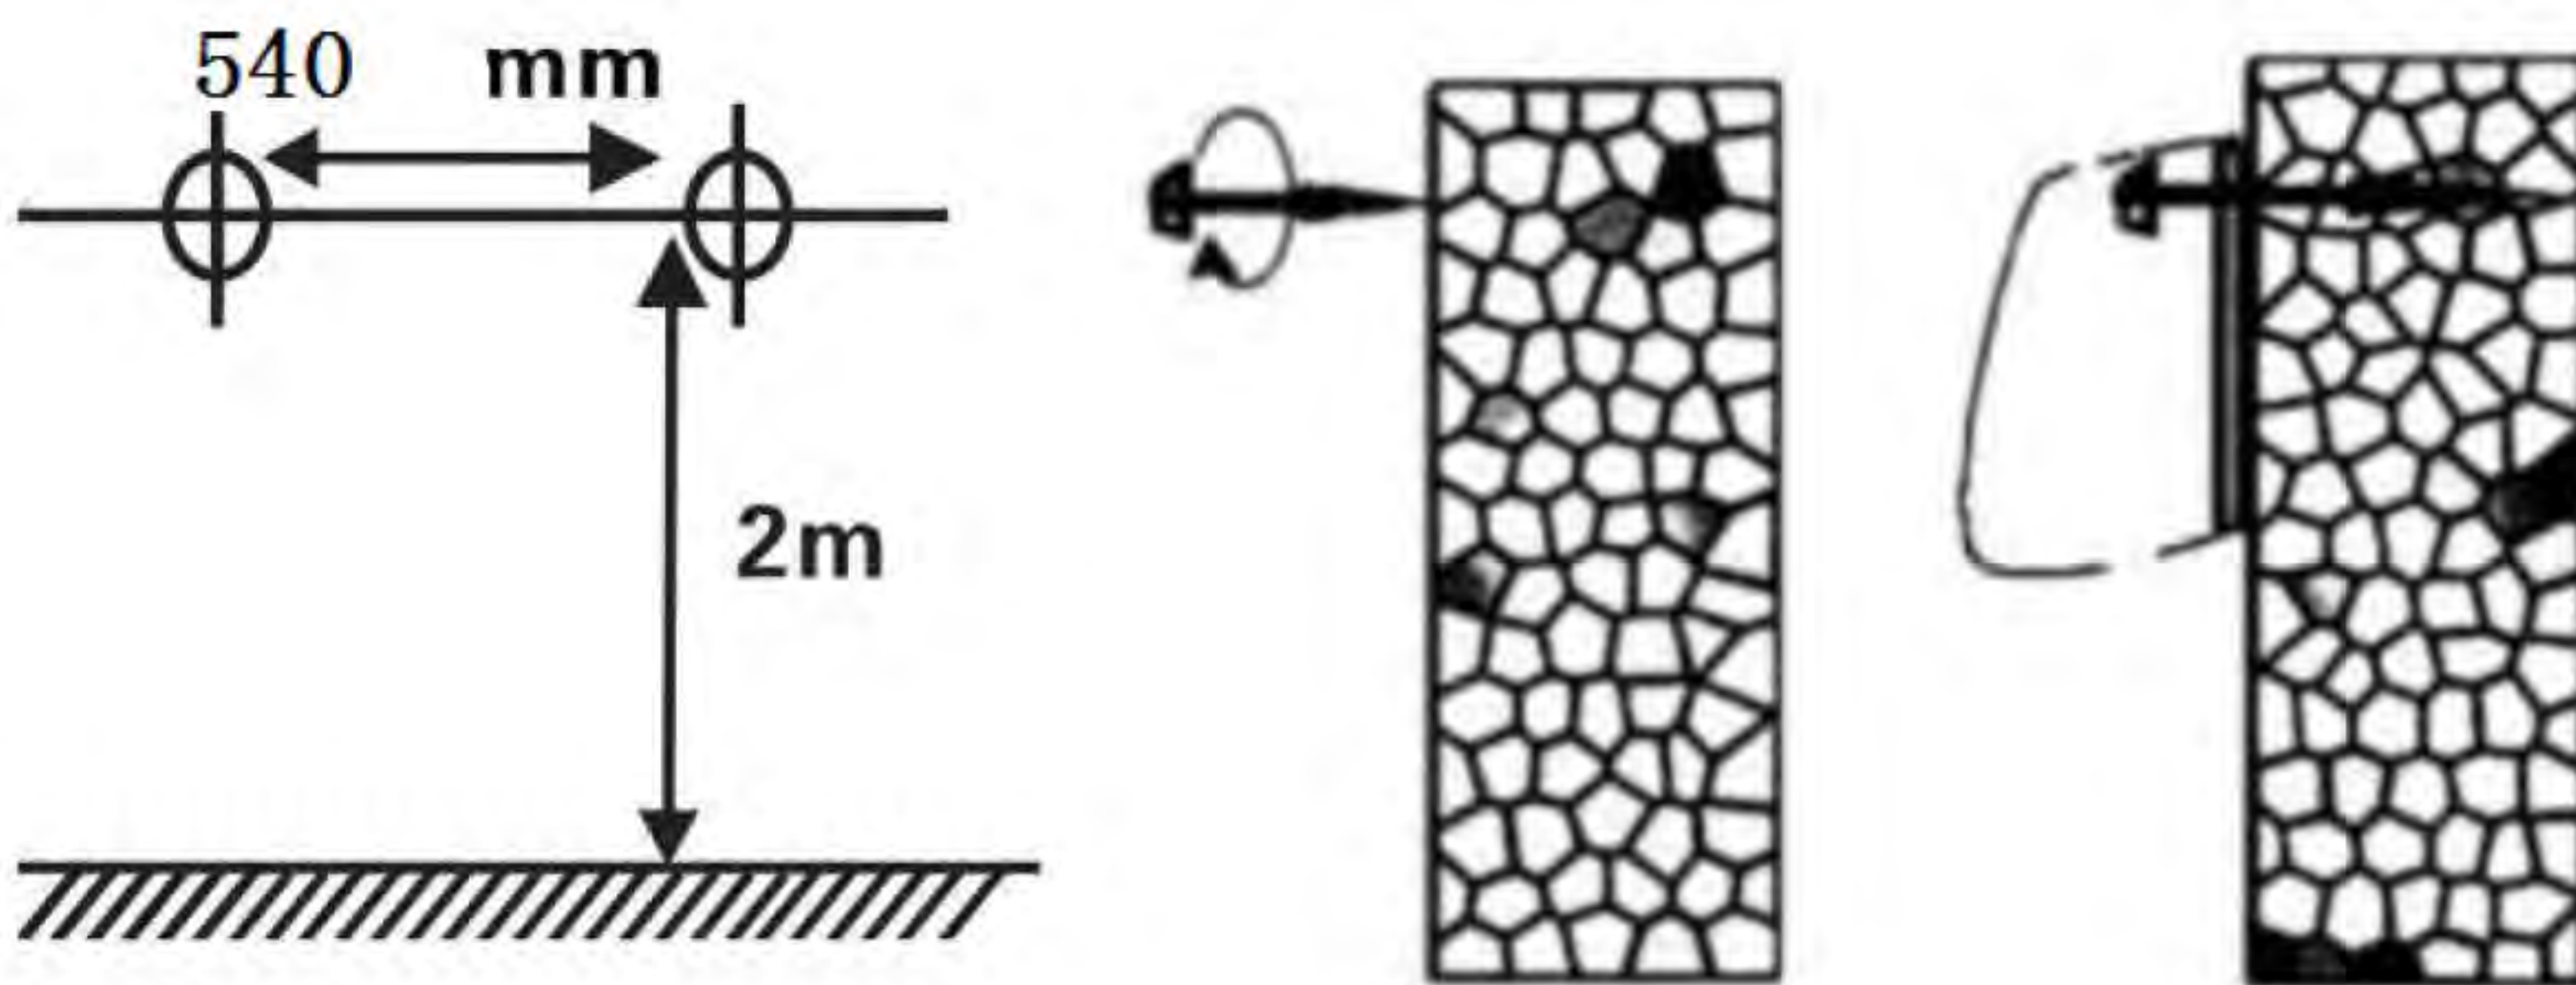

11. Timer sets the heater working time.
12. Remote control, please use 2 batteries.
13. The battery must be removed from the appliance before it is scrapped.
14. The battery is to be disposed of safely.
15. The heater must be installed at least 2 m above the floor.
16. If the heater needs repair, please ask for special person or our company authorized maintenance department.
17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
18. Children of less than 3 years should be kept away unless continuously supervised.
19. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
20. CAUTION —some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

INSTALLATION OF THE APPLIANCE

Get two holes on the wall 2 meters above the floor and near the corner more 20 mm, be sure to make the diameter just as same as the expanding pipe. Fix two screws on the expanding pipe, keep the tips of the screws out for 10mm, and hang up the machine after the screws are fixed enough.



OPERATING INSTRUCTIONS

1. The heater was made of high-quality plastic shell, firmness and durable. PTC ceramic heater elements, high efficiency heating, noiseless, odor-free, no pollution, no flame and no need oxygen.
2. Plug into any 220-240V, 50Hz, AC source. The heater is standby, LED will display room temperature; then please use remote control or button on control panel to set power and time.
3. Turn on the heater by press the “” button on control panel, will be into “FAN” mode, and blow the natural wind.
4. Press the “” button, will set the heater into low heat mode.
5. Press the “” button again, will set the heater into high heat mode.
6. Press the “” button, the louvers will oscillate automatically.
7. Press the “” button to set the timer as follows: 0.5H, 1H, 1.5H.....7.5H.
8. When turn off the heater, press “” button once again. Fan keeps working for 30 seconds to blow the natural wind and cool down the heater inside (after heating).

TIMER FUNCTION

This function will work in any mode. The time function allows you to set the time of operation from 0.5 hour to 7.5 hours. Press the time button in the control panel, press one time will increase the time of operation by 0.5 hour, the most 7.5 hours.

REMOTE CONTROL INSTRUCTION



1. Install 2x AAA batteries
2. All the functions performed with the remote-control work identically to the panel control.
3. When don't use the remote control, remove the batteries before storage.

“ON/OFF”

Press the button the power is on; the appliance blows out natural wind.
Press again, the power is off.

“+”

Press the button to adjust the higher temperature (max. 49°C) .

“-”

Press the button to make the temperature lower (min.10°C)

“Mode”

You can select 2 powers 1000W/2000W through this button.

“Timer”

Press the “Timer” button to set the timer as follows:
1H,2H,3H,4H,5H,6H,7H,8H; it can be showed by the LED display.

“Swing/Cancel”

Press the “Swing/Cancel” button, the louvers will oscillate automatically.


OVERHEAT PROTECTION

The heater is protected with an overheat protector that switches off the

 
heater automatically in case of overheat. e.g., due to the total or partial obstruction of the grids. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove the object which is obstructing the grids. Then switch it back on as described above.

CLEANING AND MAINTENANCE

1. If you don't use the heater for a long time, please wipe the surface and put it into the box. Lay the carton on the ventilated and dry place. Humidity and force press was prohibited.
2. Wait for the machine being cool and pull out the plug, then clean it. Wipe it clean with wet washcloth or cleaner. Never directly wash with water; do not drop the water into the machine. Never clean it with acids, chemical thinner, gasoline, benzene etc.
3. Before use it again, please check it and make sure the outlet ventilation has no any sundries.

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

**A Quality Product
Of**

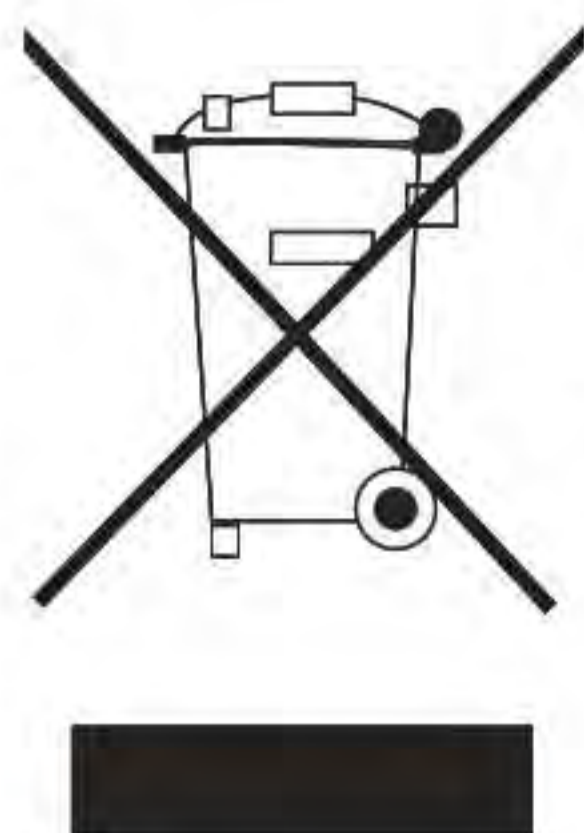

**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: www.cginspiringlife.com