



# Mixer Grinder

## INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



**Model: CGMG600C**

This instruction manual contains important information  
& recommendations that we would ask you to comply  
With to obtain best results from your products.

**CG CHAUDHARY®**  
GROUP  
*Touching life everyday*

# INTRODUCTION

Congratulations on your purchase of

## CGMG600C Mixer Grinder

### IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using the product.

- Use only 230V, 50Hz AC power supply.
- The mixer grinder is for household use only. Do not use outdoor or for commercial purposes.
- Do not operate the appliance if it has malfunctioned or has been damaged in any manner. Never try to repair the product by yourself.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or given instructions concerning the usage of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Before using, place the appliance on an even, stable surface; operate according to the instructions given.
- Keep the mixer grinder at least 6" (150 mm) away from the walls for proper ventilation.
- Do not place the mixer grinder on a wet surface.
- Sufficient space should be available around the mixer grinder for keeping the various items and ingredients required.
- Always ensure that speed selector is at OFF position before fixing accessories.
- Never try to touch the moving parts or blades of the mixer grinder while in operation.
- The blades are sharp and should be handled very carefully. Wash them under running water and do not rub them by hand.
- Never operate the mixer grinder without the jar lid or dome in place.
- Always make sure the jar has been locked in the slot before operating.
- Never operate the mixer grinder without any load in the jar.
- Handle the jar and the main unit with care.
- Always unplug the appliance before reaching in to the jar with your fingers or an object eg. spatula.
- Do not operate the appliance for other than its intended use.

# DESCRIPTION OF PRODUCT



- 1. Blending Jar Lid
- 2. Blending Jar
- 3. Motor unit
- 4. Switch knob
- 5. Over Load Protector
- 6. Blending Jar Locking Groves

- 7. Dry Grinding Jar
- 8. Dry Grinding Jar Lid
- 9. Dry Grinding Jar Locking Groves
- 10. Chutney Jar Locking Groves
- 11. Chutney Jar
- 12. Chutney Jar Lid

# GENERAL INSTRUCTIONS

- 3 position rotary switch : By turning the switch clockwise you can select the desired speed.
- Pulse function : Turn the switch knob anti clockwise from the OFF position to use the pulse function
- Always turn the switch to the OFF position before storing the appliance for next use, to avoid accidents.



Fig. 1

## HOW TO USE

### CHUTNEY JAR

The chutney jar (refer figure 2) is used for for small quantity grinding such as green chutney, red chilli, coconut chutney, pepper etc.

**NOTE: JAR CAPACITY: 500 ml**  
**MAX. USABLE CAPACITY: 200 ml**

- Always ensure proper fixing of the jar lid. Keep a hand on the jar lid while on operation.



Fig. 2

### DRY GRINDING JAR

The dry/wet grinding jar (refer figure 3) is used for grinding items like garam masala, wet masala, idly batter etc.

- Use small pieces of ingredients for grinding.
- Add water as per requirement , in case of wet grinding.
- Put the Jar lid on the top of the jar & lock it by using lid clips
- Grind at "MED" Speed for 15-30 seconds and then move to "HIGH" speed.

**NOTE: JAR CAPACITY: 1.2 Ltr.**  
**MAX. USABLE CAPACITY: 350 ml**

- Always ensure proper fixing of jar. Make sure the Jar Lid locking clips are properly adjusted.
- Always move gradually from lower speed to higher speed.
- During grinding process, the jar might get heated up due to friction. Do not panic, this is normal.



Fig. 3

## BLENDING JAR

The blending jar (refer figure 4) is used for blending shakes

- Use small pieces of ingredients for blending.
- Add water as per requirement.
- Put the Jar lid on the top of the jar & lock it by using lid clips
- Blend at "MED" Speed for 15-30 seconds and then move to "HIGH" speed.



Fig. 4

**NOTE: JAR CAPACITY: 1.5 Litres Jar  
MAX. USABLE CAPACITY 750ml**

- Always ensure proper fixing of jar. Make sure the Jar Lid locking clips are properly adjusted.
- Always move gradually from lower speed to higher speed.
- During grinding process, the jar might get heated up due to friction. Do not panic, this is normal.

## OVER LOAD PROTECTION (OLP)

- The overload protector (OLP) is designed to protect the motor from burning.
- In case of an overload the blade of the jar stops rotating and the motor gets jammed and starts heating up. The OLP trips off and the motor stops automatically.
- Turn the knob to off position and remove the jar.
- Let the motor cool down for a couple of minutes and then reset the OLP by pressing the red button situated at the bottom of the body.
- If you have to reset the OLP again and again, try reducing the quantity in the jar.



Fig. 5

## USE & CARE / PRECAUTION

- Before starting the mixer grinder for the first time or after a long period of non usage, rotate the motor shaft with hand to ensure that it turns freely and smoothly. Make sure the unit is not connected to the electric supply source.
- Similarly rotate the jar coupler to ensure the blade turns freely and smoothly as well.
- Insert the jar collar into the motor body and twist it to lock it in the slot.
- Now plug in the power cord and the juicer mixer grinder is ready for use.
- Do not use your mixer grinder without load and make sure the jar lid is in place before operating the appliance.
- Do not operate the mixer grinder unless the attachments are locked into position.
- Do not burden motor with loads heavier than what is recommended.
- The body of the mixer grinder or the supply cord should never be immersed in water while operation or cleaning.
- Never pull the cord to take out the plug from the socket. Grip the plug and pull out of the socket after duly switching off the power supply.
- Always remove the plug from the power supply before cleaning, while emptying or when not in use.
- Store the appliance in a clean and dry place.

**Note :** Flat lid and Chutney lid of the jars must be held by hand during the operation.

## TIPS

- When using for dry grinding, fill the jar up to the level of the blades.
- When using for wet grinding and blending, fill jars up to 2.5 cm from top of jar.
- When using the blending jar for ice crushing place 6 ice cubes or approximately 2 cups of ice at a time.
- Cut all firm fruits and vegetables into pieces no larger than 1.8 cm (1/2 inch) to 2.5 cm (1 inch). Cut all kinds of cheese into pieces no larger than 1.8 cm (1/2 inch).

Caution: Operate only with lids in place.

## GENERAL CLEANING AND CARE FOR THE MIXER GRINDER

- The cleaning of the mixer grinder and jars are very necessary for maintaining smooth operation of the mixer grinder and to maintain proper hygiene.
- After you have used the mixer grinder, use lukewarm water to remove leftover material from the jars and then rinse under running water.
- In order to clean the blades thoroughly, remove the blades by using the spatula (refer figure 6) to loosen the screw by twisting the dome nut on the blade clockwise, while holding the coupler from under the jar.
- When removing the blade please keep the washer safely for fitting again.
- The jars can be cleaned by using regular dishwashing soap.
- After thoroughly rinsing the soap, clean the jars with a dry cloth.
- Never store the jars with the lids fitted. This results in problem of odour in jars. For cleaning the body of the mixer grinder, use a soft wet cloth.
- Do not use any detergent/soap solution on the main body.
- Clean the body with a dry cloth before storage for next use.
- Never immerse the motor in the water for cleaning.

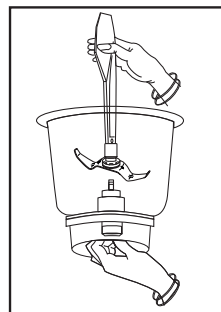


Fig. 6

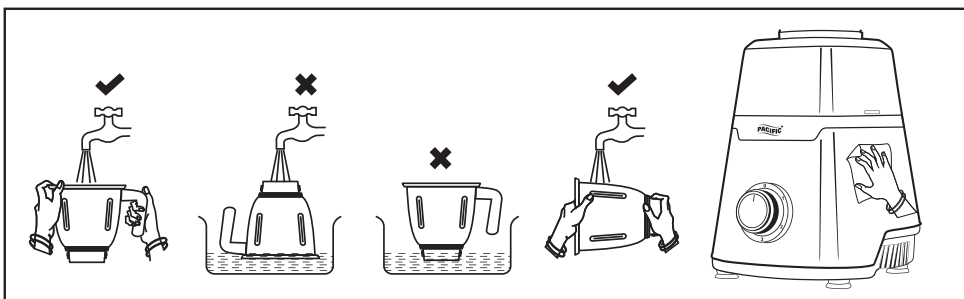


Fig. 7

## ENVIRONMENT FRIENDLY DISPOSAL



### Correct disposal of this product

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle this product responsibly to promote sustainable reuse of material resources.

## A Quality Product Of



**CG**  **Elex**

Scan for Chatbot



### **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: [www.cginspiringlife.com](http://www.cginspiringlife.com)