



Mixer Grinder

INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



Model: CGMRMG75C

This instruction manual contains important information
& recommendations that we would ask you to comply
With to obtain best results from your products.

Congratulations on your purchase of

CGMRMG75C Mixer Grinder

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using the product.

Other Safety Considerations:

- To protect against fire, electric shock and personal injury, do not immerse cord, plug or body in water or any other liquid
- Do not operate the appliance with a damaged cord or plug or after the appliance has been damaged in any manner
- Do not use accessories not recommended by the manufacturer, as there is a danger of fire, electric shock or personal injury
- Do not place on or near a ignited gas burner, electric burner or near a hot oven

Children:

- Do not allow children to use this Mixer Grinder. Children are vulnerable in the kitchen, particularly when unsupervised and if appliances are being used or cooking is being carried out
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching

Main Wire Cord:

- The main wire cord should reach without straining the connections
- Do not let the main cord hang over the edge of a worktop where a child could reach it
- Do not let the wire cord run across an open space e.g between a low socket and table
- Do not let the wire cord run across a cooker or toaster or other hot area, which might damage the cable

Electrical Requirements:

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply, which must be A.C.
- If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted

Overload Protector:

- The Mixer Grinder is protected against the sudden overloads. In case such a situation occurs, then your mixer grinder will automatically turn off
- To restart the unit, please wait for 2-3 minutes to allow the motor to cool down and also remove the cause of overload. Press the button located at the bottom of the mixer grinder to restart the unit

How to Operate and Clean Your Mixer Grinder

How to fit the jars:

Hold the jar and check if the blade moves freely and rotates. Place the ingredients in the jar. Cover the jar with lid. Place the jar on the basic unit then turn it clockwise to lock it in the top socket. Plug in. Support lid gently hand and switch on using the "First" speed and then move on to a higher speed per the requirement. Switch off after operation. For unlocking the jar, turn anticlockwise.

How to use Stainless Steel Dry Grinding Jar:

- This jar can be used for grinding black pepper, roasted coffee seeds, turmeric, coriander, red chillies and Garam masala etc. The jar should not be filled more than 1/2 of the total capacity
- Ensure that the jar is absolutely clean and dry
- Fill the jar with ingredients. Place the lid on the jar and fit the jar on the main
- Grind at 1st speed for 15 seconds and move to higher speeds
- Specially for turmeric grinding, first break into smaller pieces and then grind get best results

How to use Stainless Steel Chutney Jar:

- Chutney jar can be used for fine wet grinding of coriander leaves, coconut, green chilies, chutney etc. The jar must be filled up to the blade level. The jar should not be filled more than 1/2 of the jar capacity
- Put the ingredients into the chutney jar
- Add a small quantity of water during chutney grinding
- Tightly fit the lid on the top of the jar place it on the main unit and lock before starting the mixer grinder
- Stir the ingredients if necessary during grinding
- The ingredients for grinding should not be too large. Cut / break ingredients into small pieces

Cleaning of the jar:

- Pour a little soap and water into the jar, close the lid and run it on the main unit at 1st speed. This dislodges the food particles lodged inside the jar
- Remove the jar and pour out the soap solution and rinse with tap water
- Wipe the area along the blades with wet cloth and then dry
- Wipe the body with a wet cloth and then dry

A Check List for Your Mixer Grinder Juicer

After unpacking your CG Meridia Mixer Grinder, go through the following checklist to familiarize yourself with all the parts.

- | | |
|--------------------------------|-------------------------------|
| 1 Blending Jar Lid | 7 Chutney Jar Lid |
| 2 Blending Jar | 8 Chutney Jar |
| 3 Blending Jar Locking Grooves | 9 Chutney Jar Locking Grooves |
| 4 Motor Unit | 10 Dry Jar Lid |
| 5 Switch Knob | 11 Dry Jar |
| 6 Overload Protector | 12 Dry Jar Locking Grooves |



Safety Precations for Your CGMRMG75C Mixer Grinder

Use of any electrical appliances requires the following basic safety rules:

- Always unplug the machine from the power outlet before putting on or removing the blades and before cleaning.
- Never touch the moving parts, blades, or disc. Keep hands, hair, clothing, spatula, and other utensils away from the Mixer Grinder Juicer during operation, to avoid personal injury or damage to the machine.
- Do not use your Mixer Grinder without dome lids in place over the jars.
- Do not use your Mixer Grinder on wet surfaces, to prevent electrical hazards.
- Do not try to attach or remove the jar while the motor is running.
- Supervise your Mixer Grinder closely while in use. Do not leave it alone while in operation
- Do not run the Mixer Grinder without any load.
- Never place any cloth or plastic sheet under the basic unit, as it may get sucked up and block the ventilation holes in the base, during operation.
- Never use attachments that are not recommended by **CG Meridia**
- Never wash or immerse that basic unit in water.
- The grinder jar may heat up during dry grinding due to friction (it has nothing to do with the motor). Let it cool for a few seconds and then remove.



CG/Elex

Scan for Chatbot

**A Quality Product
Of**

**CG CHAUDHARY®
GROUP**

Touching life everyday



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: www.cginspiringlife.com