 


## Water Dispenser

# INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.

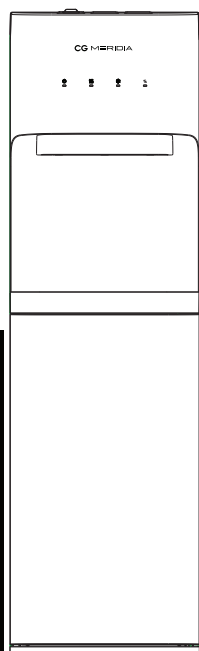 


**Model**  
**CGMRWDECBLB, CGMRWDECBW**

**This instruction manual contains important information  
& recommendations that we would ask you to comply  
with to obtain best results from your products.**

**PLEASE READ THE USER MANUAL CAREFULLY BEFORE USING THE MACHINE**

## **PART DETAILS**

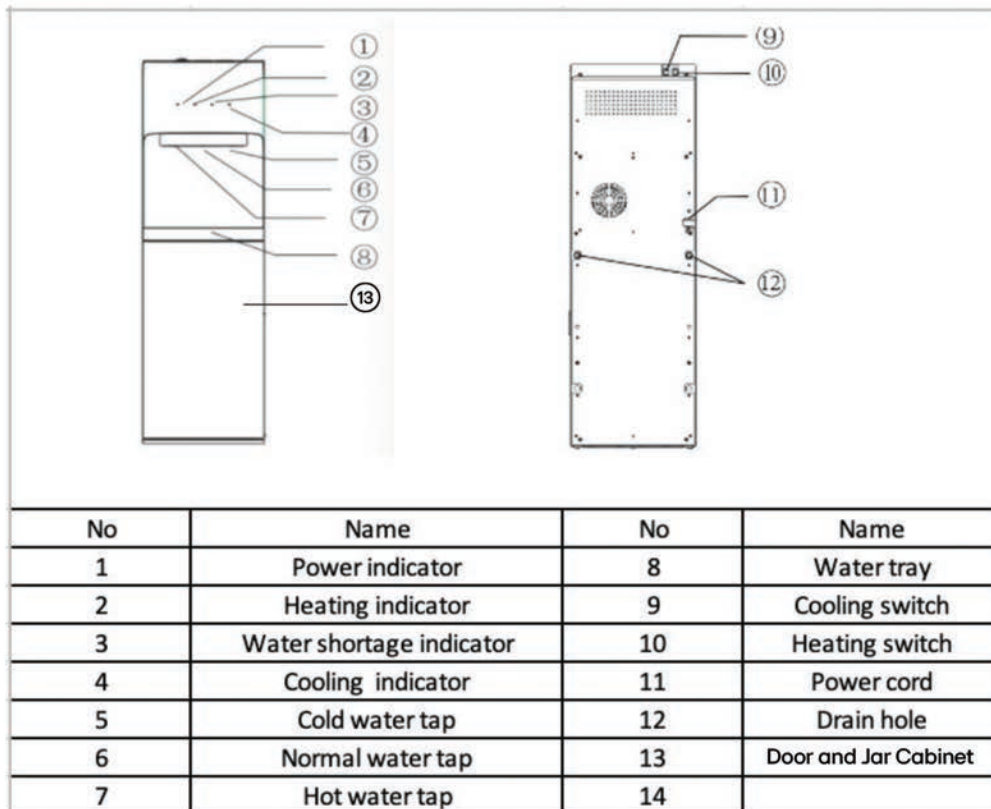

## **NOTES**

This machine is suitable for 20 Liters Water Jar. Don't use unhealthy hard water.

This machine should work under environment of temperature from 10°C-43 relative humidity not higher than 90%.

Please clear the ice block first, If this machine worked under environment of temperature below 0°C or the thermostat did not work, the water will become ice in the cold water tank and block the pipe.

## **FUNCTION INTRODUCTION**

- It's suitable for the use at home and in public. With adoption of distinctive thermal isolation technology, this machine can minimize thermal exchange between hot, normal & cold water.

## OPERATION INSTRUCTION

- Tear the label from the bottle.
- Vertically insert the bottle into the bottle supporter on bottom of the machine and insert the suction pipe into the jar. **Don't plug the power cord or turn on the red switch until 3 minutes after you putting the filled water bottle.**
- Insert the plug to socket, then turn on the power switch. The indicator lights up accordingly once the machine works. The light will be automatically put out when the water reaches the rated temperature.
- Vertically pull out the bottle by two hands when the bottle is empty, then replace it with another bottle of water.

## WARNING

- The plug base should be three-hole grounded with electricity leakage protection.
- The children are not allowed to play with water faucet to avoid accidental burns.
- This device is not intended for use by people suffering from a lack of physical ability, sensory or mental (including children), or from lack experience and knowledge, if did not have control or instructions use the device through a people will be responsible for Safety.
- Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **CAUTIONS** "This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety"
  - The services should be determined by factory and qualified person.
  - If any damage of electrical connector, change the POWER CORD to avoid electrical shock from the center.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

## CLEANING

 
 
To avoid accident, cut off the power supply before operation according to the following instruction.

- The machine had been disinfected before shipping from factory. Before using this machine, clean the machine by pushing the hot water tap and cold-water tap, let about 1 litter water flow out.
- The machine should be disinfected with the disinfectant available from drugstore or market place according to the instruction manual of the disinfectant, and then clean it with water.
- Have the bottle supporter, water tank & heating element cleaned by expert about every year. It will keep the machine in good condition and extend its life. Never disassemble this machine by yourself to avoid damaging the machine.

- Draining instruction: open the taps, and take away the cap & rubber stopper from the water outlet on the rear side of machine.
- Use any neutral & none friction cloth to wash the surface of the machine.


## CAUTION

- Keep this machine in a dry and cool place and avoiding direct sunshine. Rearward of the machine should be at least 20 cm far from the wall. Never put the machine on the paper or foam, which may cause unstable condition, such as store water or cause creepage. Never put anything flammable beside this machine.
- To avoid damage to the machine, don't plug the power cord or turn on the heating switch(red) until 3 minutes after you putting the filled water bottle.
- In case hot (or cold) water is not needed for a long time, turn off the switch for saving power.
- This water dispenser must be used with three pin grounding plug and creepage protection switch. If use two flat plugs, the grounding wire must be properly grounded before use.
- In case not to use this machine for a long time, turn off the switch, then pull the plug out from socket and drain the remaining water through drain hole.
- Never use organic liquid to clean the machine. Strictly prohibit splashing water to the body.
- You should use the ON/Off switch to turn on or off the machine. It is prohibited that turn on or off the machine through plugging or unplugging the power cord. Never extend the length of the power supply cord to avoid fire.
- For this model dispenser (with compressor), never turn the machine upside down or lean it more than 45°.
- Since this model dispenser thermostat has been adjusted. Please do not adjust it by yourself.
- This machine should not be turned on until 3 minutes later when turning off the cooling switch (blue button).
- The power cord or other parts must be replaced by professional person when it is damaged.
- The cooling time will be a little longer when the environment temperature is higher than normal.





## CIRCUIT DIAGRAM & TECHNICAL SPECIFICATION

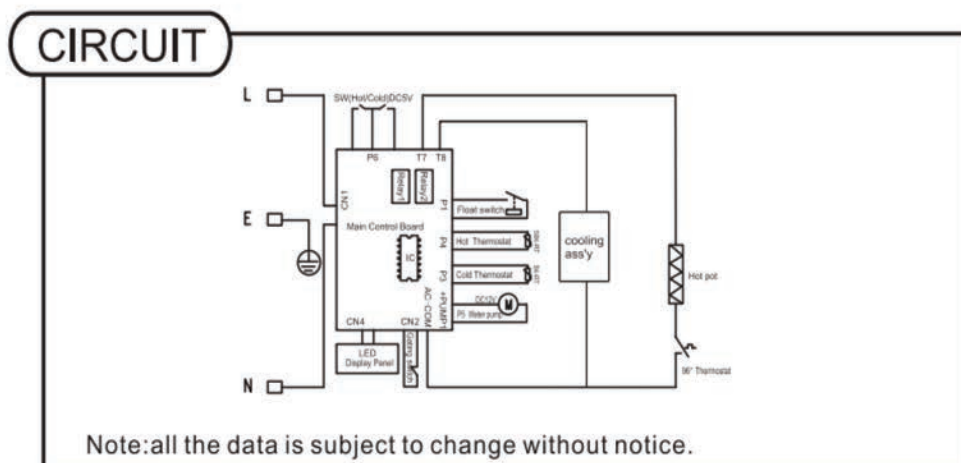 

| MODEL        | POWER SUPPLY | WATT |      | FLOW CAPACITY |             | SPECIFICATION | N.W/G.<br>W<br>(KG) | PACKING<br>(LxWxH)mm |
|--------------|--------------|------|------|---------------|-------------|---------------|---------------------|----------------------|
|              |              | HOT  | COLD | HOT           | COLD        |               |                     |                      |
| CGMRWDECB LB | 220~240V-    | 500W | 70W  | 5.0L/h≥90°C   | 0.6L/h≤15°C | Thermostat    | 11.9 /              | 380x380x1100         |
| CGMRWDECB LW | 50/60Hz      |      |      |               |             | Cooling       | 10.5                |                      |

## TROUBLE SHOOTING

Please check the following before have the machine repaired.

| PROBLEMS                       | POSSIBLE CAUSES  | ELIMINATION   |
|--------------------------------|--|---|
| No hot or cold water           | 1.Over consumption of hot or cold water in short time<br>2.No power supply | 1.Just wait a moment, then hot or cold water is available again.<br>2. Connect plug to socket, turn on heating or cooling switch. |
| No water running out from taps | 1.Empty bottle.<br>2.Inlet of bottle supporter blocked by bottle seal.     | 1.Replace it with another bottle.<br>2.Clean out wasted paper & bottle seal, install bottle again.                                |
| Leakage from bottle supporter  | Broken bottle  | Replace it with a new bottle.   |
| Noisy operation                | Not placid installation  | Place the machine on placid &solid surface.   |



**CGx Elex**

Scan for Chatbot

**A Quality Product  
Of**

**CG CHAUDHARY®  
GROUP**  
*Touching life everyday*



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT  
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: [www.cginspiringlife.com](http://www.cginspiringlife.com)