



# Nutri Blend INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



**Model: CGNBL500**

This instruction manual contains important information  
& recommendations that we would ask you to comply  
With to obtain best results from your products.

**CG CHAUDHARY®  
GROUP**  
*Touching life everyday*

Thank you for purchasing the **CG Nutri Blend**  
Please read these instructions carefully before your first use of this product.


## **IMPORTANT SAFE GUARDS**

1. Make sure your electricity supply is 230V-50Hz.
2. Use the unit only as described in this manual.
3. To prevent from electrical shock, do not immerse the motor base and the cord set into water.
4. This is not a toy. Close supervision is required when the unit is used by or near children.
5. This unit is intended for household use only. Do not use the unit at outdoors or for other purpose than intended.
6. Never leave the unit unattended while it is in operation. Avoid contacting with the moving parts.
7. Ensure to unplug the unit when not in use, assembling or disassembling, and before cleaning.
8. The use of attachments, including the jars, not recommended by the manufacturer may cause a risk of injury to persons.
9. Blades are sharp. Handle with care.
10. Do not place the unit near any explosives, heated oven or hot surfaces.
11. Place the unit on a flat heat-resistant surface.
12. Do not let the cords hang over the edge of table or the like.
13. Please hold the plug to disconnect from the power socket.
14. Do not run the unit continuously for longer than 1 minute at a time. Wait at least 3 minutes before running the unit again.
15. This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

### **NOTE :**

To avoid danger of electric shock, unplug the unit from outlet when not in use or before cleaning. If the supply cord is damaged, stop to use immediately and bring it back to service centre for repair.

## PARTS DIAGRAM

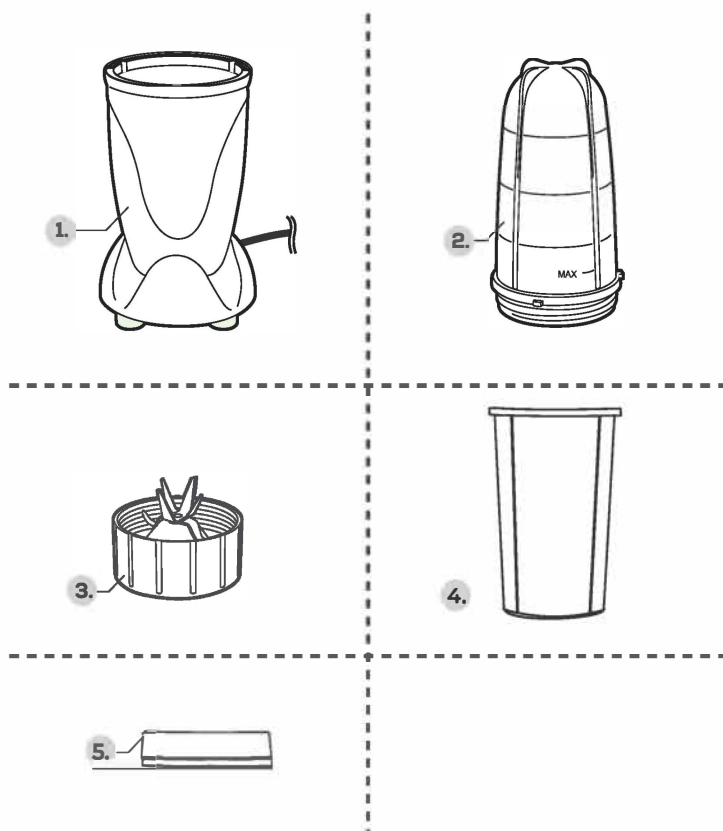

1.	Motor Body / Unit
2.	Tall Jar (500ml)
3.	Special Blade for Multiple Use
4.	Sipper Jar (500ml)
5.	Sipper Jar Lid

## FIRST USE

1. Remove all packaging materials and labels.
2. Clean the motor base and the parts thoroughly before use  
(See "Cleaning and Maintenance" )
3. Plug in the unit into the power outlet, the unit is now ready for use.

## OPERATING INSTRUCTIONS

1. Plug the unit into a proper power socket at 230V— 50Hz.
2. The unit is designed with a built-in safety system. If the Jar is not securely locked into the motor base, the unit will not function.
3. Special Blade for Multiple Use: The surgical grade stainless steel 6-wing blade is specially designed to perform multiple functions to perfection.

### A. Blending:

1. Put the prepared fruit (eg. apple, carrot, kiwi, strawberry, etc.) into the Tall Jar.
2. Cover the Tall Jar with the blade for blending (Fig. 1)
3. Put the Jar onto the motor. Make sure the Ledges of the Jar are in correct position on two grooves of the motor base. (Fig. 2)
4. Push down the Jar and turn it clockwise to lock into the motor base (Fig. 3). The unit starts operating.
5. When the blending is completed, turn the Jar anti-clockwise to release from the motor base (Fig. 4). The operation will stop.
6. Take out the Jar and open the blade holder. Pour the blended juice into a container and serve.
7. Or you can cover the Jar with the Lid (Fig. 5). Keep in the refrigerator for serving later.



Fig. 1



Fig. 2



Fig. 3



Fig. 4

 


Fig. 5

## PRECAUTIONS

### **While positioning of the appliance**

- Place the product on an even platform at a convenient height so that the ingredients under operation can be easily seen.
- Have sufficient space around the product to keep the various items required. Also ensure that the Mixer is placed 6 inches away from the wall.
- Before using the product, ensure that the jar is properly assembled. Hold the jar in one hand and check if the cutter blades move freely and rotate

### **Before switching on the appliance**

- Read the instructions carefully before using the product
- The Mixer operates at optimum efficiency at the specified voltage. Wide variations in voltage affect the performance of the product.

## WARNING


- Keep the Blender away from heat and sunlight.
- Do not run the appliance without load
- Never insert your hand or spatula or spoon, when the Mixer is in operation.
- Since the blades are quite sharp, be careful while changing them.
- Do not use the Liquidizer jar for dry grinding, grating, chopping or mincing functions

## INSTRUCTIONS

- For assembling and dismantling the bowl for cleaning and servicing; Clean the oil traces inside the jar before first use
- Ensure that the product housing is fitted properly on to the motor housing before operation.
- Fix the jar to the base unit by turning it clockwise. Make sure it is firmly locked in position prior to usage
- Plug the Mixer in a 230V AC Power supply.
- After every use of food mixer, pour little hot water into the bowl to remove left over material/sticky substances, so that cutter will rotate freely after subsequent use
- Stop the Blender at regular intervals and push the contents to the center of the jar. If the motor stalls and/or smoke emanates from it, switch off the power supply immediately.

## CLEANING AND MAINTENANCE

1. Unplug the unit before cleaning.
2. Take off all the parts and clean under the running water (Fig. 11). Rinse and dry.
3. Do not immerse the motor base and power cord set into water (Fig. 12). Clean the motor base with a damp cloth and wipe it dry (Fig. 13).

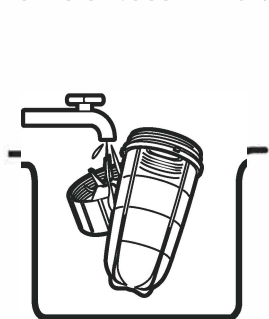

**Fig. 11**



**Fig. 12**



**Fig. 13**

### NOTE :

1. Do not immerse the motor base and power cord set into water.
2. The Blades are sharp. Handle with care and patience.
3. Make sure the blades are thoroughly dry after each cleaning in order to avoid furring.
4. Cleaning is required after each operation.

## STORAGE

1. Follow above cleaning instruction to well maintain the unit before storage.
2. Tidy up the power cord.
3. Keep the unit away from children's easy access.
4. Store the unit and the accessories at a dry, cool place.

### IMPORTANT :

1. The unit is designed for household use only.
2. Commercial users will not obtain the regular warranty as stated in the terms of the warranty card.

## A Quality Product Of



**CGX Elex**

Scan for Chatbot



### **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: [www.cginspiringlife.com](http://www.cginspiringlife.com)