

## SHOWCASE USER'S MANUAL

A Quality Product  
of




Please read this user's manual thoroughly before using.  
Keep this manual handy for further reference.




AS銅版紙黑白印刷

PLEASE READ THE OPERATION MANUAL BEFORE USING

**THE FOLLOWING IS ONLY FOR UPRIGHT SHOWCASE OF**

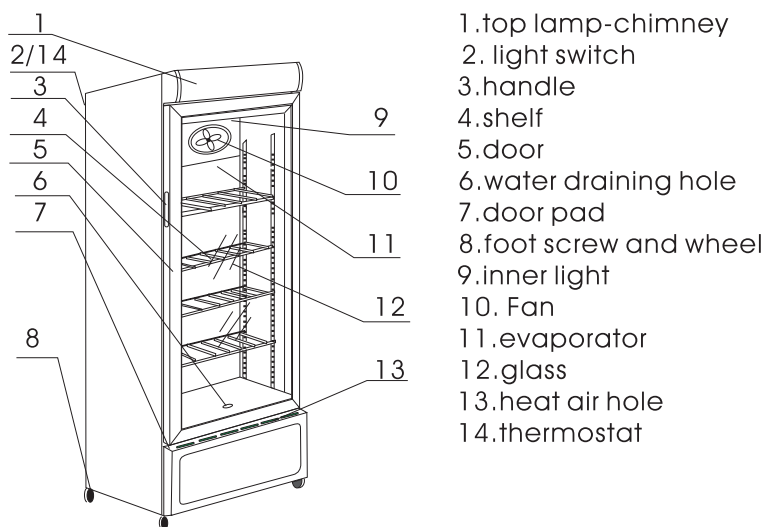

**THE FUNCTION OF CONTROL PANEL:**

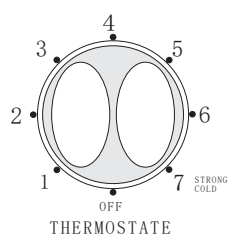

1. the figure on the thermostat 1-7 only indicates the temperature level from high to low (from 10 -1), not means the specific temperature.

**MAINTENANCE :**

- Do not open the door frequently and too long to save energy.
- Never leave heavy or hot objects on top panel or the showcase to avoid deforming.
- Cut off the power before cleaning.
- To clean the showcase, please use soft cloth dampened in some moderate detergent. After cleaning, wipe in dry, never use all kinds of detergent and hot water.



- Use warm water to clean oil fruit juice stain on the magnetic gasket in order to keep its elasticity.
- The showcase should not be left unused for a long time, to stop using the showcase, disconnect the main power first, then clean the inside and leave the door open for 2-3 days to dry it.

**ATTENTION**

- \*Young children or infirm person without supervision does not intent appliance for use.
- \*Young children should be supervised to ensure that they does not play with the appliance.
- \*We have a policy of continuous improvement on our products and reserve the right to change materials and specifications without notice. To confirm the specific parameters, please according to the rated label on the product.


**THE FOLLOWING PHENOMENA ARE NORMAL:**

- There will be sound of flowing water when the refrigerant is running.
- When the environment humidity is too heigh, there will be dew condensed on the surface of the showcase.
- While working, the condenser and the compressor will be hot.

**USE OF WHEELS AND FOOT SCREWS**

You can use the brakes on the wheels and/or the foot screws to stop moving of the showcase. Remember to lift the brake and/or turn foot screws clockwise when moving the showcase

**TRANSPORTATION AND INSTALLATION INSTRUCTION**

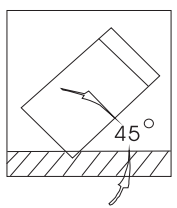


- when you transport the showcase, the angle between the compartment body and the ground should be no less than 45°, and you should never place the showcase upside-down.
- Do not use any of the external part as loading points, such as the door.

- when the showcase is installed or used, the entire package (including board and foam plastic) should be got rid of.
- Keeping the showcase stable to avoid vibration and noise.
- The showcase should be installed in the place with good ventilation, A space of at least 10cm should be allowed between the surrounding wall and the cabinet wall for air circulation.
- It should be placed far from heating resource and not under direct sunshine to avoid decrease of the efficiency of refrigeration.
- Install the showcase in a dry place so as to prevent rust on the compartment body, which may affect the electric insulation.

**Cautions:**

- The showcase must be grounded firmly-the ground wire should not be connected to the heating pipe and gas pipe
- In case the power cord or plug is damaged, please ask the maintenance worker to change it, do not do it by yourself, hand the plug carefully when pull or insert it, do not pull the wire.
- Please do not use the same socket with other appliances.
- In case voltage provided by your regional power supply could not meet this requirement, please use a safe automatic voltage regulator.
- Connecting the power to check the showcase before using, The showcase can be used when the temperature decreases obviously after 30 minutes.
- Adjust the dial according to the real room temperature, the quantity of the foodstuff stored.
- Hot food should be stored only after it is completely cold.
- If power cut-off is needed, you should wait for at least 5 min before plugging in gain to avoid damage to the compressor.

- Packing foods with plastic bag to avoid tastes mixing and frost.
- Never put flammable, explosive and corrosive liquid or gas in the showcase and keep it away from them.

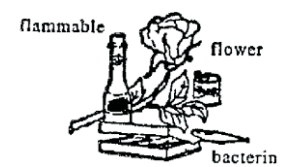

**Trouble shooting:**

TROUBLE	REASON	SOLUTION
Do not cooling	The plug dose not fit the socket well The protector or the fuse has broken off The power is off	Fit the plug well Chang the fuse
Big noise	The placing base is too soft, or the unit is inclining The wheels do not touch the floor well The cabinet is too close to the wall There are other objects directly touching the unit	Mount wood at the bottom Adjust the wheel screw Keep a certain distance from the wall Take the objects away
There are smells inside the unit	The cool air exit is blocked Food with strong smell is not packed	Take away the food near to the exit Pack the food well
The compressor does not stop	The food temperature is too high or there are too much food inside Open the door too frequently or the door is not well closed Directly under the sunshine or too close to the heat resource The ventilation is not good	Put the food in after cooling or reduce the quantity Close the door tightly Keep off the heat resource Keep certain space for ventilation

**Remark:** if you can not solve the troubles according to the above-mentioned ways, please contact the after service centres, do not handle it yourself.