



STAND FAN INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



MODEL : CGMRSF16HS01

This instruction manual contains important information & recommendations that we would ask you to comply with to obtain best results form your products.



CAUTION

Read Rules for Safe Operation and Instructions Carefully.

WARNING

- 1. Do not leave the fan running unattended.
- 2. Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
- 3. Ensure that the fan is switched off from the supply mains before removing the guard.
- 4. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- 5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 6. Children should be supervised to ensure that they do not play with the appliance.

RULES FOR SAFE OPERATION

- 1. Never insert fingers, pencils, or any other object through the grille when fan is running.
- 2. Disconnect fan when moving from one location to another.
- 3. Disconnect fan when removing grilles for cleaning.
- 4. Be sure fan is on a stable surface when operating to avoid overturning.
- 5. The number of the casters on the chassis to install extrusion lock
- 6. DO NOT use fan in window. Rain may create electrical hazard. Indoor use only.

COLUMN ASSEMBLY

- 1. Aim the column tube slot chassis center with the chassis nut hand carry lock.
- Unscrew / take out height adjustment ring.
 Slide stand ornament down the column to rest on stand.
- 4. Pull out the extension pipe and screw / fasten the height adjustment ring back.
- CAUTION: Height adjustment ring must be fully fastened before the assembly of the motor section to the stand.

ASSEMBLY INSTRUCTIONS

- 1. Unscrew the spinner clockwise and the nut counter- clockwise to remove both of them.
- 2. Set the rear guard in the proper position with handle up.
- 3. Screw on plastic nut tightly to attach rear guard.
- 4. Discard plastic sleeve on motor shaft.
- 5. Install the fan blade onto the motor shaft until it reaches the retaining pin.
- 6. Screw spinner onto motor shaft counter clockwise to blade.
- 7. Unscrew the locking screw mounted on the rear grille. Mount
- front grille onto rear guard with the small round holes on the top matched for the passage of locking screw. Fix both grilles with clips and then use screwdriver to tighten the locking screw.

CLEANING

- 1. Be sure to unplug from the electrical supply source before cleaning.
- 2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

DISPOSAL: Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.







