

STAND FAN INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



MODEL : CGMRSF16HS01R

This instruction manual contains important information & recommendations that we would ask you to comply with to obtain best results form your products.

CAUTION

Read Rules for Safe Operation and Instructions Carefully.

WARNING

 
1. Do not leave the fan running unattended.
2. Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
3. Ensure that the fan is switched off from the supply mains before removing the guard.
4. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Disconnect fan when removing grilles for cleaning.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. The number of the casters on the chassis to install extrusion lock
6. DO NOT use fan in window. Rain may create electrical hazard.
7. Indoor use only.

COLUMN ASSEMBLY

1. Aim the column tube slot chassis center with the chassis nut hand carry lock.
2. Unscrew / take out height adjustment ring.
3. Slide stand ornament down the column to rest on stand.
4. Pull out the extension pipe and screw / fasten the height adjustment ring back.

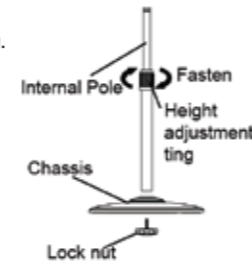


CAUTION

Height adjustment ring must be fully fastened before the assembly of the motor section to the stand.

ASSEMBLY INSTRUCTIONS

 1. Unscrew the spinner clockwise and the nut counter-clockwise to remove both of them.
2. Set the rear guard in the proper position with handle up.
3. Screw on plastic nut tightly to attach rear guard.
4. Discard plastic sleeve on motor shaft.
5. Install the fan blade onto the motor shaft until it reaches the retaining pin.
6. Screw spinner onto motor shaft counter clockwise to blade.
7. Unscrew the locking screw mounted on the rear grille. Mount front grille onto rear guard with the small round holes on the top matched for the passage of locking screw. Fix both grilles with clips then use screwdriver to tighten the locking screw.

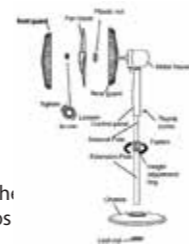

OPERATING INSTRUCTIONS

Remote Controller Operation

OFF KEY

Press this key if the fan need switch off.

MODE KEY

This key is a selector key for wind type, The wind type changes in the sequence from NORMAL—NATURAL—SLEEP

TIMER KEY

This key is touched repeatedly or in pressed state. The time to be set for air delivery increased step by step of each half an hour and sums to 7.5 hours in 15 steps.

Do not press the timer key when the fan will be required to operate continuously. At the moment all LED don't light.

OSC KEY

This key serves to start or stop the fan oscillation.

ON/SPEED KEY

This key is for switching on the fan. The fan is started at medium speed up to the rotation, after 2 seconds it will automatically over to the low step.

After the fan has started, this key serves as a speed selector in the sequence from LOW—MEDIUM—HIGH—LOW

Remote Controller

The keys of remote controller may use as same as manual control switches, the functions of them are as same as control panels.

CLEANING

Be sure to unplug from the electrical supply source before cleaning.

 
Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

DISPOSAL

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

A Quality Product
Of

CG CHAUDHARY GROUP
Touching life everyday

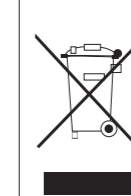

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.