



Big Electric Kettle INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



Model:
CGEKBQL5/CGEKBQL6/CGEKBQL8

This instruction manual contains important information
& recommendations that we would ask you to comply
With to obtain best results from your products.

CG CHAUDHARY®
GROUP
Touching life everyday



Instructions

1. Filled into the most suitable water, which should be not less than the half of capacity, but do not exceed the highest water level (from the pot below 25mm). To prevent the water from boiling over and causing danger.
2. After the water is filled, place the kettle on a stable place and insert the wire connector first. Then plug in the electrical plug.
3. If the water boils out due to unattended or malfunction, the safety device of the electric kettle will automatically cut off the power supply when the water boils dry. If you only need warm water, you can cut out the power.
4. Before first use, follow the above instructions, boil the water and pour it away, then clean the pot with cold water before use.
5. When press ON Switch button, when the water boiling with whistle, that will need you to press button OFF, then the kettle will stop working.
6. When press AUTO switch button, when the water boiling, the kettle will shut off automatically, but it will automatically heat again when the water cold.

Precautions

1. Do not connect the electric kettle when there is no water or very less water.
2. If the water in the electric kettle boils, the electric kettle will automatically cut off the power to avoid danger. It cannot be used again until the electric kettle is slightly cold.
3. Do not put the kettle on a hot surface to avoid damaging the kettle and causing leakage.
4. When the electric kettle is boiling, do not pull the wire connector to avoid the risk of electric shock.
5. Please unplug the plug when not in use and do not connect it to the power supply.
6. Do not wash the kettle by immersing it in water or allowing water to come into contact with the wire connectors and plugs.
7. Electric kettles should be kept out of the reach of children to prevent electric shock or burns.
8. If the power cord is damaged, it must be replaced with the same type of wire, and it should be replaced by specialized personnel, and it should be dealt with at the maintenance point designated by the manufacturer.
9. The electric kettle should be turned off when the manual gear is heated to the boiling water, so as not to overboil the water and overflow the dangerous accident.

Cleaning and Maintenance

1. Remove the plug and wire connector before cleaning.
2. Wet cloth can be used to wipe the outside of the electric kettle. Coarse cloth cannot be used to avoid scratching the stainless-steel surface.
3. If there are water stains or rust stains inside the electric kettle, appropriate detergent can be used to remove it. If it is used more frequently, the number of cleanings should be increased.
4. Please empty the pot of water after each use.
5. After being used for a period of a time, the electric heating tube in the kettle may change color, but this will not affect its function.
6. Please put the plug-in place to extend the use of the electric heating pipe.

**A Quality Product
Of**



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: www.cginspiringlife.com