



Rice Cooker INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



Model:

**CGRC10NM/CGRC15NM/CGRC18NM2/CGRC22NM2
CGRC28NM2/CGRC1005SS/CGRC10DM2/CGRC15DM2
CGRC18DM2/CGRC22DM2/CGRC28DM2**

**This instruction manual contains important information
& recommendations that we would ask you to comply
With to obtain best results from your products.**

**CG CHAUDHARY®
GROUP**
Touching life everyday

INSTRUCTIONS OF USING THE AUTOMATIC RICE COOKER


CHARACTERISTICS

" CQ inspiring Life" electric appliances series of automatic heat preservation electric cooker and versatile automatic electric cooker possess such characteristics as aesthetic appearance, high fineness, safety, good durability and high heat efficiency. It can be used to cook rice, Porridge and soup. Versatile cooker can also be used to steam bread and pork ribs and other food by the steam that comes out from the cooking rice. It is really one of the best electric appliances that save electricity, time and labour at home.

PRODUCT STRUCTURE



Circuit diagram

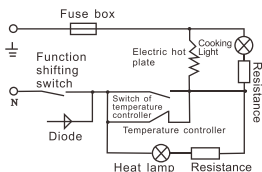

Warning

- 1) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2) Children should be supervised to ensure that they do not play with the appliance.
- 3) The appliance must not be immersed in water.
- 4) If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- 5) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

5. Insert the plug tightly in the socket on the bottom of cooker, the plug of the other end to the socket on the wall.

§ If cook porridge, switch to the button of cooking porridge.
§ Be sure not to connect the electricity before cooking.



STARTING TO USE

6. Press the button of cooking rice when cook, or the electric cooker doesn't cook since it just remains warm.



7. When the rice is cooked enough, the button of cooking will return to its original state and the light of keeping warm is on, then the cooker continues the state of warm.

§ Don't open the lid until the rice is stewed for 15 minutes. Turn the rice with spatula to avoid the rice becomes hard blocks. Then it is nice to eat or remains warm.



§ The particular designed bottom of the cooker turns the rice slight yellow and fragrant.

8. When steam the food, put proper water in the inside cooker. Put the food in the steamer, then go on according to the procedures of 4.5 and 6. Lift up the button of cooking rice after the food is cooked enough.



§ The food can be steamed while the rice or porridge cooked.

AFTER USING

9. Before eating, put down the plug of electric wire. Then take out the inside cooker or the food.

 


10. When eat, please use the spoon attached and take away the hard grains of cooked rice. Don't use the iron spoon to avoid scratching the coat.



INSTRUCTIONS ON CLEANING THE ELECTRIC COOKER

- 1 .Take out the inside cooker, cover plate and steamer and clean them with household liquid detergent, then dry them with dry and soft rag. After cleaning fix the cover plate to the nail with the surface having letter towards you. (Be sure not to clean the inside cooker with iron brush or other hard things to avoid scratching it.)
2. Take down the container of water and tip the water . Then clean it before putting it back.
3. If there is rice or other thing on the electric hot plate, please sandpaper it with a piece of about 320# sand paper. Then dry it with soft rag. As a result, the inside cooker can contact the electric hot plate well.



CAUTIONS

- 1.Be sure to use the plug with earth wire on the wall and insert it tightly.Be sure not to use other household electrical appliances with the same universal plug to avoid hitch caused by too much electric current.
- 2.When the cooker is not used or the inside cooker is not in its place or it's empty.do not insert the plug in the socket.
- 3.The electric wire is connected to the cooker and do not pull the cooker with it.
- 4.The cooker not be laid at such places as unstable,moist or close to the fire or hot source.Or they will be damaged or have something wrong.
- 5.Don't rinse the cooker body and not fill it with water to avoid damaging the insulation.
- 6.Avoid bumping the inside cooker or it will be deformed. Be sure not to heat the inside Cooker on other hot source,or it is easy to deform because of high temperature.At the same

time, other vessels mustn't be put on the electric hot plate instead of the inside cooker, or it will damage the electric hot plate.

7. When insert the plug the light of electricity is on. But do press the button of cooking to cook, or it remains warm and doesn't cook.

8. When use the electric cooker, be sure not to put wet towel or rag on the lid or handle, or they will deform or change color.

9. Don't eat the rice immediately after the rice is boiled enough. But eat is after braising it for 15 minutes. So the color, smell and taste of the rice are superb as well as soft and refreshing.

10. If the electric wire broken, it must be instead of special electric wire.

HOW TO JUDGE THE HITCH AND REPAIR IT

No	The appearance of the hitch		reason	Solving way
1	The light is not on	The electric hot plate can't be heated	The electric wire of the cooker Doesn't contact the electricity	Check the switch, plug, socket, fuse and electric wire and insert the plug in the socket tightly
2	The light is on	The electric hot Plate can be heated	(1) The light or the lowering resistance is loose (2) The light or the lowering Resistance Is broken	(1) Weld it again (2) Replace the component
		The electric hot plate can't be heated	(1) The mid-lines are loose (2) The electric tube is Damaged	(1) Fix the mid-lines again (2) Replace the electric hot plate
3	The rice can't be heated or takes too long to cook		The inside cooker doesn't contact the magnetic steel well (1) the inside cooker is deformed (2) the electric hot plate is deformed (3) The inside cooker is inclined and one side suspends in the air. (4) There is some thing between the inside cooker and electric hot plate	(1) Restore the deformed inside cooker to make it contact the electric hot plate well (sent it to service department) (2) Slight deformity can be restored with tiny sand paper to polish it but heavy deformity be sent to service department to replace it (3) Slightly move the inside cooker to restore it (4) Clean it with 320# sandplate
4	The rice is burnt		(1) Both the button of cooking rice and the shaft of chain effecting (2) The limiting temperature equipment of magnetic steel is not flexible	(1) Solve the problem with pliers Or other tools. (2) Replace the limiting temperature equipment of magnetic steel
5	Can't keep warm automatically		The temperature controller is broken	Replace the temperature controller

DIRECTTIONS

BEFORE USING

1. **Take the rice with measuring glass to other container and wash it clean.**

- § A measuring glass contains 018 sheng(about 150grams).
- § Be sure not to wash the rice in the inside cooker directly to avoid scratching it's coat or deforming it's bottom which will cause it not to contact the electric hot plate well of reduce the hot effect or cause some other hitches.



2. **Put the cleaned rice in the inside cooker and fill with proper water .**

- § The graduation line in the inside cooker indicate the waterline, on the right the waterline measured by $\frac{1}{3}$, lift measured by cup.
- § The graduation line in the inside cooker indicates the standard volume of water and not for the standard of cooking.
- § For both cooking rice and porridge, the waterline should not surpass the highest point of the graduation line.



3. **Dry the outside of the inside cooker before putting in it's place. Spread and even the rice at the bottom. Then move the inside cooker slightly right and left to make it cont act the electric hot plate well. Nothing be put between them.**

- § The coat in the inside cooker suits the food hygienic standard and does no harm to body. Please feel easy to use it.



4. **When need to use electric cooker and cover the lid, first slow the lid down, then press it until clicks.**

- § If the lid is not tightened, it will affect the cooking.
- § Be sure the lid is tightened when lift up the cooker.



A Quality Product Of

**CG CHAUDHARY®
GROUP**
Touching life everyday



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Visit us at: www.cginspiringlife.com