

Manual_Washing Machine_8.0 KG & 9.0kg

A Quality Product
Of

CG CHAUDHARY®
GROUP
Touching life everyday



**IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT
IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

 


Visit us at: www.cginspiringlife.com



Semi Automatic Washing Machine INSTRUCTION MANUAL

Read this manual carefully before operation
Pictures in this manual are for reference only, the product in kind prevail.

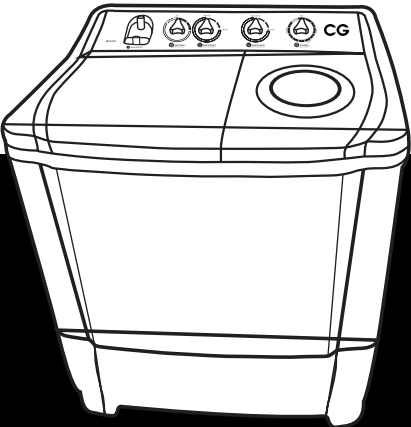

Model: CGWS82/CGWS92

This instruction manual contains important information
& recommendations that we would ask you to comply
with to obtain best result from your products.





SAFETY MEASURES

Observe the following guidelines for the durability of the washing machine and safety problems.

<ul style="list-style-type: none">Do not expose the washing machine to direct sunlight or rain	<ul style="list-style-type: none">Do not install the washing machine around a damp place.	<ul style="list-style-type: none">Do not sprinkle water over the control panel switches.
<ul style="list-style-type: none">Do not plug many cords in one outlet at the same time.	<ul style="list-style-type: none">When plugging out the power cord, do not hold the wire.	<ul style="list-style-type: none">Keep children away from the washing machine.
<ul style="list-style-type: none">Keep the Machine away from fire or heat source.	<ul style="list-style-type: none">Do not pour caustic soda & bleach over the washing machine. It causes damage to the rubber parts.	<ul style="list-style-type: none">Do not pour water with a temperature exceeding 50° C into the tub.
<ul style="list-style-type: none">Make sure of closing the lid, particularly during spinning.	<ul style="list-style-type: none">Do not put your hands into the rotating tub.	<ul style="list-style-type: none">Let water drain away from the drain hose thoroughly.

  PRODUCT DESCRIPTION

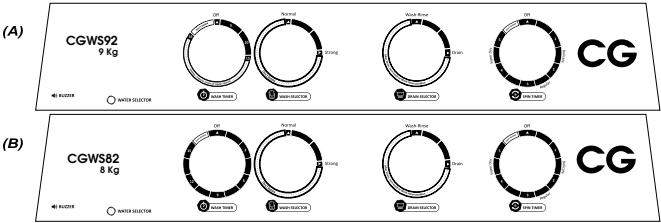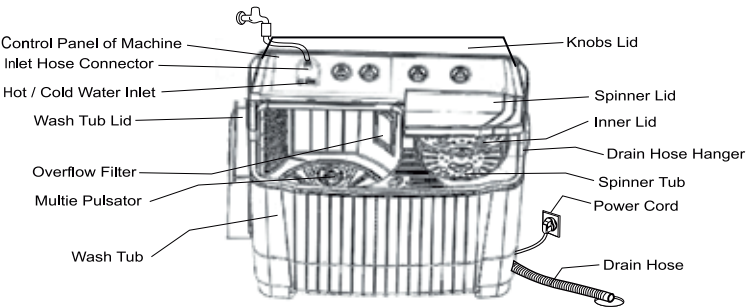

- i) **HOT & COLD WATER INLET**
Connect here with the inlet hose from the water faucet to feed water to the tub
Wash Tub (Left) / Spin tub (Right)
- ii) **DRAIN SELECTOR**
Select "Wash + Rinse" for washing and rinsing and "Drain" to drain the water out of the tub.
- iii) **FEEDING WATER LABLE**
When the water spills out of the hole under the lable, it means too much water has supplied. Close the water tap and adjust the level.
- iv) **WASH SELECTOR**
Set the program to "Normal", "Strong" according to kinds and quantity of the laundry.
- v) **SPIN TIMER**
Select the desired time for spinning. The maximum limit is 5 min., but shall not be continued over 3 cycle. Don't rotate the knob more than prescribed limit
- vi) **WASH TIMER**
Select the desired time for washing or rinsing. The maximum is 35 min. (Period 16~35 min. the machine will switch between washing and soaking.
- vii) **BUZZER:**
End of Wash/Rinse cycle is indicated by cycle end buzzer.

PRODUCT INSTALLATION

 
Installation area

- Set on flat and firm floor.
- Incorrect installation may cause severe noise and break down.
- Maintain more than 10 cm. between the side of drain hose and the wall.
- A carpet must not obstruct the ventilation openings.



Connecting the earth wire


- Install the earth wire to prevent short-circuit due to leaking current and electric shock.
- It is attached at the back of the washer.
- Connect it to the metal water pipe. If the water pipe is made of plastic, it does not have the earth effect.
- Do not connect the earth wire to the gas pipe, lightning arrester, telephone connector, etc.



※ Warning-the appliance with two-pronged plug must be grounded.

Connecting the power plug

 - Insert the power plug into the outlet.
- Before connecting the power plug, check if the voltage setting of the washer matches the outlet voltage.
- If AC outlet with ground terminal is used, grounding is not needed. If not, never forget earthing (earthing method above).
- The appliance must be positioned so that the plug is accessible.

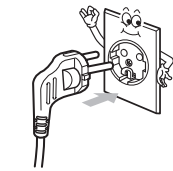


Voltage Change (only for dual voltage)

This washer is assembled for 230V, but can be changed from 230V to 110V
Check your electrical source and follow the diagram below to convert voltage.

Other earthing method

 - After connecting the earth wire to the earth copper plate, bury it at least 75cm deep under the wet ground.
- Connect to the earthing-only outlet.
- When installing it in an area where earthing is not possible, purchase a short-circuit breaker connect it to the outlet.



How to Wash

1 Set the drain selector
For Non-Pump Model : Set as "WASH-RINSE" position,
For Pump Model : Set as "OFF" position,
Wash-Rinse Drain Wash-Rinse Drain

2 Set the water selector to "WASH"

3 Open water supply and fill water till your desired level of tap mark. That is because clothes can absorb adequate amount of water and water will not short.

4 Put the appropriate amount of detergent and the laundry into the wash tub. And add water to the desired water level which you want.

5 Select the wash program to "NORMAL", or "STRONG" according to the kinds and quantity of the laundry. (Refer to Tabel 2)

6 Set the desired wash time.

7 When washing is finished, locate the drain selector to "DRAIN" position and drain the water out.

8 Spinning in the spin dryer basket. Move the laundry into the spin dryer basket. Put the laundry down lightly. Place the safety cover horizontally on the laundry. Set the desired spin time with the spin timer.

How to Spin/Rinse

● Interim spin rinse prior to regular rinsing helps removing sudsy water from the laundry and improve rinsing efficiency. Also is helpful to water saving.

1 After washing.
● Move the laundry into the spin dryer basket.
● Place the safety cover horizontally on the laundry.

 
2 Set the water selector to "SPIN".

3 Set the desired spin flow appropriately.

4 After interim spin rinse, move the laundry into the wash tub for rinsing.

Note for spinning

1. Put the laundry evenly into the spin dryer basket.
 2. Put the laundry down lightly.
 3. Place the safety cover horizontally over the laundry.
 4. Close the spin dryer cover.
- If the spin dryer basket is off-balance and vibrates excessively, stop the spinning, rearrange the clothes evenly, and then resume spinning.

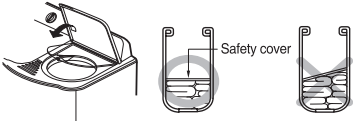


Care and Maintenance

Be sure to remove the power plug from main power supply before cleaning the machine and filter

Cleaning the Magic Filter

Clean the filter net often to keep the washing machine clean

 1. Push the upper part of the magic filter and pull in

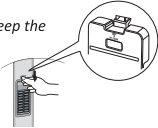

2. Open the cover as shown in figure



3. Clean the magic filter



4. Close the cover and insert the lower part of the filter in the basket first and then push the filter with click sound



Note : It is recommended to clean the magic filter regularly.

E-WASTE GUIDELINES

Declaration of Conformity with the requirements of the E-waste (Management) Rules, 2016
The Product is in conformity with the requirements of the reduction of hazardous substances of the E-waste (Management) Rules, 2016.
The content of hazardous substance with the exemption of the applications listed in SCHEDULE II of the E-waste (Management) Rules, 2016:

1. Lead (Pb) – not over 0.1% by weight;
 2. Cadmium (Cd) – not over 0.01% by weight;
 3. Mercury (Hg) – not over 0.1% by weight;
 4. Hexavalent chromium (Cr⁶⁺) – not over 0.1% by weight;
 5. Polybrominated biphenyls (PBBs) – not over 0.1% by weight;
 6. Polybrominated diphenyl ethers (PBDEs) – not over 0.1% by weight
- For the purpose of recycling to facilitate effective utilization of resources, please return this product to a nearby authorized collection center, registered dismantler or recycler, or service center when disposing of this product.



LAUNDRY GUIDE

TABLE 1. DETERGENT GUIDE

WASH LOAD	1.2 kg	1.2~2.5 kg	2.5~3.8 kg	3.8~5.0 kg	5.0 kg or ABOVE
Water Level	Min.	Low	Medium	High	Over Flow
Amount of concentrate Detergent	25 gm	40 gm	50 gm	60 gm	80 gm
Amount of Softener	25 ml	35 ml	45 ml	55 ml	65 ml
Amount of Water	15 Ltr	25 Ltr	45 Ltr	70 Ltr	72 Ltr

Table 2- LAUNDRY GUIDE

Amount of Laundry	Clothes		Synthetic Fiber	Cotton	Heavy Stained Clothes
	System	Washing Time			
1.2 ~ 2.5 kg	Washing Time	2~5 minutes	7~10 minutes	10-15 Minutes	
	Wash Selector	NORMAL	STRONG	STRONG	
2.5 ~ 3.8 kg	Washing Time	7~10 minutes	10~15 minutes	Wash 15 minutes, Soak 20 minutes	
	Wash Selector	NORMAL	STRONG	STRONG	
3.8 kg and above	Washing Time	Wash 10~15 minutes	Wash 15 minutes, Soak 20 minutes	Wash 15 minutes, Soak 20 minutes	
	Wash Selector	NORMAL	STRONG	STRONG	

Table 3: GUIDE FOR SPINNING

Spin Time (min.)	Type of Fabric
2 ~ 3	Synthetics, Silk, Woolen, Knits
3 ~ 4	Cotton, Linen
4 ~ 5	Very soiled, cotton and linen

- Amount of laundry is based on dry laundry.
- Detergent amount is based on a general synthetic detergent.
- If washing and spinning must be operated together, starting washing and spinning operation shall be done at the same time to cope with EMC requirement

TROUBLESHOOTING GUIDE

Before Requesting Service

Problem	Checking point
Motor does not operate,	● Is the power cord firmly plugged in? ● Is the timer turned to a suitable point except "OFF" ?
Spin dryer basket does not operate.	● Is there any clothing dropped between the basket and tub? ● Is the spin dryer cover closed? ● Is the laundry gathered to one side of the spin dryer basket?
No draining For Non-Pump Model For Pump Model	● Is there lint stuck in the plunger valve? ● Is the end of the drain hose guide located at an exceed height? ● Is the drain pump operated?