



Multi Maker INSTRUCTION MANUAL

Read this manual carefully before operation

Pictures in this manual are for reference only, the product in kind prevail.



Model: CGMM90A

This instruction manual contains important information & recommendations that we would ask you to comply with to obtain best results form your products.

रोटी मेकर प्रयोग गर्नु अघि महत्त्वपूर्ण सुरक्षा/सावधानीहरू, सधैं पालना गर्नुहोस्

उल्लिखित आधारभूत सुरक्षा सिद्धान्तहरू:

१. सबै निर्देशनहरू सावधानीपूर्वक पढ्नुहोस् र उपकरण सञ्चालन गर्नु अघि प्रक्रियाहरू पूर्ण रूपमा बुझ्नुहोस्।
२. उपकरण सञ्चालन गर्नु अघि उचित अर्थिङ गर्नुपर्छ।
३. उपकरण वा यसको अन्य कुनै भागलाई पानी वा अन्य कुनै तरल पदार्थमा कहिल्यै नडुबाउनुहोस्। सफा गर्नका लागि नरम कपडाको प्रयोग गर्नुहोस्।
४. उपकरण सञ्चालन गर्दा बच्चाहरूलाई उपकरणबाट टाढा राख्नुहोस् र बच्चाहरूको उचित निरीक्षण आवश्यक छ।
५. उपकरण प्रयोगमा हुँदा तातो सतहहरूलाई नछुनुहोस्। विशेष रूपमा डिजाइन गरिएको ह्यान्डलहरू उपकरण सञ्चालन गर्न उपयुक्त हुन्छ।
६. बाहिर वा भिजेको सतहहरूमा उपकरण प्रयोग नगर्नुहोस्।
७. तातो सतह वा अन्य कुनै ताप उत्पादन गर्ने वस्तुमा उपकरण नराख्नुहोस्।
८. प्रयोगमा नभएको बेला उपकरणलाई सधैं स्विच अफ र प्लग बाहिर निकाल्नुहोस्।
९. सञ्चालनमा हुँदा उपकरणलाई कहिल्यै एकलै नछोड्नुहोस्। यो प्रयोगमा हुँदा नजिक हुनु आवश्यक छ।
१०. कुनै पनि तरिकाले क्षतिग्रस्त वा बिग्रिएको फेला परेको उपकरण सञ्चालन नगर्नुहोस्। उपकरण खोल्ने/मरम्मत गर्ने प्रयास नगर्नुहोस् वा कुनै अनाधिकृत व्यक्तिलाई त्यसो गर्न अनुमति नदिनुहोस्। मर्मतका लागि सम्बन्धित व्यक्तिलाई सम्पर्क गर्नुहोस्।

पहिलो प्रयोग गर्नु अघि:

- ☒ सबै निर्देशनहरू ध्यानपूर्वक पढ्नुहोस्
- ☒ सबै प्याकेजिङ हटाउनुहोस्।
- ☒ प्लेटहरू स्पन्ज वा पानीमा भिजाएको नरम कपडाले पुछेर सफा गर्नुहोस्।
- ☒ एकाइलाई पानीमा डुबाउने नगर्नुहोस् र पकाउने सतहमा सिधै पानी नछोड्नुहोस्।
- ☒ कपडा वा तौलियाले सुकाउनुहोस्।
- ☒ मल्टी मेकरको प्लेटलाई थोरै खाने तेल वा पकाउने स्प्रे हालेर हल्का रूपमा लगाउनुहोस्।

नोट: जब तपाईंको मल्टी मेकर पहिलो पटक तताइन्छ, यसले हल्का धुवाँ वा गन्ध उत्सर्जन गर्न सक्छ। यस्ता तताउने उपकरणहरूमा यस्तो हुनु सामान्य हो। यसले तपाईंको उपकरणको सुरक्षालाई असर गर्दैन।

कसरी प्रयोग गर्ने

- ☒ मल्टी मेकर बन्द गर्नुहोस् र यसलाई भित्ताको बोर्डमा प्लग हाल्नुहोस्, तपाईंले याद गर्नुहुनेछ कि रातो पावर बत्ती र हरियो रेडी बत्ती बल्नेछ, मल्टी मेकरले पहिले तताउन थालेको संकेत गर्दछ।
- ☒ पकाउने तापक्रममा पुग्न लगभग ३ देखि ५ मिनेट लाग्नेछ। तपाईंले आफ्नो मल्टी मेकरलाई प्लग नभिकुन्जेल रातो पावर बत्ती सक्रिय रहनेछ। जब हरियो बत्ती निभ्छ तब रोटी मेकर प्रयोगको लागि तयार हुन्छ।
- ☒ मल्टी मेकर खोल्नुहोस् र लगभग १/२" गोलाईको प्रत्येक टुक्रा बनाउनुहोस् (कृपया रोटी बनाउन सुरु गर्नु अघि कम्तिमा ३० मिनेटको लागि मुछिएको पीठो बाहिर राख्न नबिर्सनुहोस्)। पिठोलाई अलिकति थिच्नुहोस् र यसलाई बीचबाट अगाडीतर्फ राख्नुहोस्।
- ☒ तुरुन्तै माथिल्लो प्लेट बन्द गर्नुहोस्। एक सेकेन्ड भन्दा कमको लागि थिच्नुहोस्। यसलाई तुरुन्तै खोल्नुहोस् र रोटीलाई बीच मा राख्नुहोस्। लगभग १५/२० सेकेन्डको लागि यसलाई यसरी छोड्नुहोस्।
- ☒ रोटी घुमाउनुहोस् र लगभग २०/२५ सेकेन्डमा तपाईंले रोटीको माथिल्लो सतहमा हावाका बुलबुले देखा पर्न थालेको देख्नुहुनेछ।
- ☒ जब यस्तो हुन्छ रोटीलाई घुमाउनुहोस् र माथिल्लो प्लेटलाई बिस्तारै बन्द गर्नुहोस्। रोटी दुबै छेउमा फुल्ल थाल्छ र केहि सेकेन्डमा रोटी तयार हुन्छ।
- ☒ रोटी पाक्सकेपछि, मल्टी मेकर खोल्नुहोस् र सावधानीपूर्वक मल्टी मेकरबाट गैर-धातुका भाँडाहरू हटाउनुहोस्। खाना पकाउने सतहलाई धारिलो, प्वाल वा धातुका वस्तुहरूले कहिल्यै नछुनुहोस्। यसले नन-स्टिक सतहलाई हानि पुऱ्याउन सक्छ।

रोटी मेकरका मुख्य विशेषताहरू

- (१) पहिलो पटक तत्काल तुरुन्तै रोटी बनाउने उपकरण।
- (२) रोटी बेलने र पकाउने एक मिनेट भन्दा कम समय।
- (३) नन-स्टिक मल्टी मेकर, रोटी चिपकिने भन्कटबाट मुक्त।

(४) समय, खाना पकाउने तेल, र इन्धन र पैसा बचत गर्दछ।

(५) क्यालोरीको मात्रा घटाउँछ।

(६) काम गर्ने महिला र गृहिणीहरूका लागि ठूलो वरदान हो मल्टी मेकर।

(७) गहुँ, मैदा, मकै, चामलको पिठो आदिबाट रोटी पनि बनाउनका साथै अमलेट, पोच बनाउन मिल्ने।

आटा कसरी बनाउने

स्टेप-१: आफ्नो आवश्यकता अनुसार पीठो नाप्नुहोस् र आटा मुछ्न १-२ चम्चा तेल हाल्नुहोस्।

स्टेप-२: आटालाई साब्रो नबनाउनुहोस्, यसलाई अलिकति खुकुलो बनाउनुहोस्।

स्टेप-३: निश्चित गर्नुहोस् कि तपाईंले आटाको गोला तुरुन्तै बनाउनुहुन्छ र पिठोको गोलाईको साइज तपाईंको मुट्टी वा तपाईंको आवश्यकता अनुसार बनाउनुहोस्।

स्टेप-४: आटाका डल्लाहरूलाई १०-१५ मिनेटसम्म त्यतिकै राख्नुहोस् त्यसपछि तपाईं आफ्नो रोटी मेकरलाई सुन्दर नरम रोटीहरू बनाउनको लागि तताउन सक्नुहुन्छ।

महत्त्वपूर्ण टिप्स:

यदि रोटी अनियमित आकारको फेला पर्यो भने, आटामा पर्याप्त पानी छ कि छैन जाँच गर्नुहोस्। यदि होइन भने, केहि थप पानी थप्नुहोस् र राम्ररी मिश्रण गर्नुहोस्। उत्कृष्ट नतिजाको लागि बारम्बार लीभर नथिचनहोस्। बारम्बार लीभर थिच्नाले रोटी भाँचिएको बन्न सक्छ।

पार्टका नामहरू:

१. आपरेटिंग लीवर

२. लिफ्टिंग हैंडल

३. इन्डिकेटर

४. इन्डिकेटर बत्ती

५. बटम कवर

६. नान स्टीक हीटरप्लेट हीटिंग कोइल सहित

७. हाउसिंग इनलेट वायर्स


८. स्टेन्ड

९. मेन्स कार्ड (प्लग)


१०. कोइल स्प्रिंग (सुरक्षक)

११. टप कोभर

१२. नान स्टीक हीटर प्लेट हीटिंग कोइल सहित (माथि)

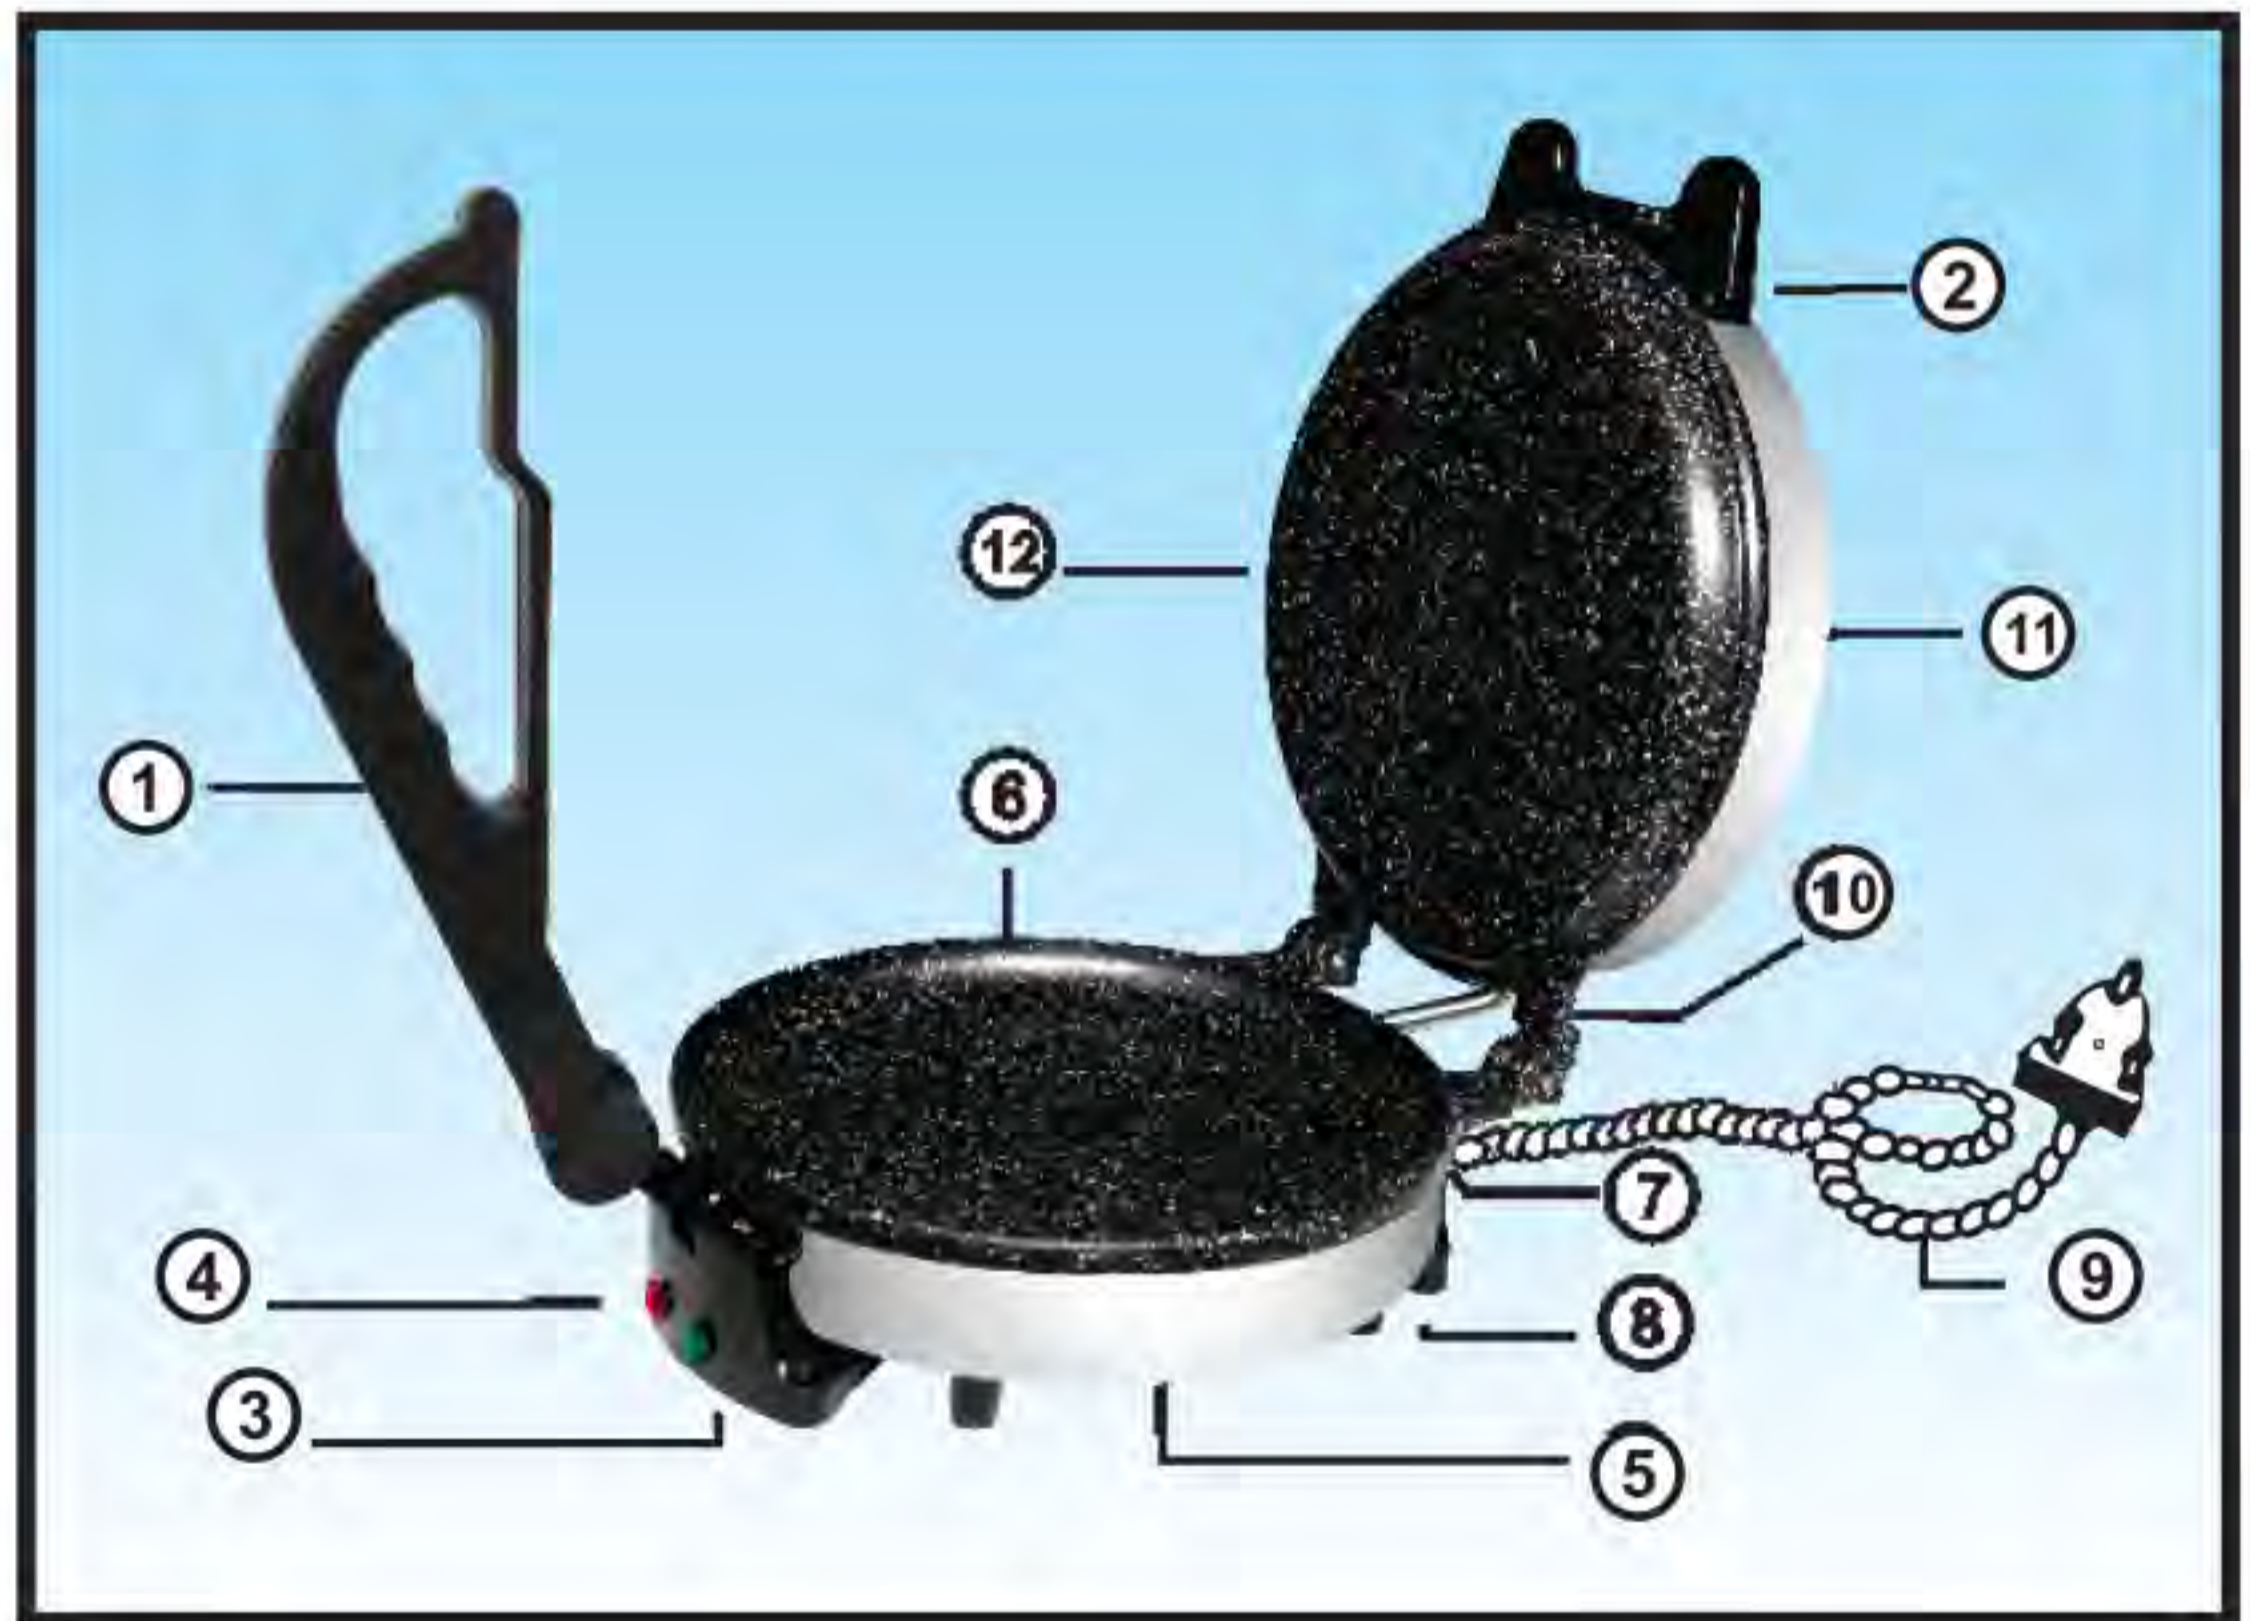

KNOW YOUR CHAPATI MAKER

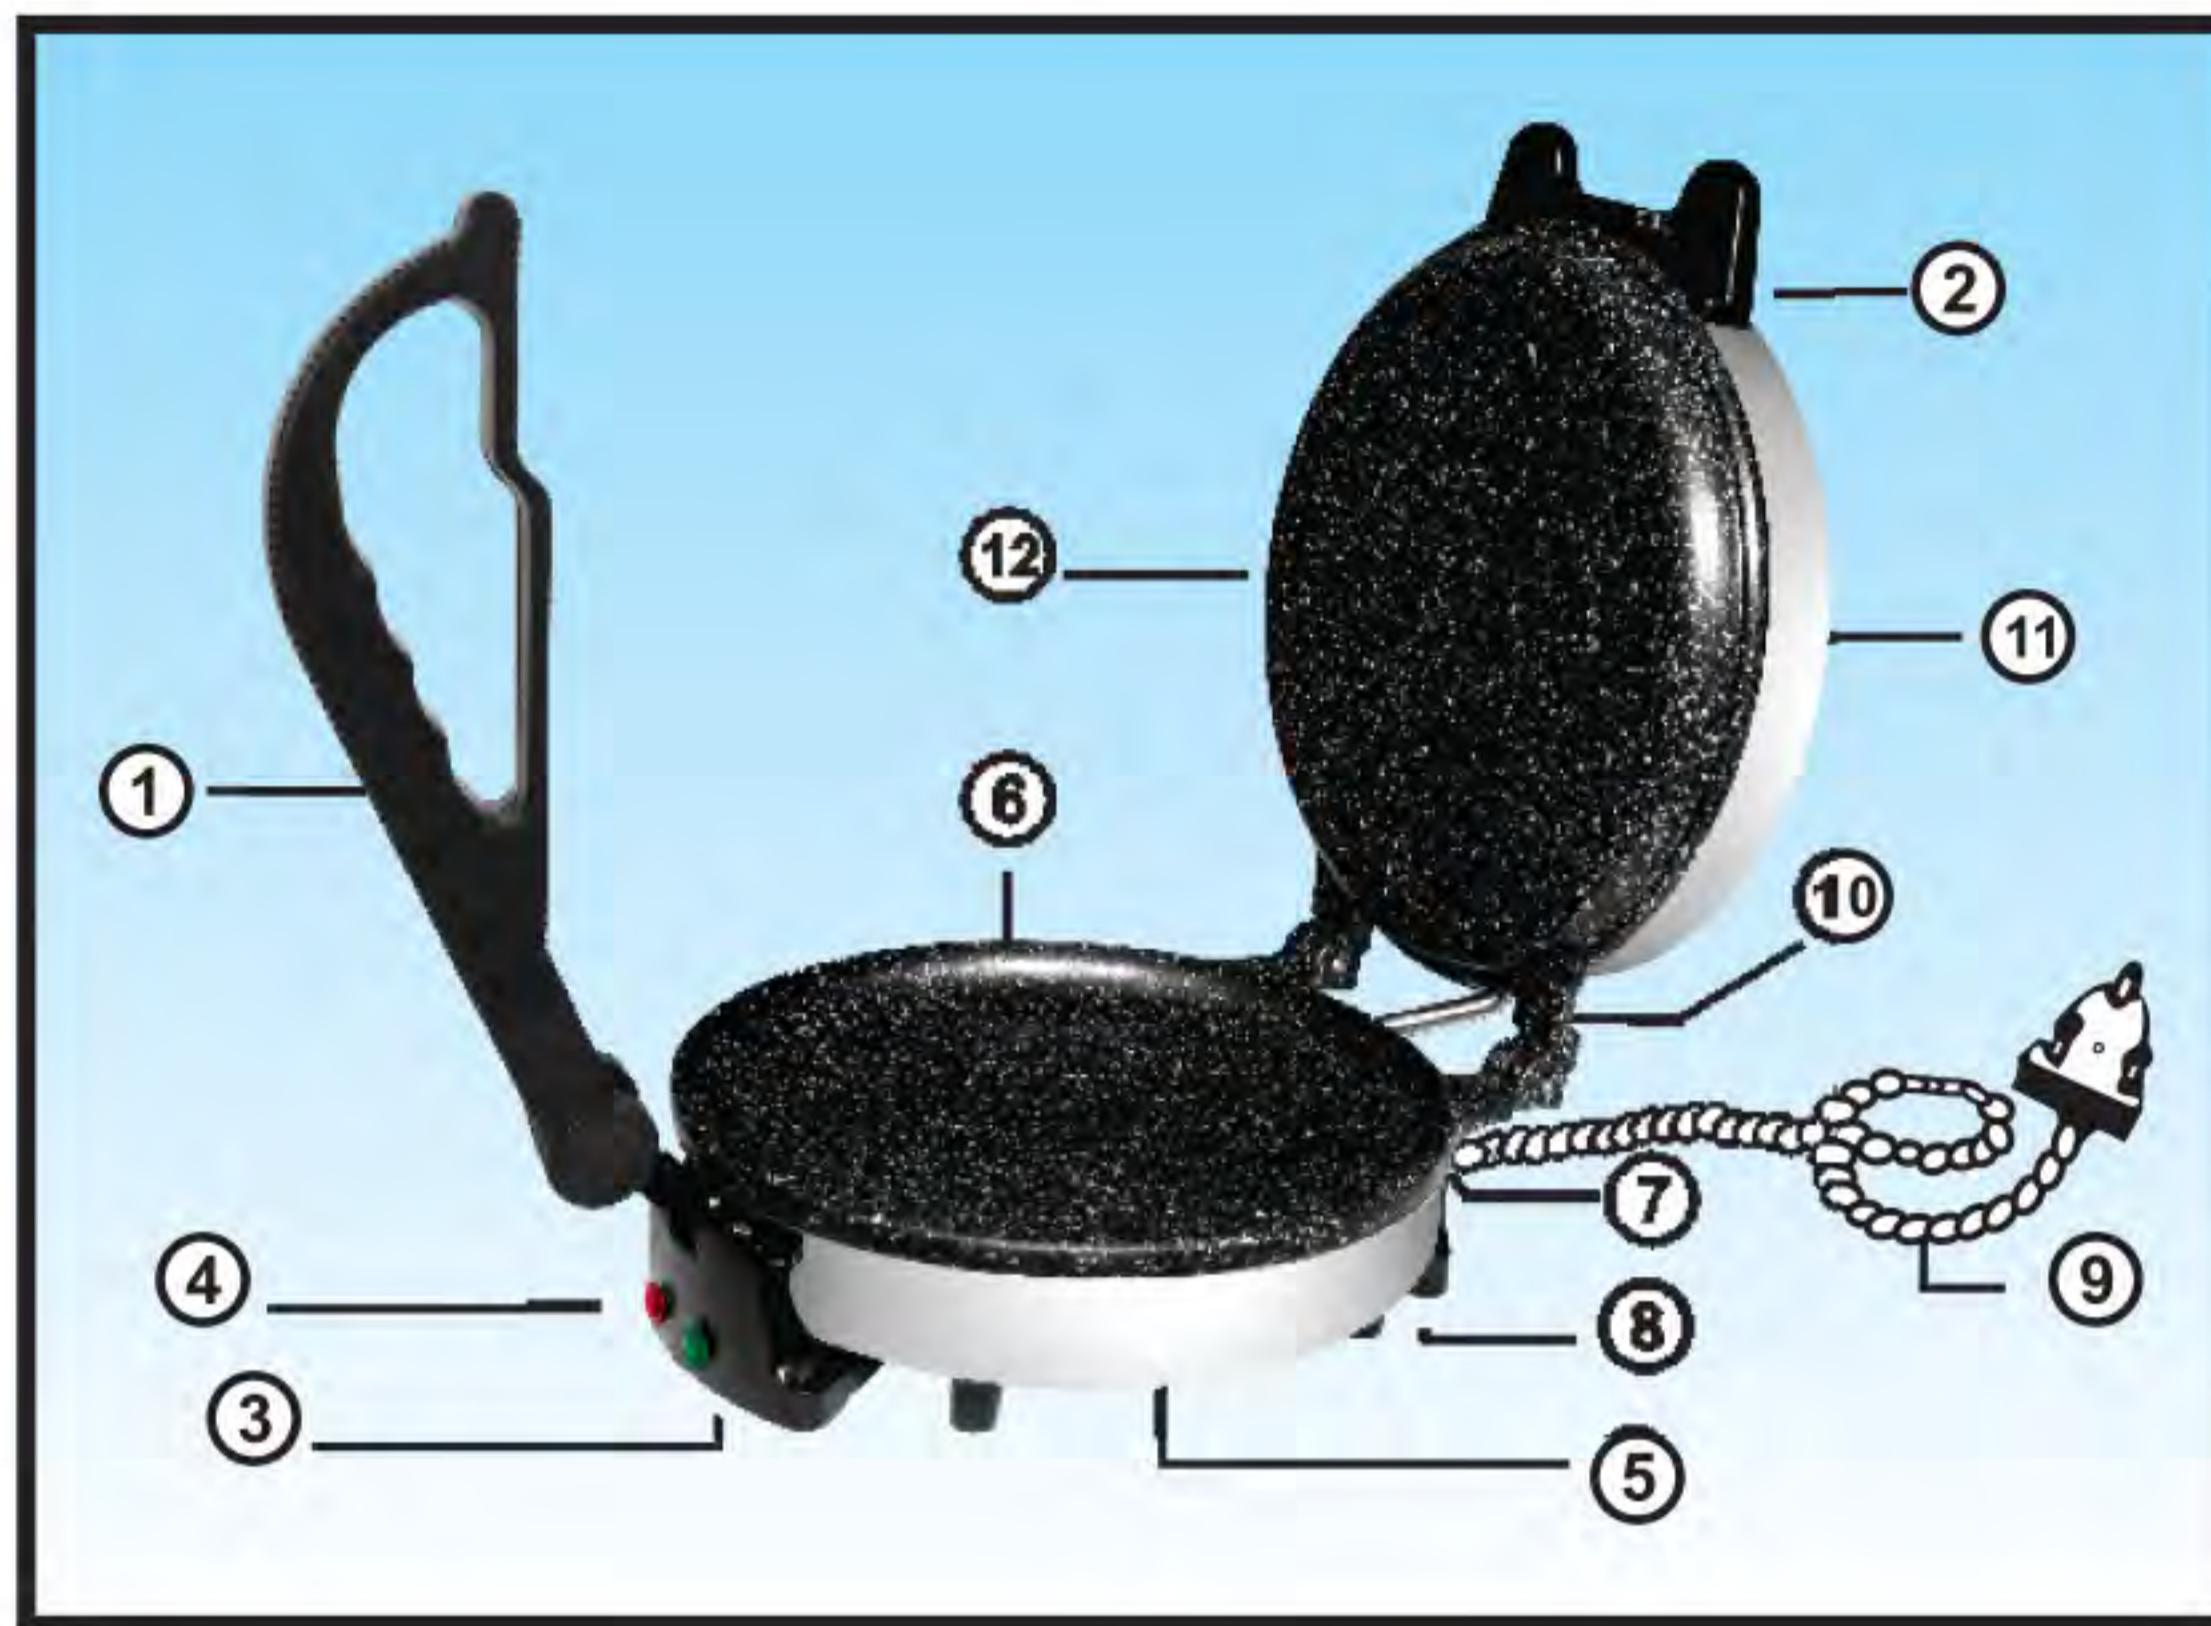

1. Operating Lever
2. Lifting Handle
3. Indicator Housing
4. Indicator Lamp
5. Bottom Cover
6. Non-Stick heater Plate with heating coil (bottom)
7. Housing for Inlet wires
8. Legs
9. Main Cord
10. Coil Spring (Protective)
11. Top Cover
12. Non-Stick heater plate with heating coil (top)

TECHNICAL DATA

1. MODEL : INSTANT CHAPATI MAKER
2. VOLTAGE : 220/240 AC. 50-60Hz
3. WATTS : 1000 W approx.



IMPORTANT SAFEGUARDS / PRECAUTIONS

BEFORE USING YOUR CHAPATI MAKER, ALWAYS FOLLOW THE UNDERMENTIONED BASIC SAFETY PRINCIPLES :-

1. Read all instructions carefully and understand the procedures fully before operating the appliance.
2. Proper earthing must be done before operating the appliance.
3. Never immerse the appliance or any other part thereof in water or any other liquid. For cleaning use damp cloth on outer surfaces only.
4. Close supervision is necessary when children are near you while operating the appliance. Keep them away from the appliance.
5. Do not touch hot surfaces while the appliance is in use. Specially designed handles are provided to operate the appliance.
6. Do not use the appliance out doors or on wet surfaces.
7. Do not let the mains lead hang over the edge of table or Counter or touch hot surfaces.
8. Do not place the appliance on or near a hot surface or any other heat generating object.
9. Always disconnect the appliance when not in use.
10. While disconnecting the appliance, grip the mains plug and pull from the electric supply socket. Never pull by cord.
11. Never leave the appliance unattended while in operation. Close supervision is required when it is in use.
12. Do not operate the appliance if it is found damaged / non-operative in any manner. Do not attempt to open/repair the appliance or allow any unauthorized person to do so. Send the appliance to the dealer from whom you brought the appliance.

BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging.
- Clean the Cooking Plates by wiping with a sponge or cloth dampened in warm water. **DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ONTO THE COOKING SURFACE.**
- Dry with a cloth or paper towel.
- Lightly coat the cooking plates with a little cooking oil or a cooking spray.

NOTE: When your Roti Maker is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.



HOW TO USE

- Close the roti maker and plug it into the wall outlet, you will notice that the red power light and the green ready light will go on, indicating that the roti maker has begun preheating.
- It will take approximately 3 to 5 minutes to reach baking temperature. The red power light will remain on until you unplug your roti maker. When the green light goes off, the roti maker is ready for use.
- Open the roti maker and make each piece of about 1/2" diameter (please remember to keep kneaded dough out for at least 30 minutes before you start making roties). Slightly flatten it and place it off centre towards the higher on the bottom plate of your Roti Maker.
- Quickly and firmly press down, closing the upper plate. Hold for less than a second. Open it immediately and centre it. Leave it this way for about 15-20 seconds.
- Turn the roti and in about 20-25 seconds you'll see air bubbles begin to appear on the top surface of the roti.
- When this happens turn the roti to the side and very gently shut the Upper plate. The roti will start puffing up on both sides and in a few seconds is ready for serving.
- Once the roti is cooked, open the Roti Maker and carefully remove it from the Roti Maker with a non-metallic utensils. Never touch the cooking surface with sharp, pointy or metal objects. This could damage the non-stick surface.





STEP-1 : Measure Flour as per your convenience and add 1-2 tbsp oil to knead the dough.

STEP-2 : Don't bind the dough tightly, knead it little loose.

STEP-3 : Make sure you make dough balls immediately, the size of the ball should be smaller than your fist or as per your convenience.

STEM-4: After letting the dough balls sit for 10-15 mins. you can heat up your roti maker to make lovely soft rotis.

NOTE: If you want to make khakhras, place a dough ball about one inch diameter, slightly off centre, towards the rear of the bottom plate. Close the upper plate and gently press down the lever. After a few seconds, when the bottom surface of the roti acquires a reddish colour, turn it around close the upper plate and gently press down the lever. Both sides of the roti will redden equally and take the shape of a khakhra. This method of making khakhras can be modified to suit your personal tastes.


IMORTANTTIPS :

If the roti is found to be of an irregular shape, check whether the dough contains enough water. If not, add some more water and mix well. For best results avoid pressing the lever again & again. Even that can be the cause of a broken roti.

A Quality Product Of

**CG CHAUDHARY[®]
GROUP**

Touching life everyday

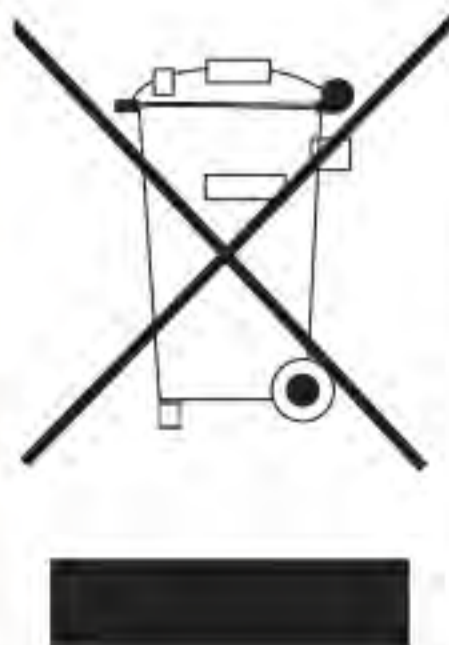

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.