260*190mm

20180819

A Quality Product
Of
CG CHAUDHARY GROUP®
Touching life everyday

NEPAL'S No. 1 ELECTRONICS BRAND

CG inspiring Life SINCE 1987

USER MANUAL

CG-RC10N7

CG CHAUDHARY GROUP®

How to Use

1 Measure rice with the provided measuring cup. Wash rice in a separate bowl until water becomes relatively clear.	✦Do not wash rice in the rice cooker pan because inner pan may be damaged.
2 Take out **inner** cooker, put food and water in it. The height of food and water can not exceed 4/5 of that of internal cooker; **The height of food that easily expansive in water** can not more than 3/5 of that of internal cooker. The height of food and water can not less than 1/5 of that of internal cooker.	✦ Adjust quantity of water to your personal taste. ✦ Soak rice in water for approximately 30 minutes.
3 Place the pan in the body. Make sure that the pan is directly in contact with the heating plate by turning it slightly from right to left until it seats properly	✦ Wipe the surface of the pan before use. If it is wet, It may cause noise while cooking. It may also damage the unit.
4 Close the outer lid.	✦ If the outer lid is not securely closed, cooking will be affectsd. ✦ Do not open the outer lid when in use.
5 Plug in, the "power lamp" will light.Then press down the switch lightly. The "cook" lamp will turn on to show that the cooking process has started with power lamp on. 	✦Do not plug in until you get ready to cook. Otherwise rice may be ruined. ✦If the pan is not in the cooker, cooking will not begin.
6 When rice is done, the switch will pop up. The "cook" lamp turns off and "warm" lamp lights to indicate that the "warm" function is working.	✦ The "warm" function continues until unplugged.

Schematic diagram of circuit

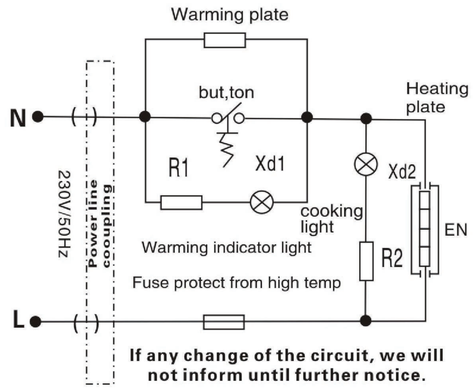

If any change of the circuit, we will not inform until further notice.

Parts Identification

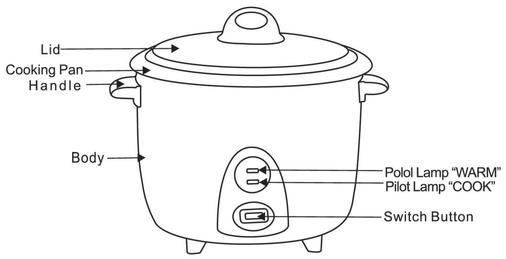

Accessories

Measuring Cup

Rice Scoop

Electrical outlet

7 After the switch pops up. Leave the lid closed for at least 15 minutes to steam rice.	✦ According to different individual taste, choose suitable time for warming soup or porridge.
8 Fluff the rice.	✦ The rice may be sticky if it is not fluffed.
9 Unplug after use.	

How to Clean

Unplug before cleaning.

1. Soak the pan in lukewarm water and wash with a sponge.
2. Wipe the body with a damp cloth. Do not immerse the unit in water.
3. Do not use abrasive cleaners or steel wool. Clean with non–metal brush or sponge.

To Keep Cooked Rice Warm And Tasty

. Wash rice with water quickly and thoroughly. Bran is removed during washing.
. Using keep warm function for more than 12 hours may cause discoloration or an
. Objectionable order in the rice.
. Do not keep warm once rice cooled.
. Do not mix cold rice after cooking.
. Utensils left in the pan during keep warm may affect the smell and taste of rice.

Specifications

MODEL NO.	CAPACITY	POWER	RATING VOLTAGE	FREQUENCY
CGRC10N7	1. 0L	400W	220V	50Hz
CGRC15N7	1. 5L	500W	220V	50Hz
CGRC18N7	1. 8L	700W	220V	50Hz
CGRC22N7	2. 2L	900W	220V	50Hz
CGRC28N7	2. 8L	1000W	220V	50Hz

Before you plug in,make sure that the voltage indicated in the name-plate is the same as your local supply.

Caution

✦ Plug into properly wired wall outlet, before you plug in,make sure the voltage of the unit is the same as your local supply.

✦ Be sure to keep the cooker out of the reach. Of children,especiall when cooking rice.

✦ Do not immerse the unit in water.

✦ Set the unit on astable surface. Do not expose to water, high humidity or hit sources. Do not use the pan directly on open flame.

✦ Paper located between the pan and the heating plate should be removed before use.

✦ Do not cover the lid with a cloth, The lid may defrom or change color.

✦ Always keep the outside bottom of the pan and the heating plate clean and dry.Any foreign matter between them will cause your cooker to malfunction.

✦ Do not tilt rice–cooker on its edge or place it upsides down with its power supply plug connected,as this may cause damage.When tilting or placing the rice–cooker upside down, make sure to disconnect the power supply plug.

✦ The cooker becomes hot when in use. Do not cover the lid with your hand or place your face directly over the steam coming from the cooker.

If the supply cord is damaged, we must use either the special–purpose flexible cord or the special–purpose module which bought from its factory or the service department to replace.