Parts N ames

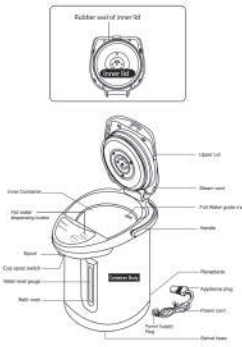

Note: Diagram differs depending on model.

Precaution

Caution

Do not allow pins or other metal objects to contac t the magne tic appliance plug.
- Contacting metal objects may cause electric shock, a shock circuit, and fire.

Always grasp the power supply plug when unplugging the power cord.
Do not pull the power cord itself.
- Doing so may cause an electric shock, a short circuit, or fire.

Do not attempt to pour hot water while it is boiling or immediately after it has boiled.
- Hot water can spurt out and cause scalds.

Do not place the dispenser on an unstable surface or on surface s that are vulnerable to heat.
- Doing so may cause fire.

Unplug the electrical plug from the outlet when the dispense r is not being used.
- The insulation could become damaged, resulting in injury, burns, electric shock, leakage of electricity, or fire.

To avoid burns, do not touch the steam vent.
- Be especially careful that children do not touch it.

When opening the lid, do not allow the steam to contact your skin.
- Hot steam can scald your skin.

Notes

Do not turn on the dispenser if it is empty.
- Doing so may cause fire or other damage.

Be careful when using the dispens- er on a kitche n stora ge sh elf or within 30 cm of a wall or furniture.
- If steam contacts the ceiling, wall, or other items, it may cause discoloration or distortion of nearby objects or surfaces.

Do not use the dispens er near a heat so urce.
- Doing so may cause fire or other damage.

Do not drag the dispenser .
- It can scratch the surface of the table or counter.

Do not put ice, soup , milk, instan t foods, tea, or any other substance except water into the dispenser .
- Boiling water containing a tea bag, tea leaves, or instant foods can cause the water to foam and the contents of the pot to spurt out and burn you. It can also result in foaming and decomposition of the food as well as peeling of the non-stick fluorine-coating on the container.

In addition, foreign objects may obstruct the internal electrical pump, preventing water from being dispensed.

How to use

Before using your dispenser for the first time, boil and discard one full pot of water by following the instructions below. You may notice a smell of plastic for the first time when you use the dispenser. This is normal and will fade over time.

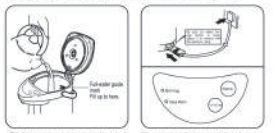

Fit the container by pouring cold water from another container such as a jug.

When you plug in the power cord, the water will automatically begin to boil.
While the water is boiling, avoid burns as follows:

- Do not open the upper lid.
- Do not touch the steam coming out of the steam vent.
- Do not place a dish or any other items over the steam vent.
- Do not dispense hot water while the water is boiling.

About the auto cut-off (Feature)

When there is danger of damage from overheating, the auto cut-off feature will operate. The auto cut-off feature operates in the following cases:

- When the power cord is plugged in but the container is empty of water.
- When the power cord is plugged in and all the hot water has been used, or the lid has been removed so that water can be added.

If the dispenser has been shut off automatically, unplug the power cord from the electrical outlet, wait for the container to cool, and add water.

- Be sure the container filter is in place.
- Do not fill the container directly from the tap, as overflowing water could cause a short circuit or electric shock.
- Do not add water above full-water guide mark on the inside of the container. Hot water may overflow, causing scalds.
- Be careful not to splash water on the control panel or on the outside of the dispenser. Splashing water can damage the dispenser and cause an electric shock.

Close the lid.

- Carefully close the lid by pushing down until you hear a click.
- You may hear a rattling sound when opening and closing the lid. This is normal.

How to use

To dispense water By Manual pumping

By pushing cup against spout switch



By pressing the dispense button on the control panel

Precaution

Condition	Cause	Remedy
Water does not boil.	Plug is not plugged into electrical outlet.	Check the plug connections.
	Metal object or dirt is on the tip of the magnetic plug.	Clean the tip of the magnetic plug.
Water does not become hot or does not pour properly .	Plug is not plugged into electrical outlet.	Check the plug connections.
	Mineral deposits or the like have accumulated on the inner container and container filter.	Clean the container and the container filter.
	Hot water does not pour properly a few minutes after boiling.	Steam may remain for some time after boiling. Please wait.
Water pours out by itself.	Check that the pot is not filled beyond the full-water guide mark.	Pour out the excessive amount of water until it is below the full-water guide mark.
White deposits appear in the hot water .	Deposits are formed by the chemical content of the water you are using. They are not ha rmful to consump- tion. Deposits are the result of the boiling water fluorine-coating.	Clean the inner container by boiling water mixed with citric acid.
Loud boiling sounds can be heard.	Excessive accumulation of mineral deposits on the bottom of the water container can cause loud boiling sounds.	
Hot water has a disagreeable odor .	The odor of chlorine may be detectable in your tap water.	
	A mild plastic odor may be noticeable in a new dispenser. This odor will fade over time.	

WARNING - THIS APPLIANCE MUST BE EARTHED

IMPORT ANT

The wires in this mains lead are coloured in accordance with the following code.
Green-and-yellow Earth Brown Live Blue Neutral
If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.
The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol or coloured green or green-and-yellow. The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured BLACK.
The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured RED or Brown.

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

A Quality Product Of CG Touching life everyday

CG सबे

USER MANUAL

CG-HP4501

CG CHAUDHARY GROUP
Touching life everyday

How to use

Re-boil key When the dispenser is in keep-warm mode, use this key to re-boil the water.

Press the re-boil button.
The boil lamp will light.

Once the water has been boiled, the keep-warm lamp will light.

Reboiling a full container takes about 5 minutes (at a room temperature of 20 degrees).
- Before re-boiling, make sure the water level is above the refill mark.
- The re-boil key has no effect right after the water has boiled.

When not in use

1. Unplug the dispenser and detach the lid.
2. Pour out remaining water

- To avoid getting scaled, always detach the lid before pouring out the hot water.
- Empty the container at least once a day. Water left in the container can cause rusting, unpleasant odor, and accumulation of mineral deposits.)
- Do not allow water to splash onto the operation panel, hinge, handle or power supply plug. (Splashed water can cause burns or damage the dispenser.)
- Be careful not to lose the container filter.

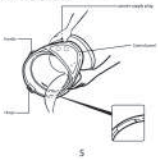
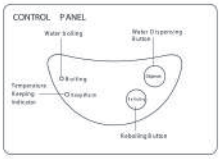
Parts N ames